

[Manuals.plus](#) /

› [Ankuwa](#) /

› Ankuwa KS-5529C 3-in-1 Rechargeable Cordless Window Vacuum Squeegee Instruction Manual

Ankuwa KS-5529C

Ankuwa KS-5529C 3-in-1 Rechargeable Cordless Window Vacuum Squeegee

MODEL: KS-5529C

Brand: Ankuwa

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Ankuwa KS-5529C 3-in-1 Rechargeable Cordless Window Vacuum Squeegee. This device is designed to simplify cleaning tasks by combining spraying, wiping, and vacuuming functions into one lightweight, rechargeable unit. It is suitable for various smooth surfaces including windows, mirrors, shower glass, tiles, and countertops.

PRODUCT OVERVIEW AND COMPONENTS

The Ankuwa KS-5529C is a versatile cleaning tool. Familiarize yourself with its components before use.



Figure 1: Main unit and included accessories.

Included Components:

- Main Window Vacuum Unit (with integrated spray and vacuum functions)
- 10-inch Squeegee Blade Attachment
- Microfiber Cleaning Cloth (x2)
- Rubber Gloves
- USB Charging Cable
- Instruction Manual (this document)

Key Features:

- **3-in-1 Functionality:** Sprays, wipes, and vacuums simultaneously.
- **Powerful Suction:** 1500Pa suction power for streak-free results.
- **Large Water Tank:** Designed for fewer refills (85ml clean water, 100ml dirty water).
- **Long Battery Life:** 2500mAh battery provides up to 50 minutes of continuous operation.

- **IPX7 Waterproofing:** Suitable for various wet cleaning tasks.
- **Compact & Lightweight:** Easy to handle, operate with one button, and store.

SETUP AND ASSEMBLY

1. Charging the Battery:

Before first use, fully charge the device. The indicator light will turn red during charging and green when fully charged. Charging typically takes approximately 3 hours.

1. Connect the USB charging cable to the charging port located at the bottom of the main unit.
2. Plug the other end of the USB cable into a suitable power adapter (not included).
3. The indicator light will illuminate red, indicating charging is in progress.
4. Once fully charged, the indicator light will turn green. Disconnect the charger.



Figure 2: Charging process showing red (charging) and green (fully charged) indicator lights.

2. Assembling the Squeegee Head:

1. Align the suction head and suction nozzle with the main unit.
2. Push firmly until you hear a clicking sound, indicating it is securely attached.



Figure 3: Attaching the squeegee head to the main unit.

3. Filling the Water Tank:

Open the water tank cap located at the top of the unit and fill with clean water or a suitable glass cleaning solution (low-foam recommended). Close the cap securely.

Your browser does not support the video tag.

Video 1: Demonstrates how to fill the water tank and operate the spray function.

OPERATING INSTRUCTIONS

The Ankuwa KS-5529C simplifies window cleaning with its integrated functions.

Step-by-Step Cleaning Process:

1. **Prepare the Cleaning Cloth:** Attach a damp microfiber cleaning cloth to the squeegee head.
2. **Spray:** Press the spray button on the handle to apply water or cleaning solution to the surface.
3. **Wipe:** Use the cleaning cloth on the squeegee head to wipe the surface, loosening dirt and grime.
4. **Vacuum:** Press the power button to turn on the vacuum function. Move the squeegee slowly and evenly across the wet surface. The powerful suction will absorb the dirty water, leaving the surface streak-free.



Figure 4: Visual guide for using the 3-in-1 cleaning functions.

Multi-Surface Application:

This device is suitable for various smooth surfaces:

- Windows and Glass Doors
- Mirrors
- Shower Glass
- Smooth Countertops
- Tiles
- Car Windows



Figure 5: The device's versatility across multiple surfaces.

Your browser does not support the video tag.

Video 2: Demonstrates the 3-in-1 functionality on a window, showing spraying, wiping, and vacuuming.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the lifespan of your device.

1. Emptying the Dirty Water Tank:

After each use, empty the dirty water tank to prevent odors and maintain hygiene.

1. Locate the drain plug on the dirty water tank.
2. Open the plug and tilt the unit to drain the dirty water into a sink.
3. Close the drain plug securely.



Figure 6: Instructions for emptying the dirty water tank.

2. Cleaning the Microfiber Cloths:

The microfiber cloths are washable and reusable. Remove them from the squeegee head and wash them by hand or machine according to fabric care instructions.

3. Scraper Strip Care:

To ensure optimal performance and prevent damage, maintain the scraper strip. Rinse the scraper strip after each use to keep it clean. Ensure the glass surface (or similar) remains moist and smooth before cleaning to prevent uneven wiping or scratches.

TROUBLESHOOTING

If you encounter any issues with your Ankuwa KS-5529C, please refer to the following common solutions:

- **Uneven Wiping or Scratches:** This may occur if the scraper strip is worn or dirty, or if the surface is dry. Rinse the scraper strip thoroughly and ensure the surface is adequately moistened before cleaning.
- **Reduced Suction Power:** Check if the dirty water tank is full and needs emptying. Ensure all parts are correctly assembled and sealed.
- **Device Not Turning On:** Verify that the battery is fully charged. If the issue persists after charging, contact customer support.

For further assistance, please refer to the Warranty & Support section.

SPECIFICATIONS

Feature	Detail
Brand	Ankuwa
Model Number	KS-5529C
Color	Blue
Product Dimensions	4.33"W x 11.11"H
Item Weight	0.98 Kilograms (2.16 pounds)

Blade Material	Rubber
Handle Material	Plastic
Blade Length	10 Inches
Suction Power	1500Pa
Battery Type	1 Lithium Ion battery (included)
Battery Capacity	2500mAh
Runtime	Up to 50 minutes
Waterproof Rating	IPX7
UPC	093337568534

WARRANTY AND SUPPORT

Warranty Information:

Your Ankuwa KS-5529C comes with a **12-month limited warranty**. This warranty covers manufacturing defects and ensures the product meets quality standards.

Customer Support:

For any questions, concerns, or warranty claims, please contact Ankuwa customer service. We are committed to providing prompt and high-quality assistance.

Email: ANKUWAKITCHEN@outlook.com

Phone: +1 (743) 200-7828 (8:00 AM - 5:00 PM PST, Monday - Friday)

Please contact us immediately if you encounter any problems. We aim to reply within 24 hours.



Ankuwa: Making cleaning effortless and efficient.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question