

[Manuals.plus](#) /

› [MONTERAL](#) /

› MONTERAL Washing Machine Emergency Drain Plug - Installation and Use Manual

MONTERAL 2808740200, C00864990, 768452331

MONTERAL Washing Machine Emergency Drain Plug - Installation and Use Manual

INTRODUCTION

This manual provides essential information for the installation, use, and maintenance of your MONTERAL Washing Machine Emergency Drain Plug. Please read these instructions carefully before use to ensure proper function and longevity of the product.

PRODUCT OVERVIEW AND COMPATIBILITY

The MONTERAL Emergency Drain Plug is designed to seal the emergency drain hose of various washing machine models. It serves as a crucial component for manual water drainage when required.

Compatible Original Codes:

- 2808740200
- C00864990
- 768452331

Known Compatible Brands: Beko, Arçelik, Arctic, Altus, Blomberg, Whirlpool, Bauknecht, Indesit, Smeg.

2808740200

C00864990

768452331



beko



smeg

arçelik

Bauknecht

Blomberg®

Whirlpool
CORPORATION

ALTUS



Image: The MONTERAL emergency drain plug shown alongside logos of various compatible washing machine brands and their respective original part codes, indicating broad compatibility.

FEATURES

- **Durable Material:** Constructed from resistant plastic, ensuring longevity and reliability.
- **Chemical Resistance:** Designed to withstand exposure to common household chemicals found in detergents and cleaning agents.
- **Moisture Resistance:** Impervious to water and humidity, preventing degradation over time.
- **Temperature Fluctuation Resistance:** Maintains integrity across a temperature range of 10-90°C.
- **Secure Fit:** Engineered for a reliable and stable seal, preventing dislodgement during washing machine operation.



REALIZZATO IN PLASTICA RESISTENTE

**RESISTENTE AI PRODOTTI
CHIMICI DOMESTICI**



RESISTENTE ALL'UMIDITÀ

**RESISTENTE AGLI
SBALZI DI TEMPERATURA**



Image: A visual representation of the drain plug, emphasizing its robust construction from resistant plastic and its resilience against humidity, household chemicals, and temperature changes.

INSTALLATION

1. Locate the emergency drain hose on your washing machine. This is typically a small hose located near the main drain pump filter, often behind a service panel at the bottom front of the appliance.
2. Ensure the washing machine is turned off and unplugged from the power supply before proceeding.
3. If there is any water in the drum, prepare a shallow container to collect water that may drain out.
4. Insert the MONTERAL Emergency Drain Plug firmly into the end of the emergency drain hose.
5. Push the plug until it is securely seated and creates a tight seal. No additional tools are required for installation.
6. Verify that the plug is stable and does not move or fall out.



Image: This illustration demonstrates the simple process of inserting the drain plug into the emergency drain hose of a washing machine, highlighting its secure and tool-free installation.

OPERATING PRINCIPLE

The primary function of this plug is to provide a reliable seal for the emergency drain hose. This hose is typically used for manually draining water from the washing machine drum in situations such as a clogged filter, pump malfunction, or during maintenance. When the plug is inserted, it prevents water leakage from this hose during normal washing cycles, even under vibrations and water pressure.

MAINTENANCE

The MONTERAL Emergency Drain Plug requires minimal maintenance. Periodically inspect the plug for any signs of wear, cracks, or damage. Ensure it remains clean and free from debris that could compromise its seal. If any damage is observed, replace the plug to maintain optimal performance and prevent leaks.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Water leakage from the emergency drain hose.	Plug not inserted correctly or fully.	Ensure the plug is pushed firmly and completely into the hose until a secure seal is achieved.
Water leakage from the emergency drain hose.	Plug is damaged or worn.	Inspect the plug for cracks or damage. Replace with a new MONTERAL Emergency Drain Plug if damaged.
Plug is difficult to insert or remove.	Minor debris or residue in the hose opening.	Clean the inside of the emergency drain hose opening. Apply a small amount of water or mild soap to the plug for easier insertion/removal if needed.

SPECIFICATIONS

- **Brand:** MONTERAL
- **Color:** White
- **Material:** Resistant Plastic
- **Length:** 24 mm (0.94 inches)
- **Diameter:** 16 mm (0.63 inches)
- **Temperature Rating:** 10-90°C (50-194°F)
- **Specific Uses:** Household washing machine emergency drain hose sealing.
- **Included Components:** 1x Washing Machine Emergency Drain Plug
- **Country of Origin:** China

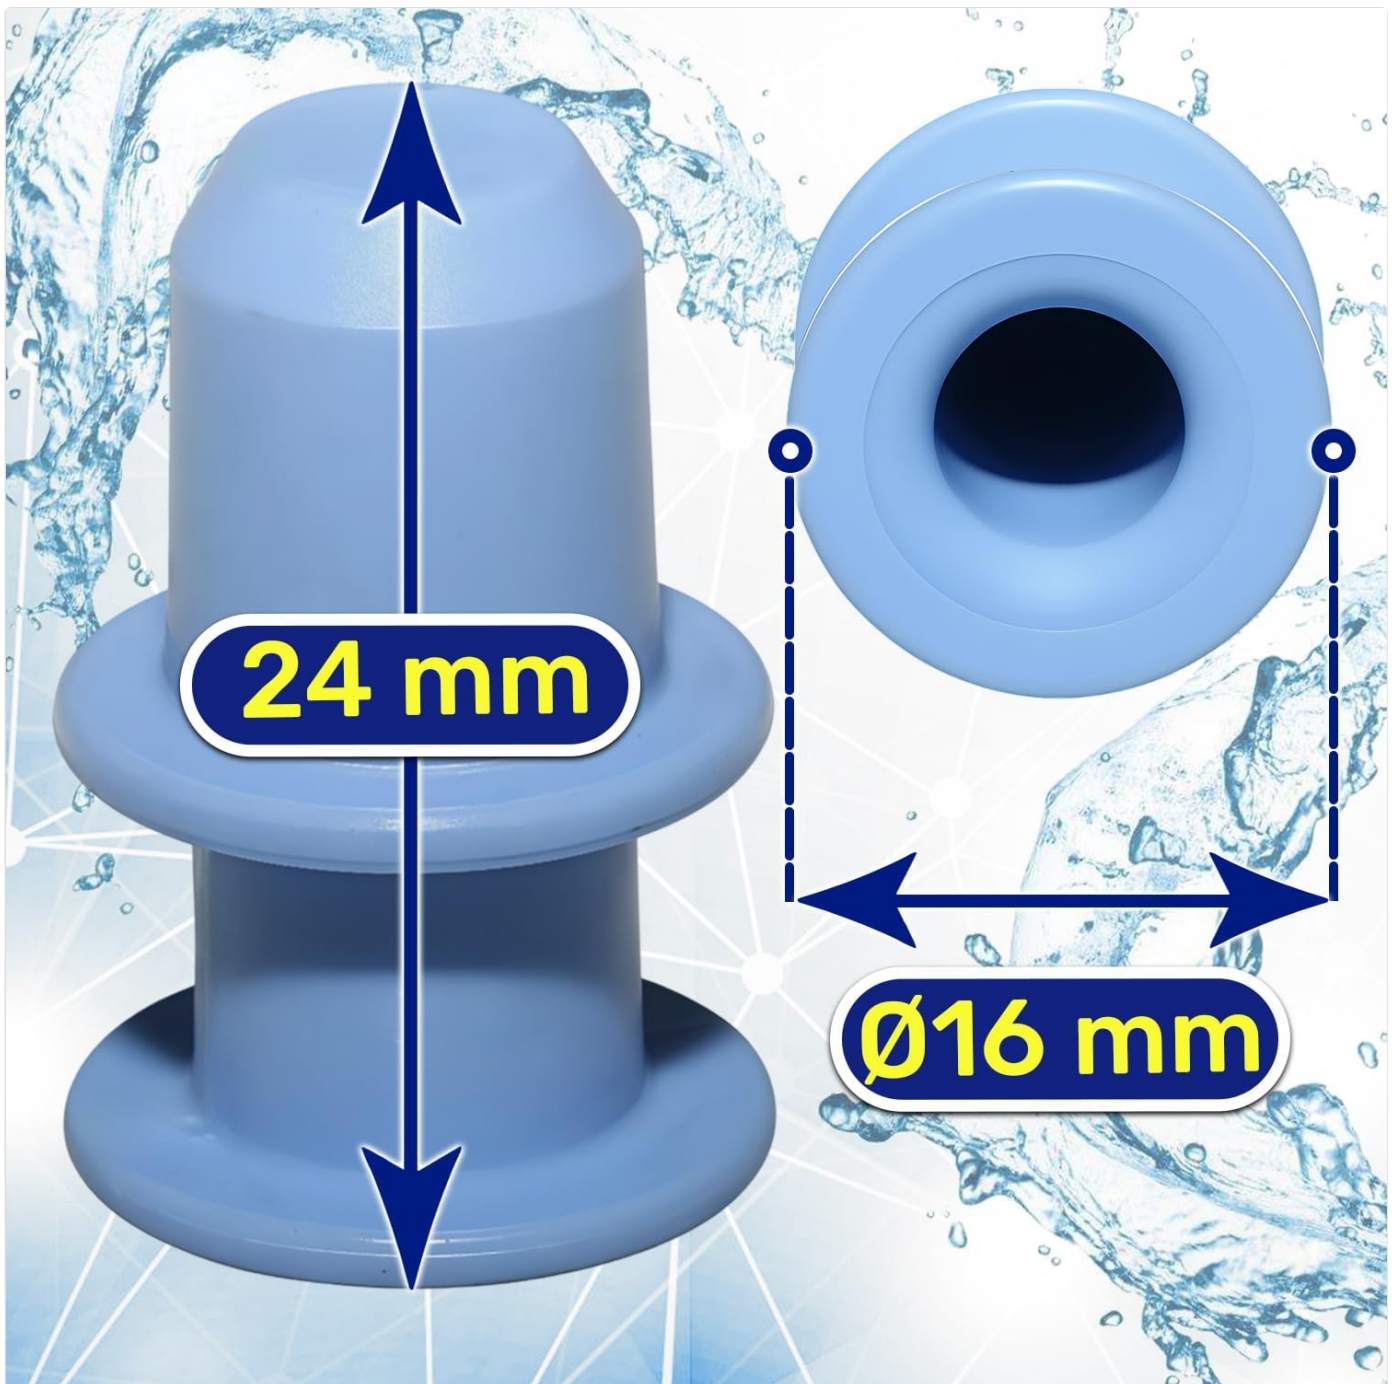


Image: A detailed view of the drain plug with precise measurements, indicating a length of 24 mm and a diameter of 16 mm, crucial for ensuring correct fit.

WARRANTY AND SUPPORT

For information regarding warranty or customer support, please refer to the seller's policies on the platform where the product was purchased or contact MONTERAL directly through their official channels.

