

CLEANmaxx Ultra Fusion B0FJ9QYB8R

CLEANmaxx Ultra Fusion Vacuum Cleaner User Manual

Model: Ultra Fusion (ASIN: B0FJ9QYB8R) | Brand: CLEANmaxx

INTRODUCTION

This manual provides essential information for the safe and efficient operation, maintenance, and troubleshooting of your CLEANmaxx Ultra Fusion Vacuum Cleaner. Please read this manual thoroughly before first use and keep it for future reference.

Safety Instructions

- Always ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not use the appliance with a damaged cord or plug.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not vacuum up water or wet substances, hot ashes, sharp objects, or flammable/explosive materials.
- Unplug the appliance from the power outlet before cleaning or maintenance.
- This appliance is for household use only.

PACKAGE CONTENTS

Please check that all items are present and in good condition:

- CLEANmaxx Vacuum Cleaner Unit
- Flexible Hose
- Telescopic Tube
- 2-in-1 Floor Nozzle
- Mini Upholstery Nozzle
- 2-in-1 Combination Accessory (Crevice Tool & Brush)
- Reusable Dust Bag



Image: All included accessories and main unit. This image displays the complete set of components: the main vacuum cleaner unit, flexible hose, telescopic tube, 2-in-1 floor nozzle, mini upholstery nozzle, 2-in-1 combination accessory, and the reusable dust bag.

PRODUCT OVERVIEW

Familiarize yourself with the main parts of your vacuum cleaner:

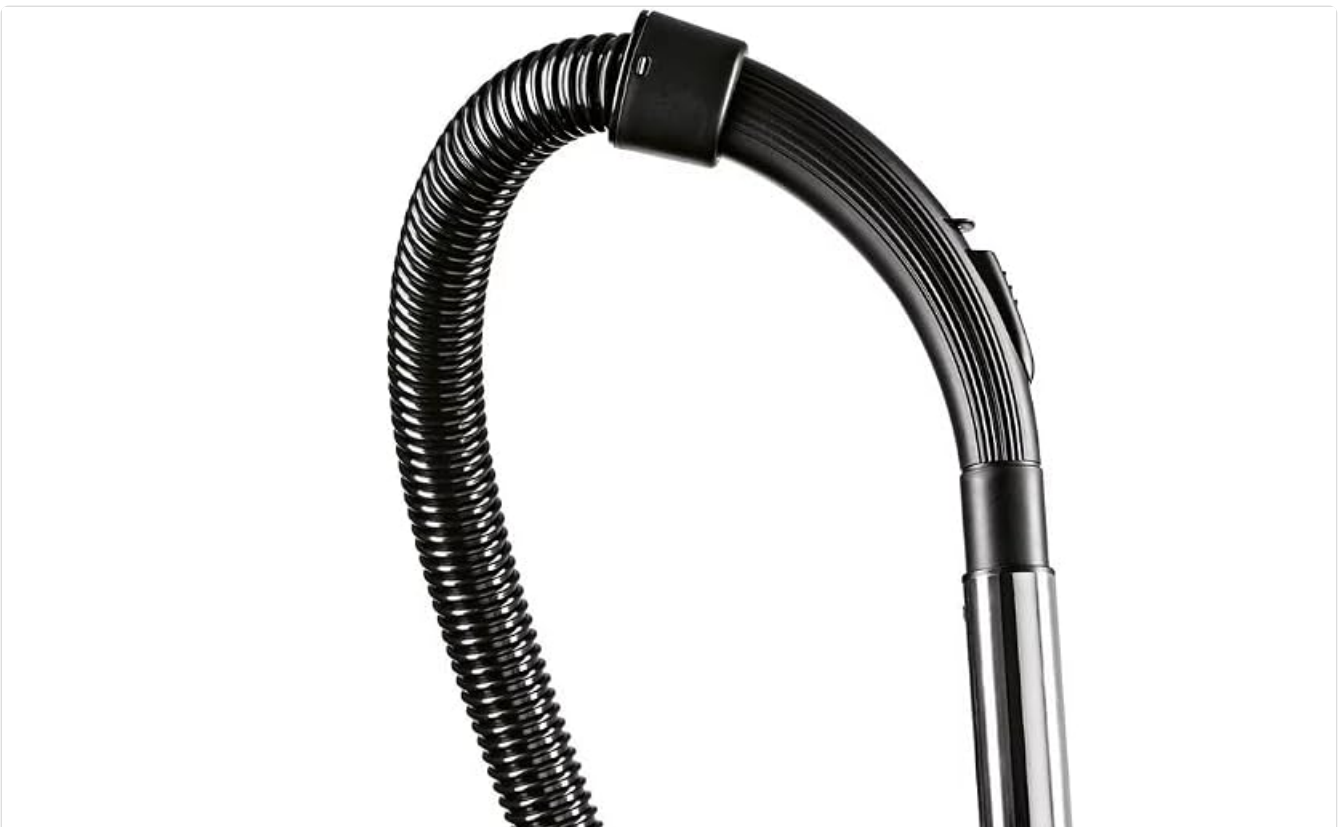




Image: Assembled CLEANmaxx Vacuum Cleaner. This image shows the vacuum cleaner fully assembled with the flexible hose and telescopic tube attached, ready for use.



Image: Side view of the vacuum cleaner. This image provides a clear side view of the main vacuum cleaner unit, highlighting its compact design and wheels.



Image: Dust bag compartment open. This image shows the top cover of the vacuum cleaner lifted, revealing the internal compartment where the reusable dust bag is inserted.

SETUP

1. **Attach the Flexible Hose:** Insert the end of the flexible hose into the suction inlet on the main vacuum cleaner unit until it clicks securely into place.
2. **Assemble the Telescopic Tube:** Connect the telescopic tube to the handle end of the flexible hose. Adjust the length of the telescopic tube by pressing the locking button and extending or retracting it to your desired height (up to 70 cm). Release the button to lock it in position.
3. **Attach the Desired Nozzle:**
 - For general floor cleaning, attach the **2-in-1 Floor Nozzle** to the end of the telescopic tube.
 - For upholstery, attach the **Mini Upholstery Nozzle**.
 - For crevices or dusting, attach the **2-in-1 Combination Accessory**.
4. **Insert the Reusable Dust Bag:** Open the dust bag compartment cover on the vacuum cleaner. Ensure the reusable dust bag is properly inserted and aligned with the bag holder. Close the compartment cover securely.



Image: Handling the reusable dust bag. This image shows hands demonstrating how to hold and prepare the reusable dust bag for insertion or removal.

5. **Connect to Power:** Unwind the power cord and plug it into a suitable electrical outlet.

OPERATING INSTRUCTIONS

1. **Power On/Off:** Press the ON/OFF button located on the main unit to start or stop the vacuum cleaner.
2. **Vacuuming:** Guide the nozzle over the surface to be cleaned. The powerful 800W motor and 15 kPa suction ensure effective dirt removal.
3. **Using Different Nozzles:**
 - The **2-in-1 Floor Nozzle** is versatile for both hard floors and carpets.
 - The **Mini Upholstery Nozzle** is ideal for cleaning sofas, chairs, and other fabric surfaces.
 - The **2-in-1 Combination Accessory** can be used as a crevice tool for narrow gaps or with its brush attachment for dusting delicate surfaces.
4. **Cable Rewind:** After use, unplug the vacuum cleaner from the power outlet. Press the automatic cable rewind button (if present, usually indicated by a cable icon) to retract the power cord into the unit.
5. **Storage:** The vacuum cleaner can be stored upright or horizontally. The telescopic tube can be detached or collapsed for compact storage.

MAINTENANCE

Regular maintenance ensures optimal performance and extends the life of your vacuum cleaner.

Emptying and Cleaning the Reusable Dust Bag

1. Unplug the vacuum cleaner from the power outlet.
2. Open the dust bag compartment cover.
3. Carefully remove the reusable dust bag.



Image: The reusable dust bag. This image shows the reusable dust bag, highlighting its design for easy emptying and cleaning.

4. Empty the dust and debris into a waste bin.
5. If necessary, the dust bag can be gently hand-washed with mild soap and water. Ensure it is completely dry before reinserting to prevent mold or damage to the vacuum cleaner.
6. Reinsert the clean, dry dust bag into the compartment and close the cover securely.

Filter Cleaning

Your vacuum cleaner is equipped with filters to protect the motor and ensure clean exhaust air. Check and clean these filters regularly (e.g., every 3-6 months or as needed, depending on usage).

1. Unplug the vacuum cleaner.
2. Locate the motor protection filter (usually near the dust bag compartment) and the exhaust filter (often at the back of the unit).
3. Remove the filters and tap them gently to dislodge dust. If washable, rinse them under cold running water.

4. Allow filters to air dry completely before reinserting them. Do not use a hairdryer or other heating devices.

Exterior Cleaning

Wipe the exterior of the vacuum cleaner with a soft, damp cloth. Do not use abrasive cleaners or solvents.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Vacuum cleaner does not turn on.	Not plugged in; no power at outlet; power button not pressed.	Check power cord connection; test outlet with another appliance; press power button firmly.
Low suction power.	Dust bag full; filters clogged; hose/nozzle blocked.	Empty/clean dust bag; clean/replace filters; check hose/nozzle for obstructions.
Unusual noise.	Obstruction in hose/nozzle; motor issue.	Check for and remove obstructions. If noise persists, contact customer support.
Overheating and shutting off.	Clogged filters; full dust bag; prolonged use.	Empty/clean dust bag; clean filters. Allow unit to cool down for 30 minutes before restarting.

SPECIFICATIONS

Feature	Detail
Brand	CLEANmaxx
Model	Ultra Fusion
Power	800 Watts
Suction Power	Up to 15 kPa
Cable Length	5 meters
Operating Radius	Approx. 6.5 meters
Dust Collection	Reusable Dust Bag
Color	Black
Product Dimensions (L x W x H)	33 cm x 25 cm x 20 cm
Item Weight	4.2 Kilograms

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the warranty card included with your product or contact the CLEANmaxx customer service department. Keep your proof of purchase for any warranty claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJ9QYB8R>

More documents and user manuals: <https://manuals.plus/>