



[Manuals.plus](#) /

› [Bright Starts](#) /

› Bright Starts Disney Princess My Size Potty Training Toilet (Model 17555-000) Instruction Manual

## Bright Starts 17555-000

# Bright Starts Disney Princess My Size Potty Training Toilet (Model 17555-000)

Instruction Manual

## PRODUCT OVERVIEW

The Bright Starts Disney Princess My Size Potty Training Toilet is designed to support your child's potty training journey. This 2-in-1 system functions as a standalone floor potty and a removable seat for an adult toilet. It features engaging sounds, a princess theme, and practical design elements for ease of use and cleaning.



Image: A toddler happily using the Bright Starts Disney Princess My Size Potty Training Toilet.

## SETUP AND ASSEMBLY

The Bright Starts Disney Princess My Size Potty Training Toilet is designed for easy assembly. Follow these steps to set up your potty:

1. **Unpack Components:** Carefully remove all parts from the packaging. Ensure all components are present: the potty base, the removable seat, the inner pot, the tank with sound unit, and the princess-themed backrest.
2. **Install Batteries:** Locate the battery compartment on the underside of the tank unit. Insert 2 AAA batteries (included) according to the polarity indicators. Secure the battery cover.
3. **Attach Tank:** Align the tank unit with the back of the potty base and firmly press down until it clicks into place.
4. **Place Inner Pot:** Insert the pink inner pot into the main opening of the potty base.
5. **Attach Removable Seat:** Place the pink removable seat on top of the inner pot, ensuring it sits securely.
6. **Apply Stickers:** Use the included princess-themed stickers to personalize the potty. Place them on the designated areas or as

desired.

## Transitioning to an Adult Toilet

The removable seat can be used on most standard adult toilets (round, elongated, and D-shape) to aid in the transition to a full-sized toilet.

1. **Remove Potty Seat:** Lift the pink removable seat from the potty base.
2. **Place on Adult Toilet:** Carefully place the removable seat directly onto the adult toilet seat. Ensure it is stable and secure before your child uses it. The built-in handles provide additional security for your child.



Image: Demonstrating how to place the removable potty seat onto an adult toilet.

## OPERATING INSTRUCTIONS

Using the Bright Starts Disney Princess My Size Potty is straightforward and designed to encourage your child.

1. **Using the Floor Potty:** Place the assembled potty on a flat, stable surface. Encourage your child to sit on the seat. The built-in

splash guard helps prevent messes.

2. **Activating Sounds:** After successful use, encourage your child to press the flushing handle on the side of the tank. This will activate realistic flushing sounds, cheering, and melodies to celebrate their achievement.
3. **Using the Removable Seat:** Once your child is comfortable with the floor potty, transition to using the removable seat on an adult toilet as described in the Setup section.

## MAINTENANCE AND CLEANING

---

Regular cleaning ensures hygiene and extends the life of your potty training toilet.

1. **Emptying the Pot:** After each use, carefully lift the removable inner pot from the potty base. Dispose of the contents in an adult toilet.
2. **Cleaning the Pot:** Wipe the inner pot clean with a damp cloth and mild soap. Rinse thoroughly with water.
3. **Cleaning the Seat and Base:** Wipe down the removable seat and the potty base with a damp cloth and mild soap. Ensure all surfaces are clean and dry before reassembly.
4. **Drying:** Allow all components to air dry completely before reassembling the potty.



Image: Removing the inner pot for easy cleaning.

## TROUBLESHOOTING

Issue	Possible Cause	Solution
No sound or distorted sound from the tank.	Low or dead batteries.	Replace the 2 AAA batteries in the tank unit. Ensure correct polarity.
Potty seat is unstable on adult toilet.	Incorrect placement or incompatible toilet shape.	Ensure the removable seat is properly aligned and securely placed on the adult toilet seat. Verify that your adult toilet is a standard round, elongated, or D-shape.
Difficulty removing or inserting the inner pot.	Misalignment or debris.	Ensure the pot is aligned correctly with the grooves in the base. Check for any obstructions.

## SPECIFICATIONS

---

- **Model Number:** 17555-000
- **Product Dimensions:** 15.55 x 10.51 x 11.81 inches
- **Item Weight:** 2.22 pounds
- **Material Type:** Plastic
- **Material Composition:** 98.7% Plastic, 0.5% Metal, 0.8% Electronic Parts
- **Batteries Required:** 2 AAA batteries (included)
- **Recommended Age:** 18 months+
- **Weight Capacity:** Up to 50 pounds

## SAFETY INFORMATION

---

- Always supervise your child during potty training.
- Ensure the potty is placed on a flat, stable surface to prevent tipping.
- When using the removable seat on an adult toilet, ensure it is securely fitted before use.
- Keep small parts (like batteries) out of reach of children.
- Do not use abrasive cleaners or harsh chemicals, as they may damage the product.

## WARRANTY AND SUPPORT

---

This product is covered by a standard manufacturer's warranty against defects in materials and workmanship. For specific warranty details or support, please refer to the product packaging or contact Bright Starts customer service. A 90-day return policy may apply through your retailer.