

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Tool Shop](#) /

› Tool Shop 4-Volt Cordless Power Cutter Model 2410261 User Manual

Tool Shop 2410261

Tool Shop 4-Volt Cordless Power Cutter Model 2410261 User Manual

INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and care of your Tool Shop 4-Volt Cordless Power Cutter, Model 2410261. Please read all instructions carefully before using the tool and retain this manual for future reference.

SAFETY INFORMATION

WARNING: Read all safety warnings, instructions, illustrations, and specifications provided with this power tool. Failure to follow all instructions listed below may result in electric shock, fire, and/or serious injury.

- Always wear appropriate personal protective equipment, including safety glasses, when operating the power cutter.
- Keep hands and fingers away from the cutting blade during operation.
- Ensure the safety switch is engaged when the tool is not in use to prevent accidental starts.
- Do not operate the tool in wet or damp conditions.
- Keep the work area clean and well-lit. Cluttered or dark areas invite accidents.
- Store the tool out of reach of children.
- Use only the charger and blade specified by the manufacturer.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Tool Shop 4-Volt Cordless Power Cutter
- Rechargeable Lithium-ion Battery (integrated)
- Cutting Blade (pre-installed or included separately)
- USB Charger and Cable



Image: The Tool Shop 4-Volt Cordless Power Cutter and its accessories as they appear in the retail package.

SETUP

Charging the Battery

1. Connect the USB cable to the charging port on the power cutter.
2. Plug the USB charger into a standard electrical outlet.
3. Allow the battery to charge fully before first use. The charging indicator light will change color or turn off when charging is complete (refer to specific indicator details in the quick start guide if provided).

Blade Installation/Check

The cutting blade is typically pre-installed. Before first use, ensure the blade is securely in place and free from damage. If replacement is necessary, refer to the blade replacement section (if applicable, or consult manufacturer support).

OPERATING INSTRUCTIONS

General Operation

1. **Prepare the Material:** Ensure the material to be cut is laid flat and stable.
2. **Activate the Cutter:** Press and hold the safety switch, then press the power trigger to start the blade rotation.
3. **Begin Cutting:** Gently guide the rotating blade along the desired cutting line. Apply steady, even pressure. Do not force the tool.
4. **Finish Cutting:** Release the power trigger and then the safety switch to stop the blade.



Image: The power cutter in action, demonstrating its use on cardboard.

Suitable Materials

This power cutter is designed for cutting various lightweight materials, including:

- Fabric
- Plastic (thin sheets)
- Carpet
- Cardboard
- Gift Wrap

Note: Avoid cutting hard or thick materials that may damage the blade or motor.

MAINTENANCE

Cleaning

After each use, ensure the tool is powered off and unplugged. Use a dry cloth to wipe down the body of the cutter. Carefully remove any material debris from around the blade area. Do not use harsh chemicals or abrasive cleaners.

Blade Care

The blade is designed to be self-sharpening. However, if cutting performance diminishes, inspect the blade for wear or damage. Replace the blade if it becomes dull or chipped. Always use genuine replacement blades to ensure optimal performance and safety.

TROUBLESHOOTING

- **Tool does not turn on:** Ensure the battery is fully charged. Check that both the safety switch and power trigger are engaged correctly.
- **Poor cutting performance:** The blade may be dull or dirty. Clean the blade or consider replacing it. Ensure you are cutting appropriate materials.
- **Tool stops during operation:** The battery may be low, or the tool may be overheating due to prolonged use or cutting overly thick material. Allow the tool to cool down and recharge the battery.

If issues persist, contact customer support.

SPECIFICATIONS

Feature	Specification
Brand	Tool Shop
Model Number	2410261
Power Source	4-Volt Rechargeable Lithium-ion Battery (AC/DC charging)
Item Weight	0.93 Pounds
Product Dimensions (L x W)	9"L x 2"W
Cutting Width	1.5 Inches
Included Components	USB Charger and cable

WARRANTY INFORMATION

This product is covered by a limited manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For technical assistance, replacement parts, or warranty inquiries, please contact Tool Shop customer service. Contact information can typically be found on the product packaging or the manufacturer's official website.