

[Manuals.plus](#) /

› [Energizer](#) /

› Energizer GEZ3900E Portable Generator User Manual

Energizer GEZ3900E

Energizer GEZ3900E Portable Generator User Manual

Model: GEZ3900E | Brand: Energizer

1. INTRODUCTION

This manual provides essential information for the safe operation, maintenance, and troubleshooting of your Energizer GEZ3900E Portable Generator. Please read this manual thoroughly before operating the generator to ensure proper use and to prevent injury or damage.

The Energizer GEZ3900E portable generator is a reliable and practical solution for consistent power supply. Equipped with a 208 cc engine and a maximum output of 3.0 kW, this generator is designed to provide backup power for homes, job sites, camping, or emergency situations. Its compact and robust design facilitates transport and storage, ensuring it is always ready for use. The efficient manual start system ensures quick and easy ignition. The 15-liter fuel tank provides up to 10 hours of continuous operation. It also includes a voltage regulator to protect electrical devices from fluctuations, delivering clean and stable power.

2. SAFETY INFORMATION

WARNING: Failure to follow these safety instructions could result in serious injury or death.

- **Carbon Monoxide Hazard:** Generators produce carbon monoxide, a colorless, odorless, poisonous gas. Operate generators outdoors only, far away from windows, doors, and vents.
- **Electrical Shock Hazard:** Never operate the generator in wet conditions. Ensure all electrical connections are dry and properly insulated. Do not touch the generator with wet hands.
- **Fire Hazard:** Fuel is highly flammable. Refuel in a well-ventilated area with the engine off and cool. Do not smoke near the generator. Keep flammable materials away from the generator.
- **Hot Surfaces:** The generator's engine and muffler become very hot during operation and remain hot for some time after shutdown. Avoid touching hot surfaces to prevent burns.
- **Read the Manual:** Always read and understand the entire instruction manual before operating the generator.
- **Children and Pets:** Keep children and pets away from the generator at all times.
- **Proper Grounding:** Ensure the generator is properly grounded according to local electrical codes.

3. COMPONENT IDENTIFICATION

Figure 3.1: Front View of the Generator. This image displays the overall front view of the Energizer GEZ3900E portable generator, highlighting its robust red frame, black fuel tank, and control panel on the side.

Figure 3.2: Side View of the Generator. This image shows the side profile of the generator, including the engine, exhaust, and one of the wheels, providing a perspective on its compact design.

Figure 3.3: Generator Dimensions. This diagram illustrates the key dimensions of the generator: 63 cm length, 50 cm width, and 60 cm height, useful for transport and storage planning.

Figure 3.4: Control Panel. A close-up of the control panel, showing the engine switch, DC 12V 8.3A output, AC 220V output, voltmeter, and circuit breakers. This is where you manage the generator's power output and start/stop functions.

Figure 3.5: Engine and Exhaust. This image provides a detailed view of the generator's 208cc engine and the exhaust system, emphasizing the robust construction and components.

Figure 3.6: Key Features. This graphic highlights important features such as Automatic Voltage Regulation (AVR), low noise and vibration levels, and a low oil sensor for enhanced safety and performance.

Figure 3.7: Fuel Tank and Run Time. This image indicates the 15-liter fuel tank capacity and the impressive 10-hour run time at maximum power, ensuring extended operation.

4. SETUP

1. **Unpacking:** Carefully remove the generator from its packaging. Inspect for any shipping damage.
2. **Wheel and Handle Assembly (if required):** Attach the wheels and handles according to the assembly instructions provided in the separate assembly guide (if applicable).
3. **Add Engine Oil:**
 - Locate the oil fill cap/dipstick.
 - Add the recommended engine oil (refer to specifications for type and capacity) until it reaches the upper mark on the dipstick. Do not overfill.
4. **Add Fuel:**

- Ensure the generator is on a level surface and the engine is off and cool.
- Open the fuel cap and carefully pour unleaded gasoline into the fuel tank. Do not fill above the fuel filter screen.
- Securely close the fuel cap.

Caution: Do not use E85 or any other fuel containing more than 10% ethanol. Do not mix oil with gasoline.

5. **Grounding:** Connect a grounding wire from the generator's grounding terminal to a suitable ground source, as per local electrical codes.

5. OPERATING INSTRUCTIONS

5.1 Starting the Generator (Manual Start)

1. **Placement:** Ensure the generator is placed outdoors in a well-ventilated area, away from any structures or combustible materials.
2. **Fuel Valve:** Turn the fuel valve to the "ON" position.
3. **Engine Switch:** Turn the engine switch (often labeled "ON/OFF" or "START/STOP") to the "ON" position.
4. **Choke Lever:** If the engine is cold, move the choke lever to the "CHOKE" or "CLOSED" position. If the engine is warm, the choke may not be necessary.
5. **Pull Starter:** Grasp the recoil starter handle firmly and pull it slowly until you feel resistance, then pull quickly and smoothly. Repeat until the engine starts.
6. **Choke Adjustment:** Once the engine starts, gradually move the choke lever to the "RUN" or "OPEN" position as the engine warms up.
7. **Warm-up:** Allow the generator to run for a few minutes to warm up before connecting any electrical loads.

5.2 Connecting Electrical Loads

1. Ensure the generator is running stably.
2. Plug your electrical devices into the appropriate AC 220V or DC 12V outlets on the control panel.
3. Do not overload the generator. Refer to the specifications for maximum wattage.

5.3 Stopping the Generator

1. Disconnect all electrical loads from the generator.
2. Allow the generator to run for a few minutes without load to cool down.
3. Turn the engine switch to the "OFF" position.
4. Turn the fuel valve to the "OFF" position.

6. MAINTENANCE

Regular maintenance is crucial for the longevity and safe operation of your generator. Always perform maintenance with the engine off and cool, and disconnect the spark plug wire to prevent accidental starting.

6.1 Maintenance Schedule

Item	Before Each Use	Every 25 Hours / Monthly	Every 100 Hours / Annually
------	-----------------	--------------------------	----------------------------

Item	Before Each Use	Every 25 Hours / Monthly	Every 100 Hours / Annually
Check Engine Oil Level	✓		
Inspect Air Filter	✓	Clean	
Check Fuel Level	✓		
Change Engine Oil			✓
Inspect Spark Plug			Clean/Adjust
Clean Spark Arrestor			✓

6.2 Storage

If storing the generator for more than 30 days:

- Drain the fuel tank and carburetor.
- Change the engine oil.
- Remove the spark plug and pour a small amount of engine oil into the cylinder. Pull the recoil starter a few times to distribute the oil, then reinstall the spark plug.
- Store in a clean, dry, well-ventilated area.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Engine will not start	No fuel Engine switch OFF Low oil level Choke not set correctly Spark plug issue	Add fresh fuel Turn engine switch ON Add engine oil Adjust choke Clean or replace spark plug
No power output	Circuit breaker tripped Overload Loose connections	Reset circuit breaker Reduce load Check and secure connections
Engine runs rough	Stale fuel Dirty air filter Spark plug issue	Drain and refill with fresh fuel Clean or replace air filter Clean or replace spark plug
Low oil sensor light on	Low oil level	Add engine oil to the correct level

8. SPECIFICATIONS

Feature	Specification
Model	GEZ3900E
Brand	Energizer

Feature	Specification
Engine Type	208 cc, 4-stroke
Max Power Output	3.0 kW
Fuel Type	Unleaded Gasoline
Fuel Tank Capacity	15 Liters
Run Time (at max power)	Up to 10 hours
Start System	Manual (Recoil)
Voltage Regulation	Automatic Voltage Regulator (AVR)
Output Voltage	AC 220V, DC 12V 8.3A
Weight	45 kg (99.2 lbs)
Dimensions (L x W x H)	63 cm x 50 cm x 60 cm (approx.)
Recommended Use	Commercial, Home Backup, Outdoor Activities

9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the warranty card included with your product or visit the official Energizer website. Keep your purchase receipt as proof of purchase for warranty claims.

Manufacturer: MARTINEZ MENENDEZ MARIA DEL PILAR

For further assistance, please contact Energizer customer service.

© 2025 Energizer. All rights reserved.

This manual is subject to change without notice.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJBFYKRY>

More documents and user manuals: <https://manuals.plus/>