

eKids RA-550

eKids Ms Rachel Kids Karaoke Machine Instruction Manual

Model: RA-550

INTRODUCTION

This manual provides essential instructions for the safe and effective operation of your eKids Ms Rachel Kids Karaoke Machine, Model RA-550. This portable Bluetooth speaker with a wired microphone and built-in music is designed for children aged 18 months and up. Please read this manual thoroughly before use and retain it for future reference.

PRODUCT FEATURES

- **Bluetooth Connectivity:** Wirelessly connect to any compatible device to stream audio.
- **Built-in Music:** Over 20 pre-loaded songs, including popular tunes like 'Hop Little Bunnies', 'Bingo', 'I'm So Happy', 'ABC', 'Old MacDonald', 'Wheels on the Bus', and 'Can You Say Mama'.
- **Wired Microphone:** Includes a real working microphone for singing along.
- **USB Audio Player:** Expand your music library by connecting a USB drive (not included) to play your favorite songs.
- **Headphone Jack:** Allows for private listening without disturbing others.
- **Portable and Rechargeable:** Features a built-in handle and rechargeable battery for on-the-go entertainment.

Ms.
Rachel™

Real Working
Microphone!



Bluetooth®
Stream Audio/Content



ENJOY 20+ SONGS FROM MS. RACHEL'S HIT VIDEOS

1. I'm So Happy
2. Hop Little Bunnies
3. Wheels on the Bus
4. Old MacDonald
5. Bubble Bubble Pop
6. I Love a Rainbow
7. Bingo
8. Big Feelings
9. Phonics
10. Looby Loo
11. Three Hungry Ants
12. Up and Down
13. Lazy Lion
14. Skinamarink
15. Caterpillar
16. Row Row Row Your Boat
17. Dino Play
18. Counting to 20
19. Walkin' at the Zoo
20. ABCs
21. Take the Elevator Up
22. Can You Say Mama
23. If You should Meet An Elephant
24. I Could Be Your Friend



Image: The eKids Ms Rachel Kids Karaoke Machine, showcasing its design and a list of over 20 built-in songs available for playback.

PACKAGE CONTENTS

- eKids Ms Rachel Kids Karaoke Machine (Model RA-550)
- Wired Microphone
- USB Charging Cable (18 inches, located inside the cord storage door)

CONTROLS AND INDICATORS



Image: Detailed diagram of the karaoke machine, highlighting the location and function of each button, port, and indicator,

including the microphone, volume controls, power button, USB port, headphone jack, and charging port.

1. **Power ON/OFF Button:** Press and hold to turn the unit on or off.
2. **Microphone ON/OFF Switch:** Controls the microphone's power.
3. **Volume UP/DOWN Buttons:** Adjust the speaker volume.
4. **Microphone Volume Control:** Adjusts the microphone's output level.
5. **Play/Pause Button:** Starts or pauses audio playback.
6. **Forward/Reverse Buttons:** Skips tracks forward or backward.
7. **Bluetooth Pairing Button:** Initiates Bluetooth pairing mode.
8. **Headphone Jack:** For connecting headphones for private listening.
9. **Micro USB Charge Port:** For charging the internal battery.
10. **USB Port for Memory Expansion:** For playing music from a USB drive.
11. **Reset Button:** Small button to reset the unit if needed.
12. **Cord Storage Door:** Compartment for storing the charging cable.
13. **Display Screen:** Shows current mode, track number, and battery level.

SETUP

1. Charging the Unit

Before first use, fully charge the karaoke machine. Locate the Micro USB Charge Port on the back of the unit. Connect the included USB charging cable to this port and the other end to a standard USB power adapter (not included) or a computer's USB port. The display will indicate charging status. A full charge typically takes approximately 3-4 hours.

2. Connecting the Microphone

The wired microphone is permanently attached to the unit. Ensure the microphone ON/OFF switch is in the 'ON' position when you wish to use it.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the **Power ON/OFF Button** located on the top of the unit to turn the karaoke machine on or off. The display screen will light up when the unit is powered on.

2. Bluetooth Pairing

1. Turn on the karaoke machine. The unit will automatically enter Bluetooth pairing mode, indicated by a flashing Bluetooth icon on the display.
2. On your Bluetooth-enabled device (smartphone, tablet, computer), go to the Bluetooth settings and enable Bluetooth.
3. Search for available devices and select "**eKids Ms Rachel Karaoke**" from the list.
4. Once paired, the Bluetooth icon on the karaoke machine's display will stop flashing and remain solid. You can now stream audio wirelessly from your device.

3. Playing Built-in Music

The karaoke machine comes with over 20 built-in songs. To play them, ensure no Bluetooth device is connected or a USB drive is inserted. Use the **Play/Pause**, **Forward**, and **Reverse** buttons to navigate and

play the pre-loaded tracks.

4. USB Audio Playback

To play music from a USB drive:

1. Insert a USB drive (formatted with MP3 audio files) into the **USB Port for Memory Expansion** on the back of the unit.
2. The unit should automatically switch to USB mode. If not, press the mode button (if available, otherwise it should auto-detect).
3. Use the **Play/Pause**, **Forward**, and **Reverse** buttons to control playback.



Image: A child singing with the karaoke machine, illustrating the use of the USB expansion slot for playing custom music.

5. Microphone Usage

Ensure the **Microphone ON/OFF Switch** is in the 'ON' position. Adjust the microphone's volume using the **Microphone Volume Control**. Sing into the microphone while music is playing from Bluetooth, USB, or built-in songs.

6. Volume Control

Adjust the main speaker volume using the **Volume UP/DOWN Buttons** on the unit. The microphone volume is controlled separately.

7. Headphone Use

For private listening, plug any standard 3.5mm headphones (not included) into the **Headphone Jack**. The main speaker output will be muted when headphones are connected.

OFFICIAL PRODUCT VIDEO

Your browser does not support the video tag.

Video: An official product video demonstrating the features and usage of the eKids Ms Rachel Kids Karaoke Machine, including Bluetooth connectivity and microphone functionality.

MAINTENANCE

- **Cleaning:** Wipe the unit with a soft, dry cloth. Do not use abrasive cleaners or solvents.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures. Ensure the microphone cord is neatly stored in its compartment.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge the unit regularly, even if not in use for extended periods.

TROUBLESHOOTING

Problem	Solution
Unit does not turn on.	Ensure the unit is charged. Connect the USB charging cable and allow it to charge for at least 30 minutes before attempting to power on again.
No sound from speaker.	Check the main volume level. Ensure headphones are not plugged into the headphone jack. If using Bluetooth, verify the device volume is up and it is properly paired.
Microphone not working.	Ensure the Microphone ON/OFF switch is in the 'ON' position. Adjust the Microphone Volume Control.
Bluetooth device will not pair.	Make sure the karaoke machine is in pairing mode (flashing Bluetooth icon). Turn off and on Bluetooth on your device. Move your device closer to the karaoke machine. Try resetting the karaoke machine using the reset button.
USB music not playing.	Ensure the USB drive is properly inserted and contains compatible MP3 audio files. Try a different USB drive.

SPECIFICATIONS

Model Number: RA-550

Brand: eKids

Power Source: Battery Powered (Rechargeable)

Connectivity: Bluetooth, USB Type C (charging), USB (audio playback)

Audio Output Mode: Speaker, Headphone Jack

Included Components: Karaoke Machine, Wired Microphone, USB Charging Cable

Dimensions (D x W x H): 9"D x 3.36"W x 8.71"H

Manufacturer: KIDdesigns

WARRANTY AND SUPPORT

This eKids product is covered by a **1 Year Limited Warranty**. For warranty claims, technical support, or further assistance, please contact eKids customer service. Refer to the official eKids website or product packaging for contact information.

For more information, visit the [eKids Brand Store](#).

