

CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set

CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set User Manual

Model: Gravity Electric Salt and Pepper Grinder Set

1. INTRODUCTION

Thank you for choosing the CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set. This manual provides essential information for the safe and efficient use of your new kitchen appliance. Please read these instructions carefully before first use and retain them for future reference.



Figure 1: CIRCLE JOY Gravity Electric Salt and Pepper Grinder Set.

2. PRODUCT OVERVIEW

The CIRCLE JOY Gravity Electric Grinder Set is designed for convenient, one-handed seasoning. It features a rechargeable design, adjustable coarseness, and an integrated LED light for precise seasoning.

Key Features:

- **Upgraded 2-Speed Grinding:** Offers both high-speed for rapid grinding and low-speed for controlled seasoning.
- **Type-C Fast Charging:** Convenient USB-C charging with approximately 2 hours for a full charge.
- **Safety Lock:** Prevents accidental activation, ensuring a clean countertop.
- **Bright LED Light:** Automatically illuminates when in use, providing visibility for accurate seasoning.
- **Adjustable Coarseness:** Easily customize grind size from fine to coarse.
- **Large Capacity:** Designed to hold a substantial amount of salt or pepper (135ml / 4.75 oz).
- **High-Quality Ceramic Core:** Durable and positioned on top to minimize residue.
- **Washable Container:** Easy to clean for hygiene.



Figure 2: Overview of product features.

3. SETUP

3.1 Charging the Grinder

1. Locate the Type-C charging port on the grinder unit.
2. Connect the provided USB-C cable to the grinder and a suitable USB power adapter (not included).
3. A full charge typically takes approximately 2 hours. The LED indicator will show charging status.

RECHARGEABLE ECO-FRIENDLY AND COST-EFFECTIVE



Figure 3: Charging the grinder via USB-C.

3.2 Filling the Grinder

1. Twist the transparent container counter-clockwise to detach it from the main grinder body.
2. Fill the container with your desired seasoning (e.g., salt crystals, peppercorns). Do not overfill.
3. Align the container with the grinder body and twist clockwise to securely lock it in place.

3.3 Adjusting Coarseness

1. Locate the adjustment knob at the bottom of the grinder (where the seasoning exits).
2. Turn the knob clockwise for a finer grind or counter-clockwise for a coarser grind.
3. Test the grind size and adjust as needed to achieve your preferred consistency.

ADJUSTABLE GRINDER

to meet your different needs



ESAY TO ADJUST



Figure 4: Adjusting the grind coarseness.

4. OPERATING INSTRUCTIONS

4.1 Gravity Activation

The grinder is gravity-activated. Simply tilt the grinder upside down to begin grinding. The internal mechanism will automatically start, and the LED light will illuminate.

GRAVITY AUTOMATIC GRINDING

AUTOMATIC SWITCH FOR EFFORTLESS ONE-HANDED USE
INTEGRATED LIGHT TO PREVENT OVER-SEASONING

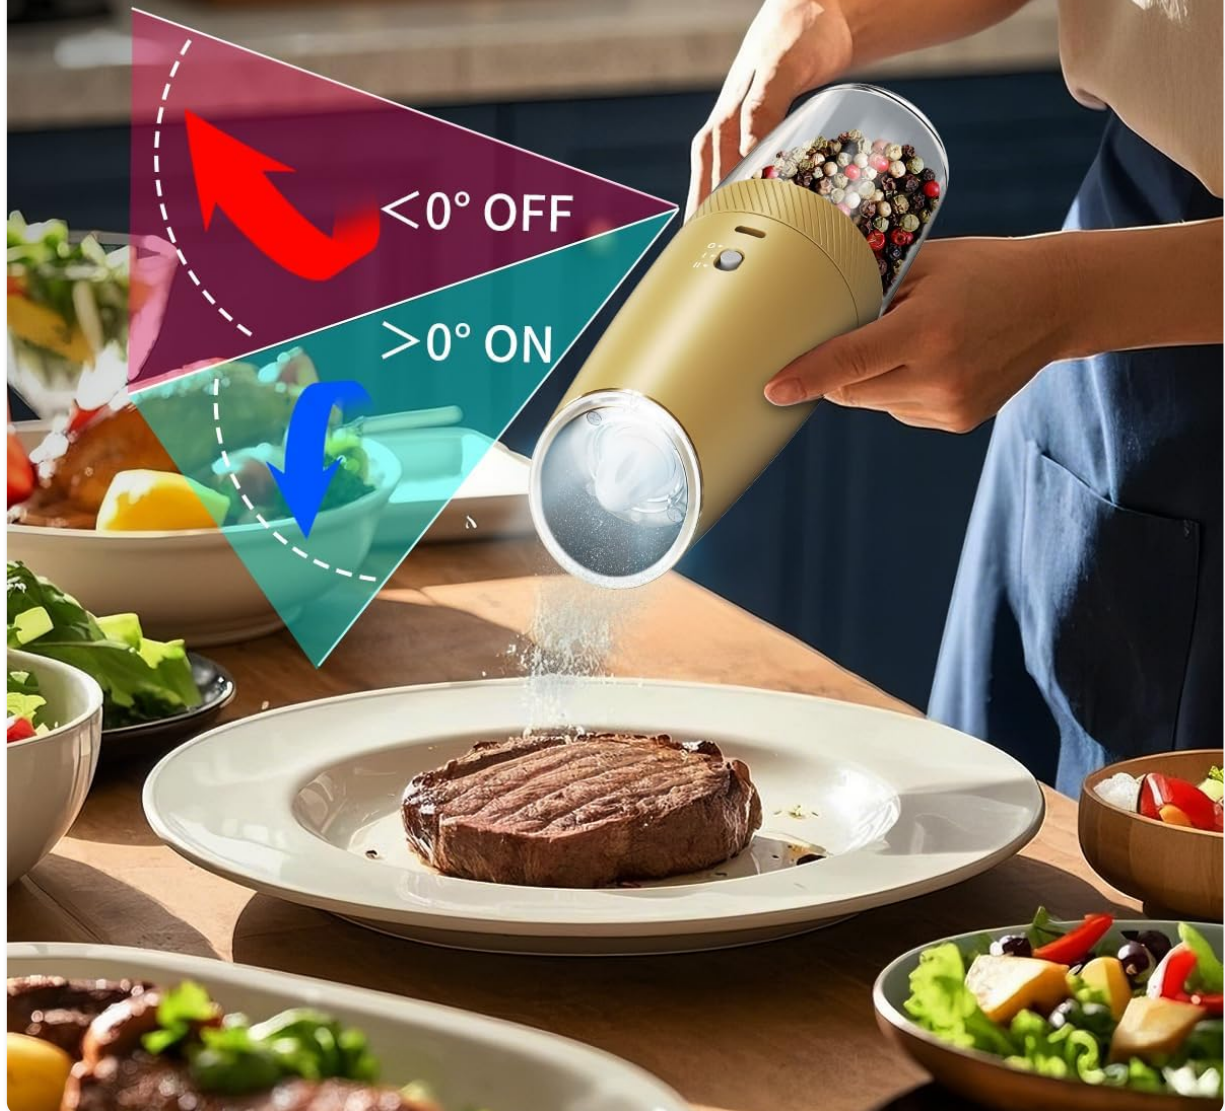


Figure 5: Gravity automatic grinding in action.

4.2 Using 2-Speed Grinding

The grinder features a 2-speed setting for different needs:

- **High Speed:** For rapid grinding, ideal for larger quantities or when you need seasoning quickly.
- **Low Speed:** For more controlled and precise seasoning.

To switch between speeds, use the designated button or switch on the grinder body. Refer to the markings on the device for 'I' (Low Speed) and 'II' (High Speed).



Figure 6: Speed selection switch.

4.3 LED Light Function

The bright white LED light automatically activates when the grinder is tilted for use. This feature allows you to clearly see the amount of seasoning being dispensed, even in low-light conditions, preventing over-seasoning.



Figure 7: Bright LED light for precision.

4.4 Safety Lock

The grinder is equipped with a safety lock mechanism to prevent unintended operation. Ensure the safety lock is disengaged before use and engaged when storing to avoid accidental grinding.

5. MAINTENANCE

Regular cleaning ensures optimal performance and hygiene of your grinder.

5.1 Cleaning the Container

1. Empty any remaining seasoning from the transparent container.
2. Twist the container counter-clockwise to detach it from the grinder body.
3. Wash the container with warm, soapy water. Rinse thoroughly and allow it to dry completely before reattaching.



Figure 8: Washable container for easy cleaning.

5.2 Cleaning the Ceramic Core

The ceramic grinding core is removable for periodic cleaning.

1. Ensure the grinder is empty and detached from the container.
2. Carefully remove the ceramic grinding core by twisting or pulling it out (refer to the diagram for specific removal method).
3. Brush off any accumulated seasoning residue from the ceramic core. You may use a small brush or dry cloth. Do not wash the electronic parts with water.
4. Ensure the ceramic core is completely dry before reassembling.



Figure 9: Removable and washable ceramic core.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Grinder not operating when tilted.	Low battery or no charge. Safety lock engaged. Seasoning jammed.	Ensure the grinder is fully charged. Disengage the safety lock. Clear any blockages in the grinding mechanism.
LED light not illuminating.	Low battery or no charge.	Charge the grinder fully.
Inconsistent grind size.	Coarseness setting needs adjustment.	Adjust the coarseness knob at the bottom of the grinder.
Grinder stops unexpectedly.	Low battery. Overload protection activated.	Charge the grinder. If seasoning is too hard or mechanism is blocked, clear it and restart.

7. SPECIFICATIONS

Feature	Detail
Brand	CIRCLE JOY
Model	Gravity Electric Salt and Pepper Grinder Set
Operation Mode	Automatic (Gravity-activated)
Grinding Speeds	2-Speed (High/Low)
Charging Type	USB Type-C
Material	Gold (Likely Plating Or Accents)
Item Weight	1.59 pounds
Package Dimensions	8.78 x 5.39 x 2.72 inches

Feature	Detail
Recommended Uses	Kitchen

8. WARRANTY AND SUPPORT

CIRCLE JOY rechargeable salt and pepper grinder set offers a 1-year after-sale service and a 60-day satisfaction guarantee. If you encounter any issues or have questions, please contact customer support for assistance.

- **Warranty:** 1-year after-sale service.
- **Satisfaction Guarantee:** 60-day satisfaction guarantee.
- **Contact:** Please email customer support for any issues.