

Saneen WD300

Saneen 8K Digital Camera WD300 User Manual

Model: WD300 | Brand: Saneen

PRODUCT OVERVIEW

The Saneen 8K Digital Camera (Model WD300) is designed for capturing high-resolution photos and videos. It features an 88MP photo sensor, 8K video recording capabilities, an 18X digital zoom, and a 3-inch 180° rotatable flip screen. Integrated Wi-Fi allows for easy file transfer and webcam functionality. This camera is suitable for various photography and videography needs, including vlogging and live streaming.

PACKAGE CONTENTS

Upon unboxing, verify that all items listed below are present:

- Digital Camera Body & Lens
- USB Cable (for charging and data transfer)
- 2 x 1500mAh Batteries
- User Manual
- Lens Cap
- 32GB Micro SD Card
- Dual Battery Charger
- Wrist Strap
- Camera Case

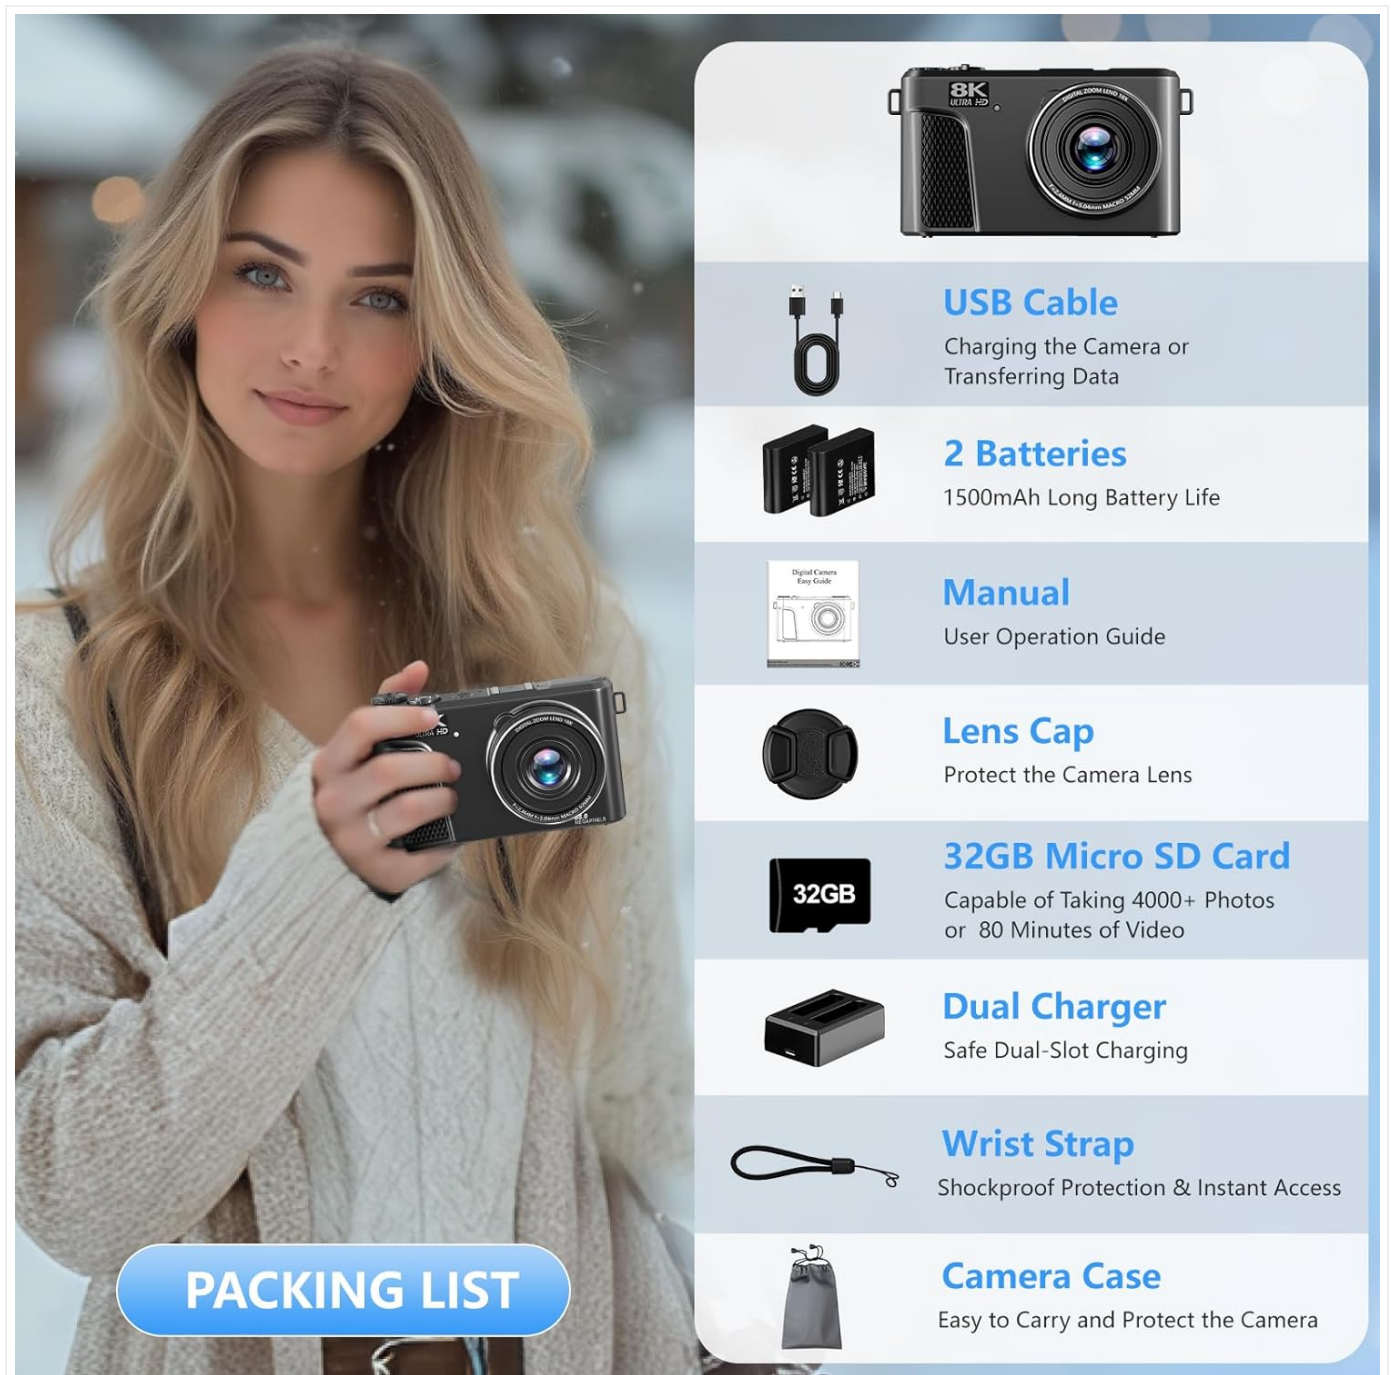


Image: The Saneen 8K Digital Camera and its complete set of accessories, including two batteries, a charger, USB cable, wrist strap, lens cap, 32GB SD card, and camera case.

CAMERA PARTS AND CONTROLS

Familiarize yourself with the camera's physical components and controls:

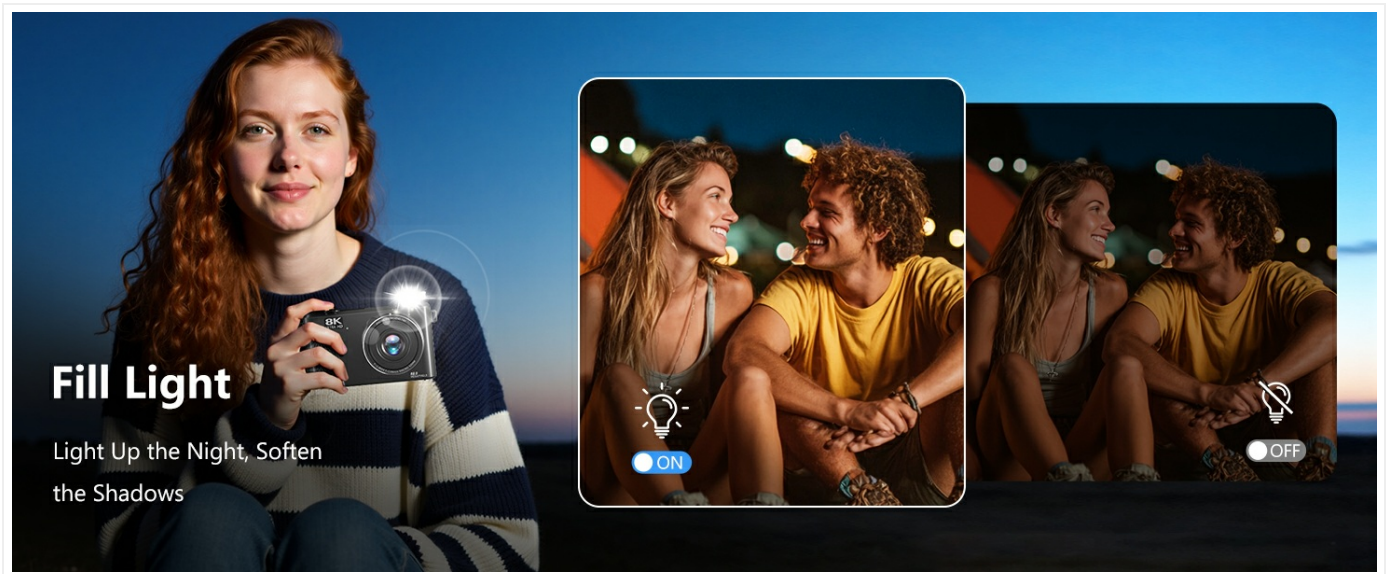


Image: Detailed diagram illustrating the various buttons, ports, and features of the Saneen 8K Digital Camera, including the 180° flip screen, hot shoe interface, power button, record button, mode dial, USB port, HD port, and control buttons.

- **180° Flip Screen:** Rotatable display for flexible viewing angles.
- **Hot Shoe Interface:** For attaching external accessories like microphones or additional lights.
- **Shoot Button:** Captures photos.
- **Power Button:** Turns the camera on/off.
- **Record Button:** Starts and stops video recording.
- **Mode Dial:** Selects different shooting modes (Photo, Video, Slow Motion, Time-lapse, etc.).
- **Charging Indicator Light:** Indicates battery charging status.
- **Working Indicator Light:** Shows camera operation status.
- **Play Button:** Accesses playback mode for reviewing photos and videos.
- **Left/Right Buttons:** Navigate menus, adjust settings, or switch filter modes.
- **Up Button/Fill Light Shortcut:** Activates the built-in fill light.
- **Wi-Fi Button:** Toggles Wi-Fi connectivity.
- **OK Button:** Confirms selections in menus.
- **DISP Button:** Short press twice to lock the screen.
- **Down Button/Delete Button:** Navigates menus or deletes selected files.
- **Menu Button:** Accesses the camera's main menu.
- **Type-C USB Port:** For charging and data transfer.
- **Microphone Port:** For connecting an external microphone.
- **HD Port:** For connecting to an external display.

SETUP

1. **Charge Batteries:** Insert the provided 1500mAh batteries into the dual battery charger. Connect the charger to a power source using the USB cable. The charging indicator will show progress.
2. **Insert Battery:** Open the battery compartment on the camera and insert a charged battery, ensuring correct orientation.
3. **Insert SD Card:** Locate the SD card slot, typically near the battery compartment. Insert the 32GB Micro SD card until it clicks into place.
4. **Attach Wrist Strap:** Secure the wrist strap to the designated attachment point on the camera to prevent accidental drops.

5. **Power On:** Press and hold the power button to turn on the camera.
6. **Initial Settings:** Follow the on-screen prompts to set the date, time, and language.

Upgraded Camera Dial Instantly Switch Between 9 Modes

Multiple shooting modes, perfect for beginners



Image: A hand inserting a battery into the dual charger, demonstrating the charging process for the Saneen 8K Digital Camera.

OPERATING INSTRUCTIONS

Basic Operation

- **Power On/Off:** Press the power button located on the top of the camera.
- **Capture Photos:** In photo mode, press the shutter button halfway to focus, then fully press to capture.
- **Record Videos:** In video mode, press the record button to start/stop recording.
- **Zoom:** Use the zoom lever around the shutter button to adjust the 18X digital zoom.

Mode Selection

The camera features a mode dial for quick selection of various shooting modes:

- **Photo Mode:** Standard still image capture.
- **Automatic Photo:** Camera automatically adjusts settings for optimal photos.
- **Timed Photo:** Set a timer before capturing a photo.
- **Continuous Shooting:** Capture a series of photos rapidly.
- **Video Mode:** Standard video recording.
- **Slow Motion Video:** Record videos in slow motion.
- **Time-lapse Video:** Capture a sequence of images over time and combine them into a video.
- **Loop Recording:** Continuously record video, overwriting older footage when storage is full.
- **Video + Photo:** Capture both video and still images simultaneously.

Transfer files instantly with built-in WiFi

Use your camera's built-in WiFi to transfer photos and videos to your phone anytime, anywhere—then share those perfect moments instantly.



Image: A close-up of the camera's mode dial, illustrating the nine available photography and video modes for diverse shooting scenarios.

3-Inch 180° Flip Screen

The 3-inch LCD screen can rotate 180 degrees, allowing for easy self-portraits, vlogging, and group shots from various angles. Simply flip the screen to your desired position.

180° Flip Screen

0–180° Free-Angle Tilt — Say Goodbye to Shooting Hassles



✗ OTHER

180°

0°

0–180° Dual-Angle Adjustment

✓ OURS

180°

150°

90°

45°

0–180° Adjustable Angle

Image: A user demonstrating the 180° flip screen feature of the Saneen 8K Digital Camera, ideal for vlogging and self-portraits.

Wi-Fi Connectivity & Webcam Function

The camera's built-in Wi-Fi enables direct transfer of photos and videos to your smartphone or tablet. Download the "HDV CAM" app (available on App Store and Google Play) to control the camera remotely, view content, and share directly to social media platforms. The camera can also function as an HD webcam when connected to a computer via USB, suitable for live streaming and video calls.

Webcam

Perfect for Vlogging and Live Streaming



Image: The camera screen showing a QR code for the HDV CAM app, with a smartphone displaying the app and various social media icons, highlighting Wi-Fi transfer capabilities.

Auto Focus & 18X Digital Zoom



Image: The Saneen 8K Digital Camera set up as a webcam, connected to a laptop, demonstrating its use for video calls or live streaming.

Your browser does not support the video tag.

Video: A demonstration of the Saneen 8K Digital Camera's features, including its flip screen and various shooting modes.

Beauty Mode & Fill Light

Activate the built-in Beauty Mode to enhance skin tones and features in photos and videos. The integrated fill light provides additional illumination for clear, well-lit content, especially in low-light environments or during nighttime recordings.

Upgraded Camera Dial

Instantly Switch Between 9 Modes

Multiple shooting modes, perfect for beginners



Image: The camera's fill light in use, brightening a scene with a couple outdoors at night, demonstrating its effectiveness in low-light conditions.

Your browser does not support the video tag.

Video: A short clip showcasing the 8K Flip Screen Digital Camera, highlighting its compact design and ease of use.

MAINTENANCE

- **Lens Care:** Keep the lens clean using the provided lens cap and a soft, lint-free cloth. Avoid touching the lens surface directly.
- **Battery Storage:** When not in use for extended periods, remove batteries from the camera and store them in a cool, dry place.
- **Cleaning:** Use a soft, dry cloth to clean the camera body. Do not use liquid cleaners or solvents.
- **Storage:** Store the camera in its case to protect it from dust and physical damage.
- **Water Resistance:** This camera is *not* water resistant. Avoid exposure to water or high humidity.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not power on.	Battery is depleted or incorrectly inserted.	Ensure battery is fully charged and inserted with correct polarity.
Cannot capture photos/videos.	SD card is full, locked, or not inserted.	Check SD card status. Ensure it's unlocked, has sufficient space, and is properly inserted. Format if necessary (this will erase all data).
Poor image/video quality.	Lens is dirty, insufficient lighting, or incorrect settings.	Clean the lens. Use the fill light in low-light conditions. Adjust exposure and white balance settings.
Wi-Fi connection issues.	Incorrect Wi-Fi settings or app issues.	Ensure Wi-Fi is enabled on both camera and device. Reconnect through the HDV CAM app. Restart both devices.

SPECIFICATIONS

Feature	Detail
Model Name	WD300
Effective Still Resolution	88 MP
Video Capture Format	MP4 (8K)
Digital Zoom	18x
Screen Size	3 Inches (180° Flip LCD)
Photo Sensor Technology	CMOS
Image Stabilization	Digital
Auto Focus Technology	Face Detection, Phase Detection Autofocus
Connectivity Technology	USB, Wi-Fi
Flash Memory Type	Micro SD (32GB card included)
Battery Type	Lithium Ion (2 x 1500mAh included)
Battery Average Life	50 minutes (recording)
Dimensions (approx.)	4.7" (L) x 2.1" (W) x 2.8" (H)
Weight (approx.)	0.72 lb
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

Saneen is committed to providing customer satisfaction. Digital cameras are sophisticated electronic products. Should you encounter any issues or require assistance, please contact our customer service team. We offer around-the-clock support and aim to resolve any issues within 24 hours.

For further support, please refer to the contact information provided in your product packaging or visit the official Saneen website.

