

Easytry11988

Generic Remote Control Replacement for AirPro UC7245T CHQ7245T Ceiling Fans - Instruction Manual

Model: Easytry11988

INTRODUCTION

This manual provides instructions for the Generic Infrared Remote Control Replacement, designed for use with AirPro UC7245T and CHQ7245T ceiling fan models. This remote is an infrared replacement and requires line-of-sight operation. Please ensure your original remote control is infrared and visually matches the replacement for proper compatibility and functionality. This remote is not universally compatible and is specifically for the models listed.

SETUP

1. Battery Installation

The remote control requires two (2) AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Slide the cover downwards or press the latch to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Replace the battery compartment cover, ensuring it clicks securely into place.



Image: Back of the remote control with the battery compartment cover.

This image displays the rear view of the remote control, highlighting the rectangular battery compartment cover located at the bottom. Users should open this cover to insert the required AAA batteries.

2. Pairing the Remote Control

This remote control requires pairing with your ceiling fan before use. Specific pairing instructions are typically provided with your ceiling fan's original manual or by the ceiling fan manufacturer (AirPro, UC7245T, CHQ7245T). Please refer to your ceiling fan's documentation for detailed pairing procedures. Common pairing methods often involve a sequence of power cycles or pressing a pairing button on the fan receiver unit.

OPERATING INSTRUCTIONS

Once paired and with batteries installed, point the remote control directly at your ceiling fan's receiver. The maximum effective range is approximately 8 meters (26 feet).



Image: Front view of the remote control, displaying all control buttons.

This image shows the front face of the remote control. It features a circular array of fan speed buttons (1-6) with a central power button, and a cross-shaped array of light control buttons (on/off, dimmer, rotation) at the top.

Button Functions:

- **Power Button (Central Circle):** Turns the ceiling fan and light ON or OFF.
- **Fan Speed Buttons (1-6):** Adjusts the fan speed. '1' is the lowest speed, and '6' is the highest speed.
- **Light ON/OFF Button (Top of Cross):** Toggles the ceiling fan light ON or OFF.
- **Light Dimmer Buttons (Left/Right of Cross):** Adjusts the brightness of the light.
- **Fan Rotation/Direction Button (Bottom of Cross):** Changes the direction of the fan blades (e.g., for summer/winter modes). *Note: This function depends on your ceiling fan's capabilities.*

MAINTENANCE

Battery Replacement:

When the remote control's range decreases or it becomes unresponsive, it is likely time to replace the batteries. Follow the "Battery Installation" steps in the Setup section to replace the two AAA batteries.

Cleaning:

To clean the remote control, use a soft, dry cloth. Do not use liquid cleaners or abrasive materials, as these can damage the remote's surface or internal components.

TROUBLESHOOTING

- **Remote not responding:**
 - Ensure batteries are installed correctly with correct polarity.
 - Replace old batteries with new AAA batteries.
 - Confirm the remote is paired with your ceiling fan (refer to the "Pairing" section).

- Ensure there are no obstructions between the remote and the ceiling fan's receiver.
- Verify you are within the maximum operating range of 8 meters.
- **Limited range:**
 - Replace batteries with fresh ones.
 - Ensure no strong light sources (like direct sunlight) are interfering with the infrared signal.
- **Some functions not working:**
 - This replacement remote may not offer all functions identical to your original remote. Refer to the "Operating Instructions" for available functions.
 - Ensure your ceiling fan model supports the specific function (e.g., fan direction change).

SPECIFICATIONS

Model Number:	Easytry11988
Brand:	Generic (Manufacturer: Easytry)
Compatible Models:	AirPro UC7245T, CHQ7245T Ceiling Fans
Connectivity Technology:	Infrared (IR)
Controller Type:	Button Control
Power Source:	2 x AAA Batteries (not included)
Maximum Range:	8 Meters (approx. 26 feet)
Color:	Black
Max Supported Devices:	1

WARRANTY AND SUPPORT

As this is a replacement product, specific warranty details may vary. For any questions, troubleshooting assistance beyond this manual, or warranty inquiries, please contact the seller or the manufacturer (Easytry) directly through your purchase platform. Please have your order details and product model number (Easytry11988) ready when contacting support.