

INFANS Compact Portable Baby Electric Rocker

INFANS Compact Portable Baby Electric Swing and Rocker Instruction Manual

Model: Compact Portable Baby Electric Rocker

1. SAFETY INFORMATION

WARNING: This is an infant seat used to comfort, soothe and entertain your baby. It is not a sleeper, nor intended for overnight sleep, since it is neither a flat surface (there is always a slight recline), nor a firm surface, as recommended by pediatricians. Never leave your child unattended.

- Always use the five-point safety belt to prevent the baby from slipping and falling.
- Ensure the cradle bottom anti-slip pads are properly positioned to prevent slipping.
- The infant rocker features a stable and durable triangular frame; ensure it is correctly assembled before use.
- Suitable for babies 0-6 months; maximum weight capacity is 20 pounds.
- Made of non-toxic materials without any odor, FREE from BPA, PVC, Phthalates, Lead, Latex, and Formaldehyde.
- No sharp points or edges.
- Passed the tests of stability, asphyxiation, load, and shear.

2. PRODUCT OVERVIEW

The INFANS Compact Portable Baby Electric Swing and Rocker is designed to provide comfort and entertainment for infants. It features multiple swing speeds, built-in music, and a timer function, all controllable via a remote. Its foldable design ensures easy storage and portability.



Figure 1: INFANS Baby Electric Swing and Rocker (Light Pink)

This image shows the INFANS Baby Electric Swing and Rocker in a light pink color. The swing features a comfortable seat with a headrest, a five-point harness, and an overhead toy bar with two hanging toys. The frame is white and grey, providing a stable base for the swing.

Key Features:

- **Adjustable Swing Speed:** 5 levels of natural sway speed.
- **Music & Sounds:** 12 melodies and 5 natural songs built-in.
- **Timer Function:** 3 timing modes (15, 30, and 60 minutes).
- **Remote Control:** Convenient remote operation for music, speed, and timer.
- **Safety Harness:** Five-point safety belt for secure seating.
- **Portability:** Lightweight and foldable design for easy storage and travel.
- **Comfort:** Adjustable seat position and U-shape pillow for optimal comfort.
- **Interactive Toys:** Two removable cuddly toys on the overhead bar.

3. SETUP

The INFANS Baby Rocking Chair is designed for simple assembly. Follow the instructions provided in the packaging or refer to the product video for a visual guide.

1. Unpack all components and ensure all parts are present.
2. Assemble the main frame according to the diagrams. Ensure all connections are secure.
3. Attach the seat to the frame.
4. Install the U-shape pillow and ensure the five-point safety harness is correctly threaded.
5. Attach the overhead toy bar with the two cuddly toys.
6. Insert batteries (not included) or connect the AC adapter for power.



Figure 2: Foldable Design for Storage and Travel

This image illustrates the foldable design of the INFANS Baby Swing. It shows the swing in its upright, assembled position and then folded flat for compact storage or easy transport in a car trunk. This highlights the product's portability feature.

4. OPERATING INSTRUCTIONS

Powering On/Off:

- Connect the AC adapter or insert 4 C batteries (not included) into the battery compartment.
- Press the power button on the control panel or remote to turn the swing on or off.

Adjusting Swing Speed:

- The swing offers 5 levels of adjustable speed.
- Use the speed control buttons on the control panel or remote to increase or decrease the swing intensity.

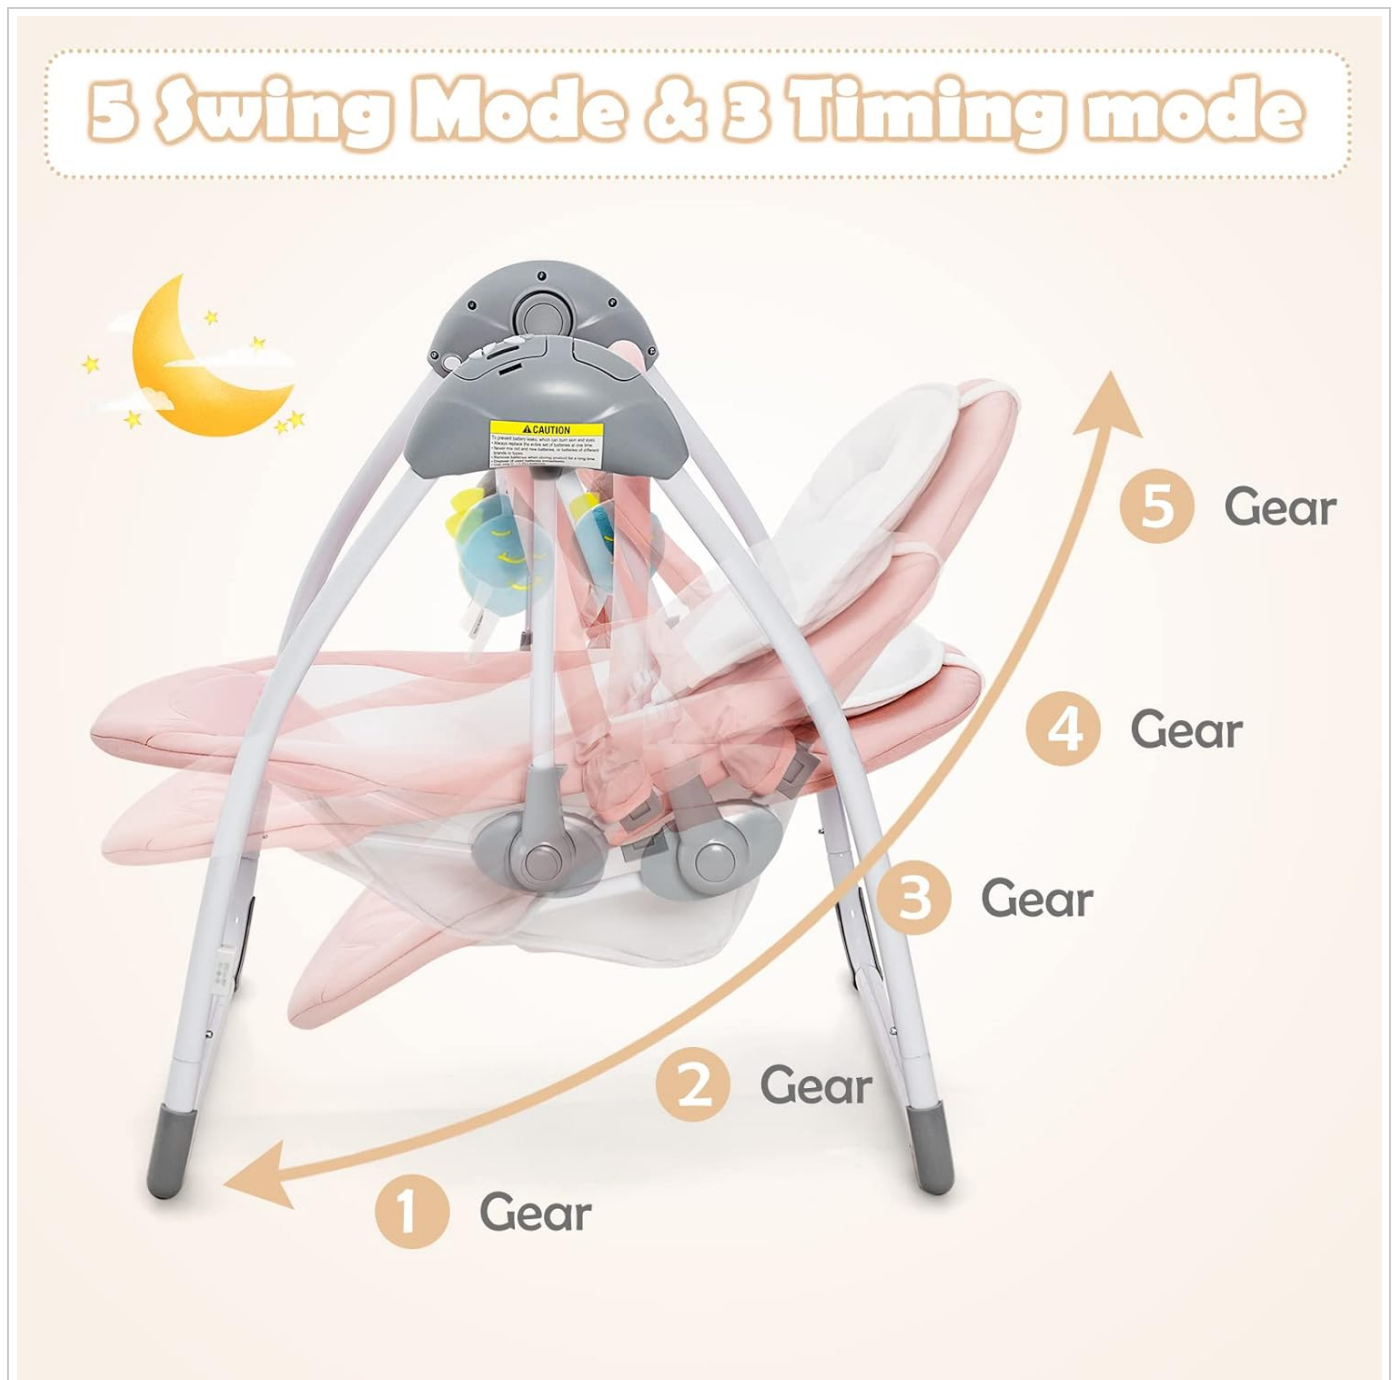


Figure 3: Swing Speed and Timer Settings

This image visually represents the 5 adjustable swing speeds (labeled 1-5 Gear) and the 3 timing modes (15, 30, 60 minutes) available on the INFANS Baby Swing. The swing motion is depicted with arrows indicating the natural sway.

Music and Sounds:

- Select from 12 melodies and 5 natural songs.
- Use the music selection button on the control panel or remote to cycle through the available tunes.
- Adjust the volume using the volume control buttons.

Timer Function:

- Choose from 3 timing modes: 15, 30, or 60 minutes.
- Press the timer button on the control panel or remote to set the desired duration. The swing will automatically turn off after the set time.
- If no timer is set, the swing will automatically turn off after 30 minutes to conserve battery life.

Remote Control:

- The remote control allows for convenient adjustment of music, swing speed, and timer settings from a distance.



Figure 4: Remote Control Operation

This image shows a parent using the remote control to operate the INFANS Baby Swing, which is positioned next to a sofa. The remote allows for convenient adjustment of swing settings and music, enhancing user experience.

Seat Adjustment:

- The seat position is adjustable to ensure your baby's comfort.
- Press the buttons on both sides of the seat simultaneously to adjust the recline angle.

Seat Adjustment, Let the Baby Find A Comfortable Position

PS: Press buttons on both sides at the same time to adjust the radian



Figure 5: Adjusting Seat Position

This image demonstrates how to adjust the seat position of the INFANS Baby Swing. It shows a hand pressing buttons on the side of the seat to change its recline angle, allowing for a comfortable position for the baby.

5. MAINTENANCE

Cleaning:

- Both the seat and pillow can be removed for cleaning.
- Refer to the care labels on the fabric for specific washing instructions. Typically, machine wash cold on a gentle cycle and air dry.

- Wipe down the frame with a damp cloth and mild soap. Do not use abrasive cleaners.

Storage:

- When not in use, the swing can be easily folded for compact storage.
- Store in a clean, dry place away from direct sunlight.

6. TROUBLESHOOTING

- **Swing not operating:** Check if the AC adapter is properly connected or if the batteries are correctly inserted and not depleted.
- **Remote control not working:** Ensure batteries in the remote are fresh and correctly inserted. Point the remote directly at the swing's receiver.
- **Unstable frame:** Verify that all assembly points are securely fastened and the triangular frame is fully extended.
- **Music/Sounds not playing:** Check volume settings. Ensure the music function is activated.

7. SPECIFICATIONS

Brand	INFANS
Model	Compact Portable Baby Electric Rocker
Color	Light Pink
Product Dimensions (L x W x H)	24" x 23" x 25.5"
Folding Size (L x H)	24" x 25.5"
Item Weight	8.6 LBS
Maximum Weight Capacity	20 LBS
Applicable Age	0-6 Months
Material Composition	PP
Batteries Required	Yes (4 C batteries, not included)
Power Source	AC to DC adapter or batteries

8. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your product or contact INFANS customer service directly. Contact details can typically be found on the product packaging or the official INFANS website.