

[Manuals.plus](#) /

› [SICOTAS](#) /

› SICOTAS Rattan 6-Drawer Dresser (Model DR006A1XLTY1146-0757) Instruction Manual

SICOTAS DR006A1XLTY1146-0757

SICOTAS Rattan 6-Drawer Dresser Instruction Manual

Model: DR006A1XLTY1146-0757 | Brand: SICOTAS

1. INTRODUCTION

This manual provides detailed instructions for the assembly, operation, maintenance, and troubleshooting of your SICOTAS Rattan 6-Drawer Dresser. Please read all instructions carefully before beginning assembly and retain this manual for future reference.



Image 1.1: The SICOTAS Rattan 6-Drawer Dresser, showcasing its design and functionality in a bedroom environment.

2. SAFETY INFORMATION

To ensure safe use of this product, please adhere to the following guidelines:

- **Tip-Over Prevention:** This dresser is equipped with an anti-tip device. It is crucial to securely attach this device to a wall to prevent accidental tipping, especially in households with children. This product meets the criteria outlined in safety standard ASTM 2057–2023 for Clothing Storage Units.
- **Assembly:** Always assemble the dresser on a soft, clean surface to prevent scratches. It is recommended that two adults assemble this unit.
- **Drawer Safety:** Each drawer features a locking latch for safety. Ensure drawers are properly closed when not in use. Avoid placing excessive weight in drawers or on top of the dresser.
- **Stability:** After assembly, ensure all fasteners are securely tightened. For enhanced stability, attach the small fasteners to the back and tighten screws at a 45-degree angle as indicated in the assembly instructions.



Image 2.1: Illustration of the anti-tilt device, emphasizing its importance for securing the dresser to the wall.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts and hardware are present. Refer to the included parts list in your package. All components are labeled for easy identification.

- Dresser panels (top, bottom, sides, back)
- Drawer components (fronts with rattan design, sides, backs, bottoms)
- Steel ball-bearing slides
- Handles
- Assembly hardware (screws, dowels, cam locks, etc.)
- Anti-tip kit
- Instruction manual

4. ASSEMBLY INSTRUCTIONS

A clear and user-friendly instruction manual is included in the dresser package. Follow the step-by-step diagrams and instructions provided. It is recommended to have two people for assembly.

1. Unpack all components and lay them out on a soft, clean surface.
2. Identify each part using the labels and the included parts list.
3. Begin by assembling the main frame of the dresser.
4. Assemble each drawer individually, ensuring the steel ball-bearing slides are correctly installed.
5. Insert the assembled drawers into the dresser frame.
6. Attach the handles to the drawer fronts.
7. Install the anti-tip device to the back of the dresser and secure it to a wall stud.
8. Ensure all screws and fasteners are tightened, paying attention to the 45-degree angle for back fasteners for optimal stability.

Helpful Tip:

The assembly process can be time-consuming. Allocate sufficient time and follow each step precisely to ensure proper construction and stability.

5. OPERATING INSTRUCTIONS

Your SICOTAS Rattan 6-Drawer Dresser is designed for convenient storage and can also function as a TV stand. The drawers are equipped with steel ball-bearing slides for smooth operation.

- **Drawer Usage:** Gently pull and push the drawers using the handles. Avoid forcing drawers open or closed.
- **Storage Capacity:** Each large drawer is designed to hold a significant amount of clothing, such as 25+ T-shirts or 15+ pairs of pants. Distribute weight evenly within the drawers.
- **TV Stand Functionality:** The sturdy top surface can accommodate a television. Ensure the TV's base fits within the dresser's dimensions and that its weight does not exceed the dresser's capacity.

Elegant Rattan Design



Image 5.1: A drawer pulled open, illustrating the ample storage space for clothing items.



Image 5.2: Visual representation of the generous storage capacity per drawer for different types of items.

Your browser does not support the video tag.

Video 5.3: An official product video from SICOTAS demonstrating the boho-chic rattan design and stylish storage features of the dresser.

6. MAINTENANCE

Proper care will extend the life and appearance of your dresser:

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid harsh chemicals or abrasive cleaners, which can damage the engineered wood and rattan finish.
- **Rattan Care:** The rattan elements can be gently dusted with a soft brush or vacuum cleaner with a brush attachment.
- **Hardware:** Periodically check and tighten all screws and fasteners to ensure the dresser remains stable.
- **Avoid Direct Sunlight:** Prolonged exposure to direct sunlight can cause fading or damage to the wood finish.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Drawers are stiff or difficult to open/close.	Incorrect slide installation, uneven assembly, or debris in slides.	Check that drawer slides are installed correctly and aligned. Ensure all assembly screws are tightened evenly. Clean any debris from the slide tracks.
Dresser feels wobbly or unstable.	Loose fasteners or anti-tip device not installed.	Tighten all assembly screws. Ensure the anti-tip device is securely anchored to a wall stud.
Minor scratches on the surface.	Normal wear and tear or accidental damage.	Use a wood repair marker or furniture polish designed for engineered wood to minimize visibility.

8. SPECIFICATIONS

Feature	Detail
Brand	SICOTAS
Model Number	DR006A1XLTY1146-0757
Material	Engineered Wood
Finish Type	Wood Grain
Product Dimensions (D x W x H)	17.72" x 56.85" x 31.34"
Number of Drawers	6
Item Weight	124 pounds
Additional Features	Safety Stop, Anti-Tip Device
Color (Current Variant)	Black Oak

Product Size



Image 8.1: Detailed product dimensions for the dresser and its drawers.

9. WARRANTY AND SUPPORT

For any questions, missing parts, or assistance with assembly, please contact our customer service team. We are committed to providing excellent support for your SICOTAS product.

- **Customer Service:** Refer to the contact information provided in your product packaging or visit the official SICOTAS website for support.
- **Protection Plans:** Optional 2-Year and 3-Year Protection Plans are available for purchase to cover potential damages or defects. Please refer to your retailer for details.