

U-MAX 16318

U-MAX Tall Resin Outdoor Storage Cabinet - Model 16318 User Manual

Brand: U-MAX

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the U-MAX Tall Resin Outdoor Storage Cabinet, Model 16318. This vertical storage solution is designed to provide durable, weather-resistant storage for your outdoor and indoor items. Featuring adjustable shelves and a reinforced floor, it offers versatile organization for tools, garden supplies, and other essentials. Constructed from high-quality, UV-resistant resin, this cabinet is built to withstand various weather conditions and maintain its appearance over time.



Image 1.1: U-MAX Tall Resin Outdoor Storage Cabinet with interior view.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Assembly is recommended with two people to ensure safety and ease.
- Ensure the cabinet is placed on a level, stable surface.
- For outdoor use, consider anchoring the cabinet to the ground or a wall to prevent tipping, especially in windy conditions.
- Do not overload the shelves. Each shelf is designed to hold up to 70 lbs (31.75 kg).
- Keep children and pets away from the assembly area.
- Do not store flammable liquids or hazardous materials inside the cabinet unless they are in sealed, appropriate containers.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed in the packaging diagram are present and undamaged. If any parts are missing or damaged, contact customer support immediately.

- Side Panels (Left and Right)
- Back Panels
- Base Panel
- Roof Panel
- Door Panels (Left and Right)
- Adjustable Shelves (3 units)
- Hardware Pack (screws, hinges, handles, shelf supports)
- Instruction Manual

4. SETUP AND ASSEMBLY INSTRUCTIONS

Assembly requires careful attention to the provided diagrams. While designed for straightforward setup, reviewing all steps before starting is crucial. Two people are recommended for efficient and safe assembly.

Tools Required (Not Included):

- Phillips Head Screwdriver
- Rubber Mallet (optional, for gentle tapping)
- Drill (optional, for anchoring)

Assembly Steps:

1. **Prepare the Base:** Place the base panel on your chosen level surface. Ensure the area is clear and provides enough space for assembly.
2. **Attach Side and Back Panels:** Connect the side panels to the base, followed by the back panels. Pay close attention to the orientation of each panel as indicated in the diagrams. Secure with the provided screws.
3. **Install the Roof:** Position the sloped roof panel onto the assembled walls. The sloped design is intended to prevent water accumulation. Secure the roof firmly.
4. **Attach Doors:** Mount the door panels using the hinges. Ensure the hinges are correctly aligned and secured to allow for smooth opening and closing. If doors bind, re-check hinge alignment and screw placement.
5. **Install Handles:** Attach the door handles as per the instructions.
6. **Insert Adjustable Shelves:** Place the shelf supports at your desired height. Insert the three adjustable shelves. Each shelf can be repositioned to accommodate items of various sizes.
7. **Final Checks:** Verify all screws are tightened and the cabinet is stable. For outdoor placement, consider securing the cabinet to a permanent structure using appropriate anchoring hardware (not included).

★ PRODUCT DIMENSION ★

Resin Outdoor Storage Cabinet



Image 4.1: Product dimensions for planning placement.

5. OPERATING INSTRUCTIONS

Opening and Closing Doors:

Grasp the handles and pull gently to open the doors. To close, push the doors firmly until they latch securely. Ensure both doors are fully closed to maintain weather resistance.

Adjusting Shelves:

The cabinet includes three adjustable shelves. To change a shelf's height, remove any items from the shelf, lift the shelf slightly, and reposition the shelf supports to the desired slots. Ensure all four supports are securely seated before placing items back on the shelf.

★ VERSATILE STORAGE ★

Resist Rust and Option For Preventing Rainwater Accumulation



Image 5.1: Customizable 3-tier storage with adjustable shelves.

6. MAINTENANCE

Regular maintenance will help prolong the life and appearance of your U-MAX storage cabinet.

- **Cleaning:** Wipe the cabinet surfaces with a damp cloth and mild soap. Avoid abrasive cleaners or harsh chemicals, as these can damage the resin material. Rinse with clean water and dry thoroughly.
- **Inspection:** Periodically inspect the cabinet for any signs of wear, damage, or loose fasteners. Tighten any loose screws.
- **Weather Protection:** The sloped roof and double doors are designed for weather resistance. Ensure the roof remains clear of heavy debris or snow accumulation to maintain its integrity and prevent pooling.

★ SLOPED RESIN ROOF ★

Resist Rust and Option For Preventing Rainwater Accumulation



Image 6.1: Sloped resin roof for weather resistance.

7. TROUBLESHOOTING

- **Doors do not close properly:**
 - Check that the cabinet is on a level surface. Uneven ground can cause misalignment.
 - Inspect hinges for proper installation and ensure all screws are tightened.
 - Verify that no items inside the cabinet are obstructing the doors.
- **Water leakage:**
 - Ensure the roof panel is correctly installed and sealed.
 - Check that the doors are fully closed and latched.
 - Confirm that all panels are securely joined and there are no gaps.
- **Cabinet feels unstable:**
 - Re-check all connections and tighten any loose screws.
 - Ensure the cabinet is on a firm, level surface.
 - Consider anchoring the cabinet if it is placed outdoors.

If you encounter issues not listed here or require further assistance, please contact U-MAX customer support.

8. SPECIFICATIONS

Brand	U-MAX
Model Number	16318
Product Dimensions (External)	19"D x 35"W x 70"H (47.4D x 90W x 179H cm)
Item Weight	69.3 lbs (31.43 kg)
Material	High-Quality, UV-Resistant Resin
Color	Grey
Shelf Capacity	Up to 70 lbs (31.75 kg) per shelf
Assembly Required	Yes

9. WARRANTY AND SUPPORT

The U-MAX Tall Resin Outdoor Storage Cabinet is backed by a 1-year support period. This covers manufacturing defects and issues arising from normal use.

Customer Support:

For assistance with assembly, usage, troubleshooting, or any other questions, please contact U-MAX customer support. Our team is available to provide remote assistance and ensure a satisfactory experience with your product.

Please refer to your purchase documentation for specific contact details or visit the official U-MAX website for support information.