

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Tastyle](#) /

› [Tastyle Single Serve Coffee Maker K330IC Instruction Manual](#)

Tastyle K330IC

Tastyle Single Serve Coffee Maker K330IC Instruction Manual

Model: K330IC

IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using this appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Do not immerse the appliance, cord, or plug in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT OVERVIEW

The Tastyle Single Serve Coffee Maker K330IC is designed for convenience and versatility, allowing you to brew hot, bold, or iced coffee from K-cups or ground coffee. It features a compact design and a removable water reservoir for easy use and maintenance.



Image: Tastyle Single Serve Coffee Maker K330IC, showcasing its ability to brew with K-cups or ground coffee, and prepare both hot and iced beverages.

What's Included:

- Single Serve Coffee Maker
- Capsule holder
- Reusable ground coffee filter
- Removable drip tray (2 heights)
- Instruction Manual
- Recipe book

SETUP

1. **Unpack:** Carefully remove all packaging materials and place the coffee maker on a clean, flat, stable surface.
2. **Initial Cleaning:** Before first use, wash the removable water reservoir, drip tray, capsule holder, and reusable ground coffee filter in warm, soapy water. Rinse thoroughly and dry.

3. **Fill Water Reservoir:** Remove the 40oz water reservoir from the back of the unit. Fill it with fresh, cold water up to the "Max" line. Reattach the reservoir securely to the unit.



Image: A hand filling the 40oz removable water tank with water, demonstrating the ease of refilling.

4. **Power Connection:** Plug the power cord into a grounded electrical outlet.
5. **First Use Cycle (Cleaning Cycle):** To clean the internal components, place a large mug (at least 10oz) on the drip tray. Do not add any coffee. Press the "ON/OFF" button, then select the "HOT BREW" option and choose the 10oz brew size. Allow the machine to complete a full brew cycle with just water. Discard the hot water. Repeat this process once more.

OPERATING INSTRUCTIONS

Brewing with K-Cups (Pods):

1. **Prepare:** Ensure the water reservoir is filled. Place your mug on the drip tray. Adjust the drip tray height if using a travel mug (up to 7.3 inches).

EASY-CLEAN REMOVABLE TANK

40 oz removable tank - Brew more, clean easier!



Image: The coffee maker with its drip tray removed to accommodate a tall travel mug, highlighting its travel mug friendly design.

2. **Insert Pod:** Lift the handle to open the brew chamber. Insert a K-cup pod into the capsule holder. Close the handle firmly until it clicks.

MODEL K330IC

2

2 Accessories For

K-PODS & GROUNDS & TEA



3 Brew Styles For

ICED & HOT & BOLD COFFEE



40oz Detachable Water Tank

SELECT FROM 6 BREW SIZES

Image: A hand inserting a K-cup into the brew chamber of the coffee maker.

- Select Brew Style and Size:** Press the "ON/OFF" button. Choose your desired brew style: "HOT BREW", "BOLD", or "OVER ICE". Then, select your preferred cup size (6, 8, 10, 12, 16, or 24 oz) using the "OZ" button.

CREATE YOUR OWN HOME CAFÉ

3 flavors to choose from: Hot, Bold, Over Ice



Image: A close-up of the coffee maker's control panel, showing the "ON/OFF", "HOT BREW", "BOLD", "OVER ICE", and "OZ" buttons for selecting brew options and sizes.

4. **Start Brewing:** The machine will begin brewing automatically. Once complete, the light will turn off. Carefully remove your mug.

Brewing with Ground Coffee:

1. **Prepare:** Ensure the water reservoir is filled. Place your mug on the drip tray. Lift the handle to open the brew chamber.
2. **Add Grounds:** Insert the reusable ground coffee filter into the brew chamber. Add your desired amount of ground coffee (up to 30g/1.1oz) into the filter. Close the handle firmly until it clicks.



Image: A hand using a scoop to add ground coffee into the reusable filter within the coffee maker's brew chamber.

3. **Select Brew Style and Size:** Follow step 3 from "Brewing with K-Cups".
4. **Start Brewing:** The machine will begin brewing automatically. Once complete, the light will turn off. Carefully remove your mug.

Brewing Over Ice:

The "OVER ICE" function automatically adjusts brewing temperature to ensure optimal extraction while minimizing ice melting. For best results, use a suggested ice-to-water ratio of 1:1.

1. **Fill Mug with Ice:** Fill your mug with ice cubes.
2. **Prepare Coffee:** Insert a K-cup pod or add ground coffee to the reusable filter as described above.
3. **Select "OVER ICE" and Size:** Press the "ON/OFF" button, then select the "OVER ICE" option. Choose your desired cup size (e.g., 6, 8, 10, 12, 16, or 24 oz).
4. **Brew:** The machine will brew directly over the ice. Enjoy your iced coffee.

BREW WITH PODS OR GROUNDS

Comes with capsule holder
and reusable basket



Image: The Tastyle coffee maker brewing coffee directly over ice into a glass, demonstrating the "Over Ice" function.

Your browser does not support the video tag.

Video: Official product video demonstrating the Tastyle Single Serve Coffee Maker with its 40oz removable water tank and various brewing options.

MAINTENANCE

Daily Cleaning:

- **Drip Tray:** The drip tray is removable for easy cleaning. It can be rinsed under the tap or placed in the dishwasher.

PERFECT FOR SOLO OR SHARING

Brew 1 cup or more —
choose from 6 brew sizes



Image: The removable drip tray of the coffee maker, designed for easy cleaning and to accommodate different mug sizes.

- **Capsule Holder & Ground Coffee Filter:** After each use, remove and rinse the capsule holder and reusable ground coffee filter. These parts are also dishwasher-safe.



Image: A hand rinsing the reusable ground coffee filter under running water, illustrating the ease of cleaning.

- **Water Reservoir:** The 40oz removable water tank can be easily detached for cleaning and refilling. It helps maintain countertop cleanliness.
- **Exterior:** Wipe the exterior of the coffee maker with a damp cloth.

Descaling:

Over time, mineral deposits can build up in your coffee maker, affecting performance and taste. The machine features a "DESCALE" reminder light. When this light illuminates, it's time to descale your machine.

1. **Prepare Descaling Solution:** Follow the instructions on your descaling solution packaging. Alternatively, you can use a mixture of white vinegar and water (1:1 ratio).
2. **Fill Reservoir:** Pour the descaling solution into the water reservoir up to the "Max" line.
3. **Start Descaling Cycle:** Place a large mug on the drip tray. Press and hold the "DESCALE" button (or follow specific instructions if provided in the included manual for your model) to initiate the descaling cycle. The machine will run the solution through the system.
4. **Rinse Cycles:** After the descaling cycle is complete, empty and rinse the water reservoir. Fill it with fresh water and run 2-3 full brew cycles with just water to rinse out any remaining descaling solution. Discard the water after each cycle.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------|--|---|
| Coffee not brewing. | No water in reservoir, machine not powered on, brew chamber not closed properly. | Fill water reservoir, ensure power is on, close brew chamber firmly. |
| Weak coffee. | Insufficient coffee grounds/pod, incorrect brew size selected, descaling needed. | Use more coffee or a stronger pod, select a smaller brew size, descale the machine. |
| Coffee splattering. | Mug too far from dispenser. | Adjust the drip tray to raise the mug closer to the dispenser. |
| "DESCALE" light is on. | Mineral buildup in the machine. | Perform a descaling cycle as described in the Maintenance section. |

SPECIFICATIONS

Brand: Tastyle

Model Name: K330IC

Color: Black

Product Dimensions: 10.3"D x 4.7"W x 12.2"H

Item Weight: 4.49 pounds

Water Reservoir Capacity: 40 oz

Brew Sizes: 6, 8, 10, 12, 16, 24 oz

Coffee Input Type: Capsule, Ground, Pod

Special Features: Auto Clean Function, Auto Shut-Off, Descaling Reminder, Removable Tank, Self-Cleaning

Human Interface Input: Buttons

WARRANTY AND SUPPORT

Tastyle is committed to providing quality products and excellent customer service.

- **18-Month Warranty:** Your Tastyle coffee maker is covered by an 18-month warranty from the date of purchase. Please retain your proof of purchase.
- **24-Hour Customer Support:** For any inquiries or assistance, our customer support team is available 24 hours a day. Refer to the contact information provided in your product packaging or on the official Tastyle website.
- **Lifetime Technical Support:** Enjoy lifetime technical support for your Tastyle coffee maker.