

Saved from manuals.plus.

Open the live page for links to other documents and user manuals.

[Manuals.plus](#) /

› [INFANS](#) /

› INFANS 2-in-1 Baby Swing and Bouncer Instruction Manual

INFANS B0FJDYZLTJ

INFANS 2-in-1 Baby Swing and Bouncer Instruction Manual

Brand: INFANS

Model: B0FJDYZLTJ

1. PRODUCT OVERVIEW

The INFANS 2-in-1 Baby Swing and Bouncer is designed to provide comfort and entertainment for infants aged 0-6 months, with a maximum weight capacity of 22 pounds. This versatile product functions as both an electric baby swing and a portable bouncer or stationary seat, adapting to your baby's needs and your living space. It features multiple swing speeds, built-in music, a remote control, and engaging toys to keep your little one soothed and entertained.



Figure 1: The INFANS 2-in-1 Baby Swing and Bouncer in Light Pink, showcasing its full assembly.

2. KEY FEATURES

- **2-in-1 Functionality:** Easily converts between a baby swing, a rocking chair, and a stationary seat by removing the support frame.
- **Adjustable Swing Speeds:** Offers 5 levels of adjustable swing speed and range to provide a comfortable rocking experience.
- **Music and Timer:** Includes built-in songs and three timing modes (15, 30, 60 minutes) for customized use.
- **Remote Control:** Conveniently switch music, swing speed, and timer settings from a distance.
- **Engaging Toys:** Features 3 cuddly toys suspended above, which can be removed as needed.
- **Adjustable Seat Positions:** Provides 3 adjustable seat positions for optimal baby comfort.
- **Safety Harness:** Equipped with a secure five-point harness to prevent slipping and ensure baby's safety.
- **Portability and Storage:** Designed for easy folding and compact storage, making it ideal for small spaces or travel.

- **Dual Power Options:** Can be powered by plugging into a wall outlet or by batteries for on-the-go use.



Figure 2: Detailed view of key features including the mobile with toys, 5-point safety harness, detachable U-shaped pillow for head support, and the control panel with music button.

5 Swing Mode & 3 Timing Mode

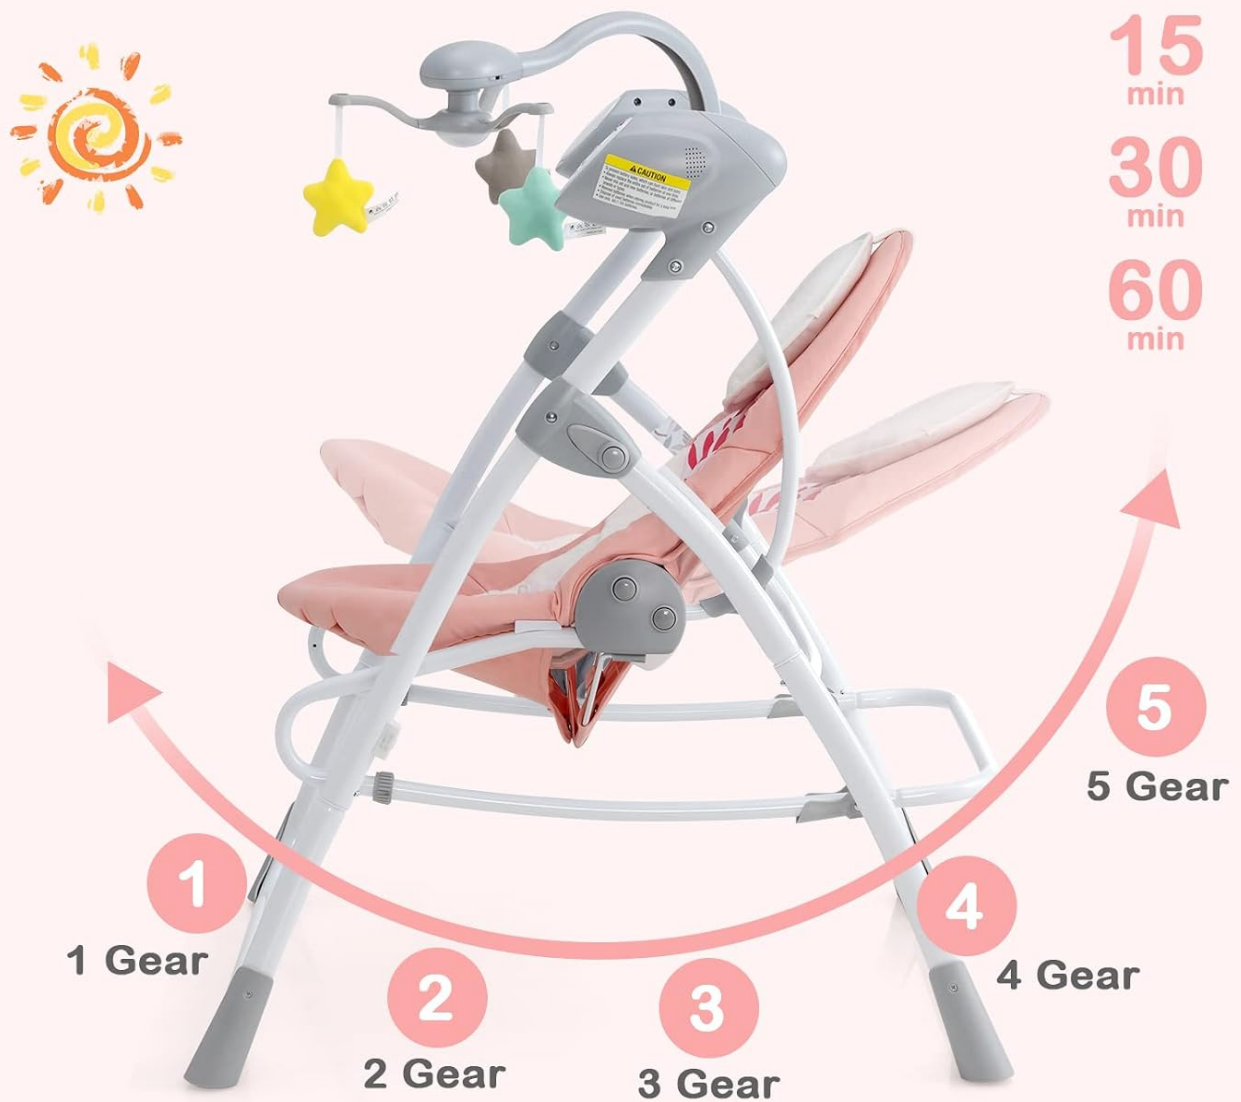


Figure 3: Illustration of the 5 adjustable swing speeds and the 3 available timing modes (15, 30, and 60 minutes) for automated operation.



3 Gear Backrest Adjustment



Backrest Adjustment

Figure 4: Demonstration of the 3-gear backrest adjustment, allowing the seat to recline to different positions for baby's comfort.

3. SETUP AND ASSEMBLY

Assembly of the INFANS 2-in-1 Baby Swing and Bouncer is designed to be straightforward. Please follow the detailed instructions provided in the included assembly guide. Ensure all components are securely connected before placing your child in the product.

For convenient storage or transport, the swing can be easily folded into a compact size. Refer to the assembly guide for specific folding instructions.

Convenient Storage and Carrying



Figure 5: The swing's design allows for convenient folding, reducing its footprint for storage or portability.

4. OPERATING INSTRUCTIONS

4.1 Powering the Unit

- **AC Adapter:** For continuous use, connect the provided AC adapter to the swing and a standard wall outlet. This eliminates the need for batteries.
- **Battery Power:** For portability, the swing can also operate on batteries (type and quantity specified in the assembly guide). Ensure batteries are correctly installed.

4.2 Swing and Music Functions

- **Swing Speed:** Use the control panel or remote control to select one of the 5 available swing speeds.
- **Music Playback:** Activate built-in melodies via the control panel or remote. Adjust volume as desired.
- **Timer Settings:** Set the swing to operate for 15, 30, or 60 minutes using the control panel or remote. The swing will

automatically stop after the selected duration.

4.3 Seat Adjustment

- **Recline Positions:** Adjust the seat to one of the 3 recline positions to suit your baby's comfort, whether for active play or nap time.
- **Converting to Bouncer/Stationary Seat:** To convert the swing into a bouncer or stationary seat, detach the seat from the swing frame and deploy the support frame as indicated in the assembly guide.

5. MAINTENANCE

Regular cleaning and maintenance will ensure the longevity and hygiene of your INFANS Baby Swing and Bouncer.

- **Fabric Care:** The seat pad and pillow are removable for cleaning. Refer to the care tags on the fabric for specific washing instructions (typically machine washable on a gentle cycle with mild detergent).
- **Frame Cleaning:** Wipe down the frame and plastic components with a damp cloth and mild soap. Do not use abrasive cleaners.
- **Storage:** When not in use for extended periods, fold the swing for compact storage in a dry, cool place away from direct sunlight.

6. TROUBLESHOOTING

If you encounter any issues with your INFANS Baby Swing and Bouncer, please refer to the following common troubleshooting tips:

- **Swing Not Operating:**
 - Ensure the power adapter is securely plugged into both the swing and a working electrical outlet.
 - If using batteries, check that they are new, correctly inserted, and not depleted.
 - Verify that the swing is not overloaded beyond the maximum weight capacity of 22 pounds.
- **No Sound/Music:**
 - Check the volume settings on the control panel or remote control.
 - Ensure the unit is powered on.
- **Remote Control Not Responding:**
 - Check and replace the remote control batteries if necessary.
 - Ensure there are no obstructions between the remote and the swing's receiver.

For issues not covered here, please contact INFANS customer support.

7. PRODUCT SPECIFICATIONS

Attribute	Detail
Product Dimensions (L x W x H)	25" x 29" x 26"
Maximum Weight Recommendation	22 Pounds
Applicable Age	0-6 Months

Material Composition	Iron, Cotton
Color	Light Pink
Portability	Yes (Foldable)



Figure 6: Visual representation of the product dimensions for both the swing and the detached bouncer.

8. SAFETY INFORMATION

Your child's safety is paramount. Please adhere to the following safety guidelines:

- Always use the five-point safety harness to secure your baby in the swing or bouncer.
- Never leave your child unattended in the swing or bouncer.
- Do not use the product if any parts are damaged or missing.

- Ensure the product is placed on a flat, stable surface away from stairs, heat sources, and cords.
- Do not exceed the maximum weight limit of 22 pounds or use for children older than 6 months.
- Keep small parts and packaging materials away from children to prevent choking hazards.

9. WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please contact INFANS customer service directly. Refer to the contact details provided with your purchase documentation or visit the official INFANS website.

INFANS Official Store: [Visit the INFANS Store on Amazon](#)

© 2024 INFANS. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question