

Nuwave Medley XL

Nuwave Medley XL Digital Electric Skillet Instruction Manual

Model: Medley XL

1. INTRODUCTION

Thank you for choosing the Nuwave Medley XL Digital Electric Skillet. This appliance is designed to provide versatile and precise cooking for a variety of meals. With its 7-quart capacity, advanced heating technology, and durable G11 nonstick ceramic coating, the Medley XL offers an enhanced cooking experience. Please read this manual thoroughly before first use to ensure safe and optimal operation.



The Nuwave Medley XL Electric Skillet is a versatile appliance featuring digital control, ceramic coating, and multi-functional capabilities.

2. IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse the cord, plugs, or heating probe in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended household use.



This image highlights the non-toxic, PFAS-free, lead-free, and cadmium-free construction of the skillet, emphasizing safe cooking.

3. WHAT'S IN THE BOX

Your Nuwave Medley XL Digital Electric Skillet package includes the following components:

- 1 x Nuwave Medley XL Electric Skillet Base
- 1 x Tempered Glass Lid
- 1 x Digital Temperature Control Probe

- 1 x Instruction Manual
- 1 x Recipe Book



The main product image shows the Nuwave Medley XL Digital Electric Skillet with its glass lid and digital temperature control.

4. SETUP

Before using your Nuwave Medley XL Digital Electric Skillet for the first time, follow these steps:

1. **Unpack Components:** Carefully remove all parts from the packaging. Retain packaging for future storage or transport.
2. **Wash Skillet and Lid:** Wash the skillet and glass lid with warm, soapy water. Rinse thoroughly and dry completely. *(Note: The digital temperature control probe should never be immersed in water.)*
3. **Attach Digital Temperature Control:** Insert the digital temperature control probe firmly into the receptacle on the side of the skillet. Ensure it is fully seated.
4. **Place on a Stable Surface:** Position the skillet on a dry, level, heat-resistant surface away from flammable materials.

Your browser does not support the video tag.

This video demonstrates the unboxing and initial assembly of the Nuwave Medley XL Digital Electric Skillet, including attaching the temperature control probe and heat shield.



This image illustrates the M-shaped heating element and heat shield design, which ensures even heat distribution and prevents cold spots.

5. OPERATING INSTRUCTIONS

The Nuwave Medley XL Digital Electric Skillet offers precise temperature control and versatile cooking options. Follow these steps for operation:

1. **Connect to Power:** Plug the digital temperature control probe into a standard 120V AC electrical outlet. The display will show "OFF".
2. **Set Temperature:** Turn the knob on the digital control to adjust the desired cooking temperature. The temperature can be set from 100°F to 425°F in 5-degree increments. The display will show the set temperature.
3. **Set Cooking Time (Optional):** If a specific cooking time is desired, press the knob once to switch to time setting mode. Turn the knob to adjust the hours and minutes. Press again to confirm.
4. **Preheating:** Allow the skillet to preheat to the set temperature. The display will indicate when the desired temperature is reached.
5. **Cooking:** Add food to the skillet. The precise temperature control will maintain consistent heat throughout the cooking process.
6. **Finish Cooking:** Once cooking is complete, turn the knob to "OFF" or unplug the unit. The digital control has an auto-off safety feature when disconnected.

Your browser does not support the video tag.

This video provides a step-by-step guide on how to operate the Nuwave Medley XL Digital Electric Skillet, including setting temperature and cooking time.



This image shows the digital temperature control unit, highlighting its 5-degree increment adjustments from 100°F to 425°F.



This image demonstrates the versatility of the skillet for various cooking methods such as frying, searing, sautéing, simmering, and slow cooking.



This image details the 7-quart capacity and dimensions of the skillet, showing examples of meals it can accommodate for 2-8 people.

6. CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your Nuwave Medley XL Digital Electric Skillet and

ensure optimal performance.

1. **Always Unplug and Cool:** Before cleaning, always unplug the digital temperature control from the wall outlet and allow the skillet to cool completely.
2. **Remove Digital Temperature Control:** Detach the digital temperature control probe from the skillet. This part is not submersible.
3. **Hand Wash Skillet and Lid:** Wash the skillet and glass lid with warm, soapy water using a soft sponge or cloth. The G11 Duralon ceramic nonstick coating is designed for easy cleaning. Avoid abrasive cleaners, scouring pads, or metal utensils that can damage the nonstick surface.
4. **Rinse and Dry:** Rinse the skillet and lid thoroughly with clean water and dry completely before storing.
5. **Clean Digital Control:** Wipe the digital temperature control probe with a damp cloth. Do not immerse in water.
6. **Storage:** Store the skillet and its components in a dry place. Avoid stacking heavy items on top of the skillet to prevent damage to the nonstick surface.

Your browser does not support the video tag.

This video showcases the nonstick properties of the skillet and demonstrates how easily food slides off, simplifying cleanup.



This image illustrates the ease of cleaning the skillet's Duralon G11 nonstick ceramic coating with a simple wipe.



This image provides four key maintenance tips: use non-abrasive utensils, allow to cool before washing, clean gently, and store properly.

7. TROUBLESHOOTING

If you encounter any issues with your NuWave Medley XL Digital Electric Skillet, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Skillet does not heat up.	Not plugged in correctly; Digital control not fully inserted; Power outlet malfunction.	Ensure the power cord is securely plugged into a working outlet. Verify the digital control probe is fully inserted into the skillet's receptacle. Test the outlet with another appliance.
Uneven heating or cold spots.	Incorrect temperature setting; Skillet not preheated sufficiently.	Ensure the desired temperature is set correctly. Allow adequate time for the skillet to preheat completely before adding food.
Food sticks to the surface.	Insufficient oil/fat (if recipe requires); High heat for too long; Damaged nonstick coating.	While the coating is nonstick, some recipes may benefit from a small amount of oil. Avoid excessively high temperatures for extended periods. Ensure only non-metal utensils are used to protect the coating.
Digital display shows an error code.	Malfunction with the digital temperature control.	Unplug the unit, wait a few minutes, and plug it back in. If the error persists, contact customer support.

8. SPECIFICATIONS

Key technical specifications for the Nuwave Medley XL Digital Electric Skillet:

- **Model:** Medley XL
- **Capacity:** 7 Quarts
- **Temperature Range:** 100°F to 425°F (in 5°F increments)
- **Material:** Duralon G11 Nonstick Ceramic Coating
- **Power:** 1500 Watts
- **Voltage:** 120 Volts
- **Product Dimensions:** 12.3"D x 19.47"W x 4.5"H
- **Item Weight:** 5.04 Kilograms
- **Special Features:** Hand Wash Only, Temperature Control, Vented Tempered Glass Lid, Cool-Touch Handles

9. WARRANTY AND SUPPORT

Your Nuwave Medley XL Digital Electric Skillet comes with a **1-year Limited Manufacturer's Warranty**. This warranty covers defects in material and workmanship under normal household use from the date of purchase.

For warranty claims, technical assistance, or general inquiries, please contact Nuwave Customer Support. Keep your proof of purchase for warranty validation.

Nuwave Customer Support:

- Refer to the contact information provided in your product packaging or visit the official Nuwave website for the most current support details.