

[Manuals.plus](#) /

› [VINGLI](#) /

› VINGLI Outdoor Glider Set (Model VL-G56001386x2) User Manual

VINGLI VL-G56001386x2

VINGLI Outdoor Glider Set User Manual

Model: VL-G56001386x2

1. INTRODUCTION

Thank you for choosing the VINGLI Outdoor Glider Set. This manual provides essential information for the safe assembly, operation, and maintenance of your new glider. Please read it thoroughly before use and retain it for future reference.



Image 1: VINGLI Outdoor Glider Set (Model VL-G56001386x2)

This image displays two VINGLI outdoor gliders. Each glider features a sturdy black metal frame and comfortable brown sling fabric for the seat and backrest. The design includes curved armrests and a smooth rocking mechanism, suitable for outdoor use.

2. SAFETY INFORMATION

- Read all instructions carefully before assembly and use.
- Ensure all components are securely fastened before each use.
- Do not exceed the maximum weight capacity of 330 lbs (150 kg) per glider.
- Keep children and pets away from the assembly area.
- Use on a flat, stable surface to prevent tipping.
- Avoid standing on the glider.
- Inspect the glider regularly for any signs of wear or damage. Discontinue use if damage is found.

3. PACKAGE CONTENTS

Before beginning assembly, verify that all parts listed below are present and undamaged. If any parts are missing or damaged, contact customer support.

- Glider Frame Components (Powder-coated steel)
- Sling Fabric Seats and Backrests
- Stainless Steel Rocking Arms
- Hardware Pack (Bolts, washers, nuts, Allen wrench)
- Instruction Manual

4. SETUP AND ASSEMBLY

Assembly of the VINGLI Outdoor Glider is designed to be straightforward. Follow these steps carefully. It is recommended to assemble with two people.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, soft surface to prevent scratches.
2. **Identify Parts:** Refer to the included parts diagram (if applicable) to identify each component.
3. **Assemble Base Frame:** Connect the main frame sections using the provided bolts and an Allen wrench. Do not fully tighten bolts until all sections are aligned.
4. **Attach Rocking Mechanism:** Secure the stainless steel rocking arms to the base frame. Ensure smooth movement before tightening.
5. **Install Seat and Backrest Fabric:** Slide or attach the sling fabric seats and backrests onto the designated frame sections. Ensure they are taut and securely fastened.
6. **Final Tightening:** Once all components are in place and aligned, fully tighten all bolts. Do not overtighten.
7. **Stability Check:** Gently rock the glider to ensure stability and smooth operation.

Note: Detailed instructions and diagrams are included in the physical manual provided with your product.

5. OPERATING INSTRUCTIONS

The VINGLI Outdoor Glider is designed for comfortable and smooth outdoor relaxation.

- **Seating:** Sit gently on the glider, ensuring your weight is evenly distributed.
- **Gliding Motion:** Use your feet to initiate a gentle back-and-forth gliding motion. The stainless steel rocking arms are designed for silent and smooth performance.
- **Ergonomic Design:** The higher backrest and ergonomic design are intended to reduce body fatigue during use.
- **Outdoor Use:** This glider is suitable for use in yards, balconies, and other outdoor spaces.

6. MAINTENANCE

Proper maintenance will extend the life and appearance of your VINGLI Outdoor Glider.

- **Cleaning:** The powder-coated steel frame and durable sling fabric are designed to resist rust, fading, and moisture. Clean with a mild soap and water solution and a soft cloth. Rinse thoroughly and allow to air dry.
- **Inspection:** Periodically check all bolts and connections to ensure they remain tight. Retighten as necessary.
- **Storage:** While weatherproof, storing the glider in a covered area during harsh weather conditions or off-season will further protect it and prolong its lifespan.
- **Avoid Harsh Chemicals:** Do not use abrasive cleaners, bleach, or strong detergents, as these can damage the finish and fabric.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Glider does not rock smoothly.	Loose connections; obstruction in rocking mechanism.	Check and tighten all bolts. Ensure no debris is obstructing the rocking arms.
Squeaking sound during use.	Friction in moving parts; loose bolts.	Apply a small amount of silicone-based lubricant to moving joints. Tighten all bolts.
Glider feels unstable.	Uneven surface; loose assembly.	Ensure the glider is placed on a flat, level surface. Recheck and tighten all assembly bolts.

8. SPECIFICATIONS

- Brand:** VINGLI
- Model Name:** Outdoor Glider
- Model Number:** VL-G56001386x2
- Color:** Brown
- Product Dimensions:** 22.83"D x 22.83"W x 39.17"H
- Item Weight:** 21.7 pounds (per glider)
- Material:** Powder-coated steel frame, durable sling fabric
- Special Features:** Arm Rest, Back Support, Ergonomic, Heavy Duty, High Back
- Weight Capacity:** Up to 330 lbs (per glider)
- Assembly Required:** Yes, minimal assembly

9. WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the documentation included with your purchase or visit the official VINGLI website. If you have any questions or require assistance, please contact VINGLI customer service.

VINGLI Official Store: [Visit VINGLI Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question