

[Manuals.plus](#) /

› [COBIZI](#) /

› COBIZI 10x30 Pop Up Canopy Tent Instruction Manual

COBIZI 10x30 canopy

COBIZI 10x30 Pop Up Canopy Tent Instruction Manual

Model: 10x30 canopy

INTRODUCTION

Thank you for choosing the COBIZI 10x30 Pop Up Canopy Tent. This manual provides essential information for the safe and efficient assembly, operation, maintenance, and troubleshooting of your canopy tent. Please read these instructions carefully before use and retain them for future reference.



COBIZI 10x30 Pop Up Canopy Tent set up for an outdoor event.

SAFETY INFORMATION

Important Safety Precautions:

- Always secure the tent with sandbags, ropes, and stakes when in use.
- Do not use the canopy in winds exceeding 20 mph or in heavy rain.
- Always follow local weather guidelines and regulations regarding outdoor shelters.
- Ensure all locking mechanisms are fully engaged during setup to prevent collapse.
- Keep children and pets away from the canopy during assembly and disassembly.
- Avoid placing heat sources or open flames inside or near the canopy.

PACKAGE CONTENTS

Verify that all components listed below are present and undamaged before beginning assembly. If any parts are missing or damaged, please contact customer support.

- 1 x Folding Shelter Tent Frame
- 1 x Top Canopy Fabric

- 8 x Removable Sidewalls (5 with arched windows, 3 with central zippers)
- 4 x Sandbags
- 8 x Ropes
- 16 x Stakes
- 1 x Carry Bag



Top Canopy



Side Wall Cloth
(With Zipper)x3



Side Wall Cloth
(With Window)x5



Frame




Carry Bag



Sandbag



Rope x8

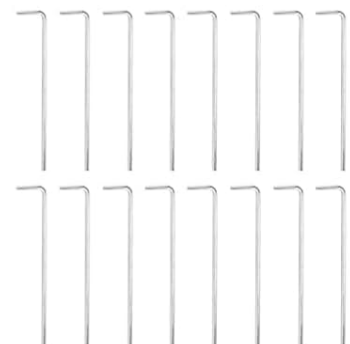

Foot Pins x16

All components included in the COBIZI 10x30 Pop Up Canopy Tent package.

SETUP INSTRUCTIONS

Assembly requires a minimum of four people for safe and efficient setup. No tools are required.

Step-by-Step Assembly:

1. **Open the Frame:** With a person on each end, lift and partially pull the canopy frame apart.



Step 1: Partially open the canopy frame.

2. **Engage the Hub:** Place one hand on the upper frame and use the other hand to push the hub straight up until it clicks into place.



Step 2: Secure the central hub mechanism.

3. **Attach Canopy Top:** Unfold the canopy top and place it over the frame. Secure the canopy top to the frame using the hook-and-loop fasteners.



Step 3: Place and secure the canopy top.

4. **Adjust Height:** Press the red button on each leg and raise or lower the canopy to your desired height. There are three adjustable height settings: 77 inches, 79 inches, and 81 inches.



Step 4: Adjust the canopy legs to the desired height.

5. **Attach Sidewalls:** Attach the desired number of sidewalls using the hook-and-loop fasteners.



Step 5: Attach sidewalls as needed.

6. **Secure the Canopy:** Insert a stake into the foot of each canopy leg. Measure out from the each leg to a proper distance and secure sixteen stakes to the ground. Tie the pre-attached ropes to the stakes in the ground. Fill the four sandbags with sand and attach them to the canopy legs for additional stability.



Step 6: Secure the canopy using stakes, ropes, and sandbags.

Setup Video Guide:

Your browser does not support the video tag.

Detailed video guide demonstrating the complete setup process for the COBIZI 10x30 Pop Up Canopy Tent.

Your browser does not support the video tag.

Quick overview of the COBIZI 10x30 Pop Up Canopy Tent's pop-up functionality.

OPERATING INSTRUCTIONS

Height Adjustment:

The canopy features three adjustable height settings: 77 inches, 79 inches, and 81 inches. To adjust the height, press the red button on each leg and carefully slide the leg to the desired position until it locks into place. Ensure all four legs are set to the same height for stability.

Sidewall Configuration:

The canopy includes eight removable sidewalls: five with arched windows and three with central zippers. These can be attached or removed as needed using the hook-and-loop fasteners to adapt to different weather conditions or event requirements. The zippered sidewalls allow for easy entry and exit.



Various sidewall configurations for the canopy tent.

MAINTENANCE

Cleaning:

- Clean the canopy fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners.
- Rinse thoroughly and allow the fabric to air dry completely before storage to prevent mildew.
- Wipe down the frame with a damp cloth to remove dirt and debris.

Storage:

- Ensure the canopy tent is completely dry before folding and storing it in the carry bag.
- Store the canopy in a cool, dry place away from direct sunlight and extreme temperatures.

- Periodically inspect the frame, fabric, ropes, and stakes for wear or damage. Replace any damaged parts as needed.

TROUBLESHOOTING

- **Poles Snapping or Frame Damage:** Ensure the canopy is properly secured with all provided anchoring equipment (stakes, ropes, sandbags). Avoid using the canopy in high winds or severe weather conditions. Improper setup or use in adverse weather can lead to frame damage.
- **Missing Parts:** Upon receiving your canopy, immediately check all package contents against the provided list. If any parts are missing, contact customer support with your purchase details for assistance.
- **Water Accumulation on Top:** Ensure the canopy top is taut and properly secured to the frame to prevent water pooling. The fabric is waterproof, but prolonged pooling can stress the material. The design includes features to help prevent waterlogging.



Detail of the canopy's anti-waterlogging design.

- **Difficulty Adjusting Height:** Ensure the red release buttons on each leg are fully depressed when attempting to adjust the height. Do not force the legs; if they are stuck, check for any obstructions or debris in the locking mechanism.

SPECIFICATIONS

Brand	COBIZI
Model Number	10x30 canopy
Material	Alloy Steel (Frame), 420D Oxford cloth (Top)
Color	Black
Product Dimensions (L x W x H)	354"L x 118"W x 82"H (10ft x 30ft x 6.8ft)
Floor Area	27 Square Meters
Adjustable Height	77 inch, 79 inch, 81 inch
UV Protection	UPF 50+ (99% UV reflection)
Water Resistance Level	Waterproof (PU2200)
Required Assembly	Yes

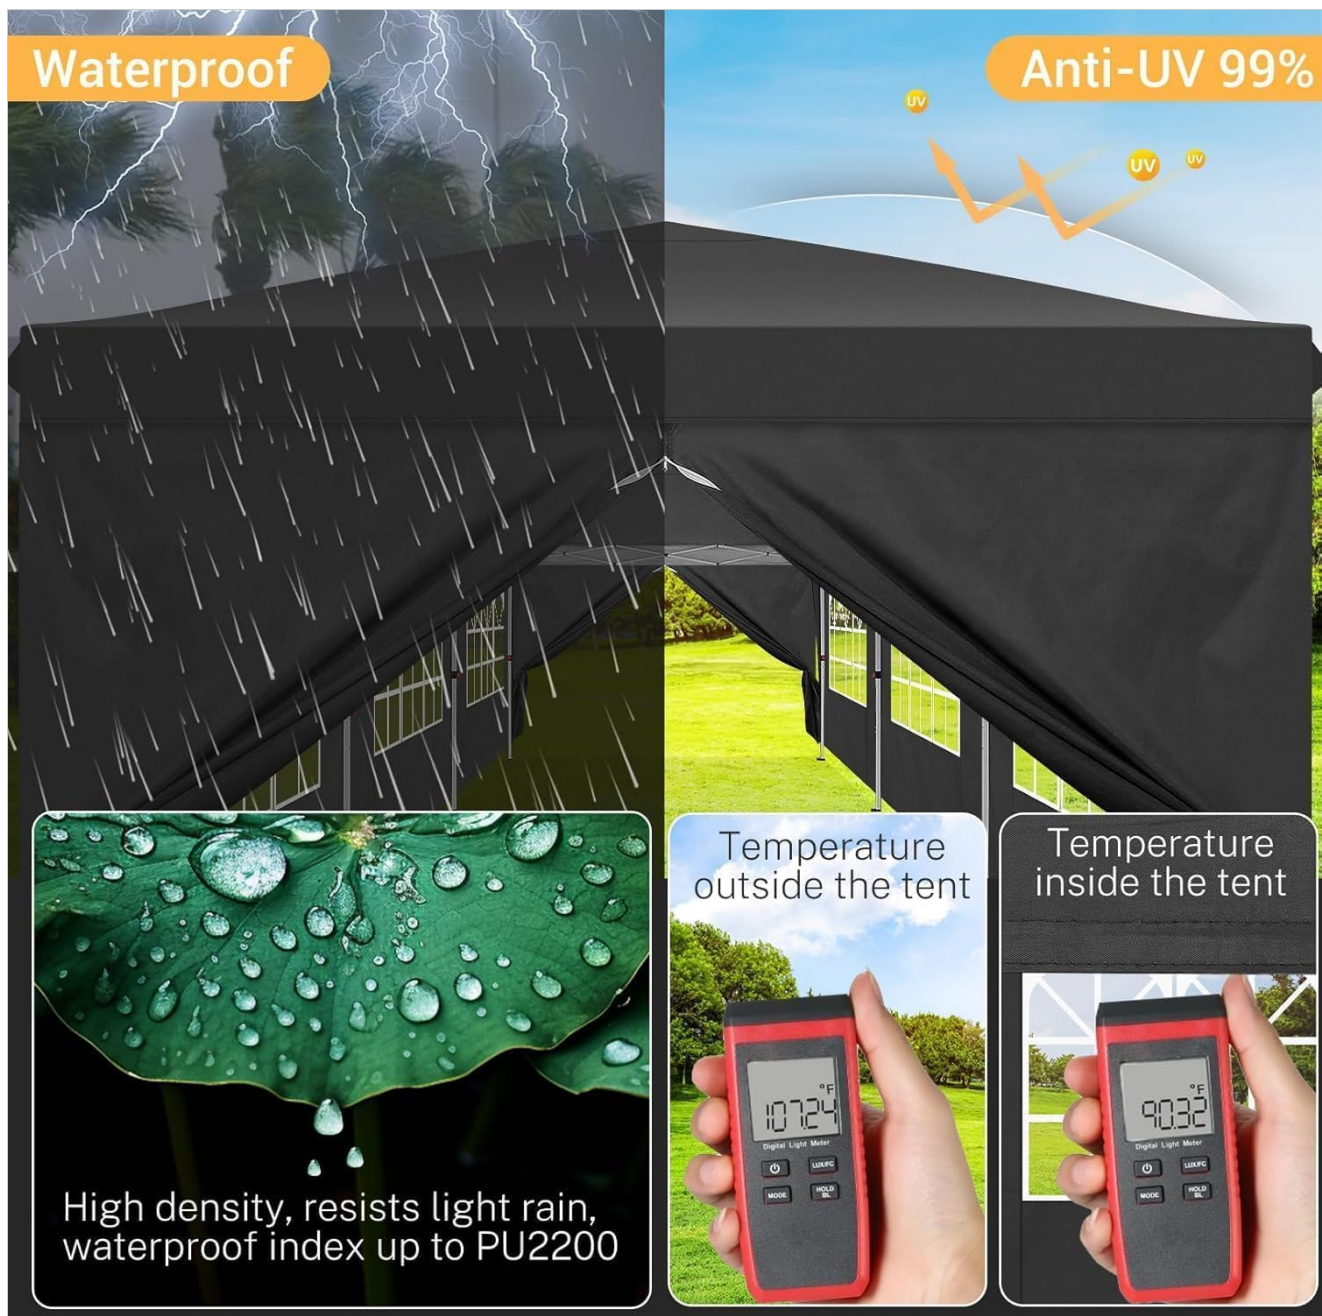


Illustration demonstrating the waterproof and UV protection features of the canopy fabric.

COBIZI: 10X30 POP UP CANOPY WATERPROOF



50+
UV Protection



100%
Water Resistant



4 Level
Wind Windproof

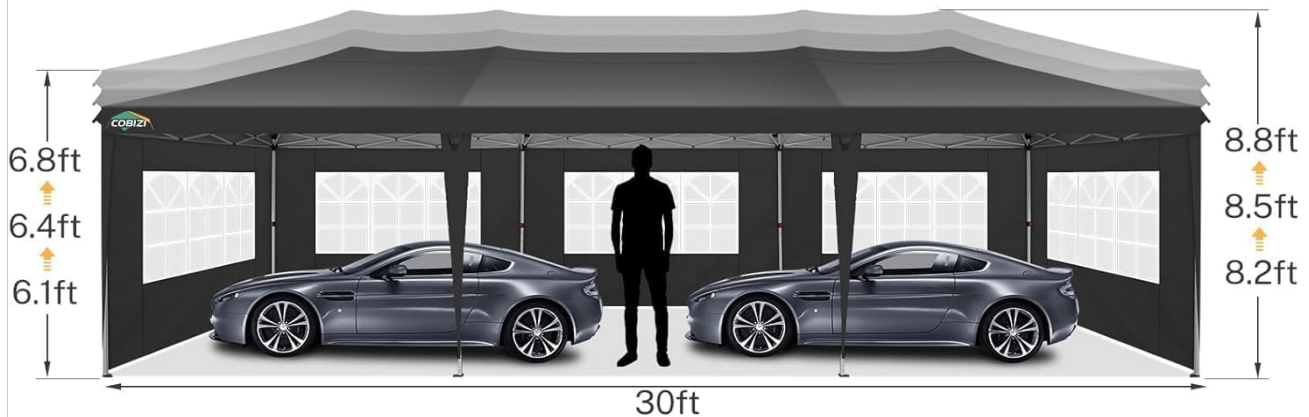


Diagram showing the dimensions of the 10x30 canopy tent.

WARRANTY AND SUPPORT

For warranty information, product support, or to inquire about replacement parts, please refer to the contact information provided at the point of purchase or visit the official COBIZI website. Please have your model number (10x30 canopy) and purchase date available when contacting support.