

[Manuals.plus](#) /

› [SIMPLETASTE](#) /

› SIMPLETASTE 4-in-1 Electric Milk Frother and Steamer User Manual

SIMPLETASTE Electric Milk Frother

SIMPLETASTE 4-in-1 Electric Milk Frother and Steamer User Manual

Model: Electric Milk Frother

1. PRODUCT OVERVIEW

The SIMPLETASTE 4-in-1 Electric Milk Frother and Steamer is designed to create rich, creamy milk foam for a variety of beverages, including lattes, cappuccinos, and macchiatos. This versatile device offers four distinct functions: warm dense foam, warm airy foam, cold foam, and milk warming.



Image 1.1: The SIMPLETASTE 4-in-1 Electric Milk Frother, showcasing its sleek dark blue design.

2. SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not immerse the frother base or power cord in water or other liquids.
- Ensure the frother is placed on a stable, flat surface during operation.
- Keep out of reach of children.
- Do not operate the appliance with a damaged cord or plug.
- Unplug from outlet when not in use and before cleaning.

3. SETUP

1. **Unpack:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, clean the interior of the frother jug and the whisk with warm, soapy water. Rinse thoroughly and dry. Wipe the exterior of the frother jug and the power base with a damp cloth.
3. **Whisk Placement:** Ensure the frothing whisk is securely placed on the bottom of the frother jug. The whisk is magnetic and will attach to the central pin.
4. **Power Connection:** Place the frother jug onto the power base and plug the power cord into a suitable electrical outlet.



Image 3.1: The milk frother, its power base, and included frothing whisks, as found in the packaging.

4. OPERATING INSTRUCTIONS

The frother features a simple one-button control with different tap modes for various functions.

1. **Add Milk:** Pour milk into the frother jug. Observe the internal MAX and MIN level indicators. For frothing, do not exceed the lower MAX line (3.9 oz/115ml). For warming milk without frothing, do not exceed the upper MAX line (8.2 oz/240ml). For best frothing results, use milk with a fat content greater than 3%.
2. **Select Function:** Place the frother jug onto the powered base. Wait 3-5 seconds before pressing the button. Press the center of the button with your thumb to select the desired mode:

- **Tap Once (Red Light):** Warm Dense Foam Frothing
 - **Tap Twice (Green Light):** Warm Airy Foam Frothing
 - **Tap Three Times (Purple Light):** Warming Milk (no frothing)
 - **Tap Four Times (Blue Light):** Cold Milk Foam Frothing
3. **Start Operation:** The selected indicator light will illuminate. The frother will automatically start and stop when the process is complete.
 4. **Serve:** Carefully remove the frother jug from the base and pour the frothed or warmed milk into your beverage.



Image 4.1: Visual guide to the one-tap operation, showing the different colored indicator lights for each function.

Large Capacity

8.2oz/240ml

Max-level for Warming

3.9oz/115ml

Max-level for Frothing Milk

Min-level for Frothing Milk



Image 4.2: Close-up of the frother's interior, highlighting the maximum fill lines for warming (8.2oz/240ml) and frothing (3.9oz/115ml).

4 in 1 Multifunctional

Premium nonstick coating makes cleaning a breeze



Image 4.3: Examples of beverages created with the 4-in-1 functions: Warm Dense Foam, Warm Airy Foam, Warming Milk, and Cold Foam.

Your browser does not support the video tag.

Video 4.1: An official product video demonstrating the SIMPLETASTE 4-in-1 Electric Milk Frother and Steamer in action, showing its various functions and ease of use.

5. MAINTENANCE AND CLEANING

- **Hand Wash Only:** The frother jug and whisk are not suitable for dishwasher use. Hand wash them with warm, soapy water after each use.
- **Non-Stick Interior:** The non-stick coating makes cleaning easy. Use a soft sponge or cloth to avoid scratching the surface.

- **Detachable Base:** The power base should never be immersed in water. Wipe it clean with a damp cloth.
- **Dry-Burn Protection:** The device includes dry-burn protection for safety.



Image 5.1: Demonstrating the easy hand-washing process for the frother's interior.

6. TROUBLESHOOTING

- **Frother Not Starting:** Ensure the power base is correctly plugged in and the frother jug is properly seated on the base. Wait 3-5 seconds after placing the jug on the base, then press the center of the power button firmly.
- **Poor Foam Quality:** For optimal foam, use fresh milk with a fat content greater than 3%. Ensure milk levels are within the specified MAX/MIN lines for frothing.

- **Milk Not Heating:** Verify that the correct mode (Purple light for warming milk, Red/Green for warm foam) has been selected.
- **Device Stops Unexpectedly:** The frother has an auto shut-off feature when the cycle is complete or if it detects overheating (dry-burn protection). Allow the device to cool down if it stops prematurely due to overheating.

7. SPECIFICATIONS

Feature	Detail
Brand	SIMPLETASTE
Model Name	Electric Milk Frother
Color	Blue
Material	Plastic
Special Feature	Auto Shut-Off
Max Capacity (Warming)	240 ml (8.2 oz)
Max Capacity (Frothing)	115 ml (3.9 oz)
Product Care	Hand Wash Only

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the contact details provided in your product packaging or visit the official SIMPLETASTE website. Keep your purchase receipt as proof of purchase for any warranty claims.