

[Manuals.plus](#) /

› [WSTER](#) /

› WSTER WS-592 Bluetooth Speaker Instruction Manual

WSTER WS-592

WSTER WS-592 Bluetooth Speaker Instruction Manual

INTRODUCTION

This manual provides comprehensive instructions for the WSTER WS-592 Bluetooth Speaker. This portable speaker features a unique supercar design, offering HD sound with TWS stereo support, FM radio, LED party lights, USB/TF card playback, and hands-free calling capabilities. Please read this manual carefully before use to ensure proper operation and to maximize your enjoyment of the product.



Figure 1: WSTER WS-592 Bluetooth Speaker (White Model)

PACKAGE CONTENTS

Ensure all items are present in the package:

- WSTER WS-592 Bluetooth Speaker
- Power Cable (USB-A to USB-C with 3.5mm AUX)
- Quick Start Guide

WS-592 CAR SPEAKER



WSTER

« Enjoy Music Enjoy Life »

Figure 2: Speaker and included accessories.

PRODUCT OVERVIEW

The WS-592 speaker is designed to resemble a supercar, featuring functional elements and controls integrated into its rear panel.

Key Features:

- **Bluetooth 5.4 Connectivity:** For wireless audio streaming.
- **TWS Stereo Support:** Pair two units for immersive stereo sound.
- **FM Radio:** Built-in radio tuner for local stations.
- **LED Party Lights:** Integrated lights that pulse with music.
- **USB/TF Card Playback:** Direct playback from USB drives or TF memory cards.
- **Hands-Free Calling:** Built-in microphone for phone calls.
- **Type-C Charging:** Modern and convenient charging port.

Controls and Ports:

The rear of the speaker houses all control buttons and ports:



Figure 3: Rear panel controls and ports.

1. **Mode Button:** Short press to switch between Bluetooth, FM Radio, AUX, and USB/TF card playback modes.
2. **Play/Pause Button:** Short press to play/pause music. In Bluetooth mode, short press to answer/end calls. Long press to redial the last number.
3. **ON/OFF Switch:** Power switch for the device.
4. **USB-A Port:** For connecting a USB flash drive for music playback.
5. **AUX Port:** For connecting external audio devices via a 3.5mm audio cable.
6. **DC5V (USB-C) Charging Port:** For charging the speaker.
7. **Previous Track / Volume Down Button:** Short press for previous track. Long press to decrease volume.
8. **Next Track / Volume Up Button:** Short press for next track. Long press to increase volume.
9. **TF Card Slot:** For inserting a TF (MicroSD) memory card for music playback.

Your browser does not support the video tag. Please update your browser to view this content.

Video 1: A brief demonstration of the WSTER WS-592 speaker's design and features.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C cable to the DC5V charging port on the rear of the speaker and the USB-A end to a compatible USB power adapter (not included). The charging indicator light will illuminate during charging and turn off once fully charged. A full charge takes approximately 4 hours.

2. Bluetooth Pairing

1. Turn on the speaker using the ON/OFF switch. The speaker will enter Bluetooth pairing mode automatically, indicated by an audible prompt.
2. On your mobile device, enable Bluetooth and search for available devices.
3. Select "WS-592" from the list of devices.
4. Once connected, the speaker will provide an audible confirmation.

3. TWS (True Wireless Stereo) Pairing

To achieve true wireless stereo sound, you can pair two WS-592 speakers:

1. Ensure both WS-592 speakers are turned off.
2. Turn on both speakers simultaneously. They will enter Bluetooth pairing mode.
3. Double-click the Play/Pause button on one of the speakers. You will hear a

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question