

[Manuals.plus](#) /

> [BREEZOME](#) /

> BREEZOME 8L Warm & Cool Mist Ultrasonic Humidifier MG16JS User Manual

BREEZOME MG16JS

BREEZOME 8L Warm & Cool Mist Ultrasonic Humidifier MG16JS User Manual

Model: MG16JS

1. INTRODUCTION

Thank you for choosing the BREEZOME 8L Warm & Cool Mist Ultrasonic Humidifier. This device is designed to enhance your indoor air quality by providing optimal humidity levels, offering both warm and cool mist options. Please read this manual thoroughly before operation to ensure safe and efficient use of your humidifier.

2. IMPORTANT SAFETY INFORMATION

- Always place the humidifier on a firm, flat, water-resistant surface.
- Do not place the humidifier near heat sources or in direct sunlight.
- Use distilled or purified water to prevent mineral buildup and white dust.
- Do not add essential oils directly into the water tank; use the dedicated aromatherapy tray.
- Unplug the humidifier before refilling, cleaning, or moving.
- Keep out of reach of children and pets.
- Do not block the mist outlet or air intake.
- The warm mist function heats water to 212°F; avoid direct contact with the mist to prevent burns.
- The anti-tip sensor will automatically shut off the unit if it is bumped or tilted.

3. PACKAGE CONTENTS

Upon unpacking, please ensure all items are present and in good condition:

- BREEZOME 8L Humidifier Unit

- User Manual
- Aromatherapy Pad (pre-installed in tray)
- Power Cord (attached)



Image: The BREEZOME 8L Humidifier unit, black in color, with a transparent water tank showing a blue light. The control panel is visible at the bottom front.

4. PRODUCT OVERVIEW

The BREEZOME MG16JS humidifier features a sleek design with intuitive controls. Key components include:

- **Top-Fill Water Tank:** 8-liter capacity for extended operation.
- **Integrated Handle:** For easy lifting and carrying of the water tank.
- **Control Panel:** Touch-sensitive buttons for power, mist mode (warm/cool), mist level, auto mode, sleep mode, timer, and light.
- **Digital Display:** Shows current humidity level and settings.
- **360° Rotatable Nozzles:** Dual mist outlets for wide coverage.
- **Aromatherapy Tray:** Located at the base for essential oils.
- **Humidity Sensor:** Built-in sensor for automatic humidity regulation.
- **PTC Ceramic Heater:** For boiling water to produce clean warm mist.



Image: The humidifier displaying both warm mist (orange light) and cool mist (blue light) options, highlighting its dual functionality.

5. SETUP

1. **Unpack:** Carefully remove the humidifier from its packaging. Remove all protective tapes and foam from the unit.
2. **Placement:** Place the humidifier on a flat, stable, and water-resistant surface at least 6 inches (15 cm) away from walls and furniture.
3. **Fill Water Tank:**
 - o Remove the top cover of the humidifier.
 - o Pour distilled or purified water directly into the water tank up to the 'MAX' line. Do not exceed the maximum fill line.
 - o Replace the top cover securely.



Image: A person refilling the humidifier by pouring water directly into the top opening, demonstrating the convenient top-fill design.

4. **Connect Power:** Plug the power cord into a standard 120V AC electrical outlet. The unit will enter standby mode.

6. OPERATING INSTRUCTIONS

The control panel features touch-sensitive buttons for various functions:

- **Power Button:** Touch to turn the humidifier ON or OFF.
- **Mist Mode (Warm/Cool):**
 - Touch the 'Warm' button to activate warm mist. The indicator light will turn orange. The PTC ceramic heater boils water to 212°F before releasing mist at 131°F.
 - Touch the 'Mist' button to activate cool mist. The indicator light will turn blue.



Image: An internal diagram of the humidifier illustrating the PTC ceramic heating element boiling water to 212°F to produce warm mist.

- **Mist Level:** Repeatedly touch the 'Mist' button to cycle through 3 mist output levels (Low, Medium, High).
- **Auto Mode:** Touch the 'Auto' button to activate. The built-in humidistat will detect the room's humidity and automatically adjust the mist output to maintain a humidity level between 40% and 80%.
- **Sleep Mode:** Touch the 'Sleep' button. All display lights will turn off, and the humidifier will operate at a near-silent 25dB in low mist mode for undisturbed rest.
- **Timer:** Touch the 'Timer' button to set an operating duration from 1 to 24 hours. The humidifier will automatically shut off once the set time expires.
- **Light:** Touch the 'Light' button to turn the ambient light ON or OFF.
- **Lock (3s):** Press and hold the 'Lock' button for 3 seconds to lock or unlock the control panel, preventing accidental changes to settings.

Your browser does not support the video tag.

Video: An official BREEZOME video demonstrating the features and operation of the 8L Warm & Cool Mist Humidifier for large rooms.

7. AROMATHERAPY FUNCTION

1. Locate the aromatherapy tray at the bottom front of the humidifier.
2. Press the tray to release it.
3. Add a few drops of your preferred essential oil onto the cotton pad inside the tray.
4. Slide the tray back into the humidifier until it clicks into place.

5. The mist will carry the fragrance throughout the room.

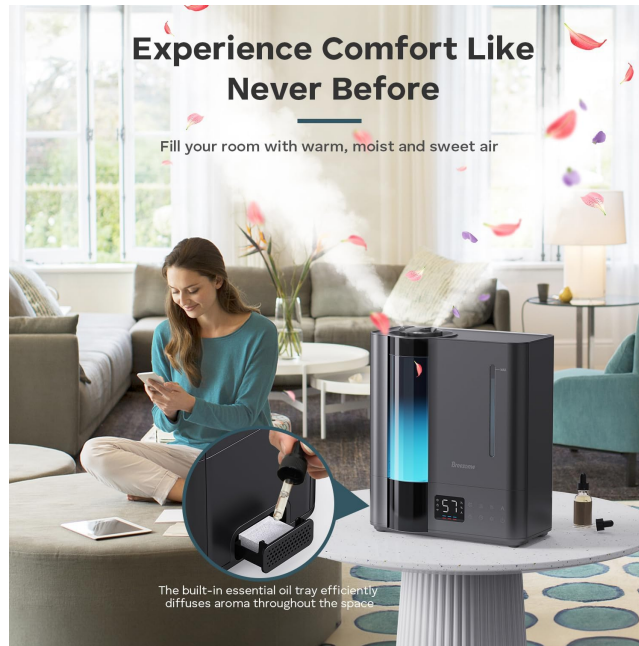


Image: A person demonstrating how to add essential oils to the dedicated aromatherapy tray located at the base of the humidifier.

8. MAINTENANCE AND CLEANING

Regular cleaning is essential for optimal performance and hygiene. Please clean the humidifier every 3-4 days.

1. Daily Maintenance:

- Unplug the unit and empty any remaining water from the tank and base.
- Wipe the tank and base with a soft, damp cloth.
- Refill with fresh distilled water before next use.

2. Weekly Cleaning (for scale removal):

- Unplug the humidifier.
- Remove the top cover and empty the water tank.
- Fill the water tank with 1 cup (240ml) of white vinegar and let it soak for 30 minutes.
- Use a soft brush or cloth to clean any mineral buildup from the tank and heating element.
- Rinse the tank and base thoroughly with clean water until the vinegar smell is gone.
- Do not use bleach or abrasive cleaners.

3. **Filter Maintenance:** Clean the filter located at the bottom of the water tank at least once a week to prevent clogging.

4. **Aromatherapy Tray:** Clean the aromatherapy tray and replace the cotton pad as needed.



Image: A person cleaning the interior of the humidifier's water tank with a cloth, highlighting the wide opening for easy access.

9. TROUBLESHOOTING

Problem	Possible Cause	Solution
No mist or low mist output	Low water level; clogged filter; mineral buildup; mist nozzle blocked.	Refill water tank; clean the filter; descale the unit; ensure mist nozzle is clear.
Unit not turning on	Not plugged in; power outage; anti-tip sensor activated.	Check power connection; ensure unit is upright and stable.
Unusual odor	Dirty water; old water; mineral buildup.	Empty and clean the water tank; use fresh distilled water.
White dust around unit	Using hard water.	Use distilled or purified water. Clean the unit regularly.
Error Code E2	Indicates a potential issue with the unit's operation.	Refer to the full user manual for specific E2 error code resolution or contact customer support.

10. SPECIFICATIONS

- **Brand:** BREEZOME
- **Model Name:** MG16JS
- **Operation Mode:** Ultrasonic
- **Special Feature:** Auto Shut Off, Warm & Cool Mist
- **Color:** Black
- **Water Tank Capacity:** 8 Liters
- **Runtime:** Up to 60 hours (lowest mist setting)
- **Floor Area Coverage:** 975 Square Feet
- **Product Dimensions:** 6.5"D x 12.2"W x 14.54"H

- **Item Weight:** 5.57 Pounds
 - **Voltage:** 120 Volts
 - **Wattage:** 25 watts
 - **Noise Level (Sleep Mode):** 25dB
-

11. WARRANTY AND CUSTOMER SUPPORT

BREEZOME products come with a manufacturer's warranty. For detailed warranty information, product registration, or technical support, please refer to the warranty card included in your package or visit the official BREEZOME website. If you encounter any problems or have questions, please contact BREEZOME customer service for assistance.
