

DECAKILA KUEV008B

DECAKILA KUEV008B 22L Electric Toaster Oven User Manual

Model: KUEV008B

1. INTRODUCTION

Thank you for choosing the DECAKILA KUEV008B 22L Electric Toaster Oven. This appliance is designed for versatile cooking, including toasting, baking, and more. With its 22-liter capacity and adjustable temperature control, it offers precision and convenience for your kitchen needs. Please read this manual thoroughly before first use to ensure safe and efficient operation.

Important Safety Instructions

- Always place the oven on a stable, heat-resistant surface.
- Ensure adequate ventilation around the oven.
- Do not touch hot surfaces. Use oven mitts.
- Unplug from outlet when not in use and before cleaning.
- Do not immerse cord, plug, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use outdoors.

2. PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your DECAKILA KUEV008B Toaster Oven.



Figure 2.1: Front view of the DECAKILA KUEV008B Electric Toaster Oven, showing the main body, glass door, and control panel on the right side.

Control Panel

The control panel features three rotary knobs for temperature, cooking function, and timer settings.



Figure 2.2: Close-up view of the control panel, highlighting the three rotary knobs for temperature, function selection, and timer settings.

1. **Temperature Control Knob:** Adjusts the cooking temperature from 100 °C to 230 °C (210 °F to 450 °F).
2. **Function Selector Knob:** Selects the heating elements to be used (e.g., upper, lower, or both).
3. **Timer Knob:** Sets the cooking time up to 60 minutes. Includes a "STAY ON" function for continuous operation.

Accessories

- **Baking Rack:** For toasting, baking, and grilling.
- **Baking Tray:** For baking and collecting drips.
- **Crumb Tray:** Located at the bottom, removable for easy cleaning.



Figure 2.3: Interior view of the toaster oven, showing the baking rack positioned above the baking tray.



Figure 2.4: The included baking rack, designed for various cooking tasks.



Figure 2.5: The included baking tray, suitable for baking and catching food drippings.

3. SETUP

1. **Unpacking:** Carefully remove the toaster oven and all accessories from the packaging. Remove any protective films or stickers.
2. **Placement:** Place the oven on a flat, stable, and heat-resistant surface. Ensure there is at least 10-15 cm (4-6 inches) of clear space on all sides and above the oven for proper ventilation. Do not place it near flammable materials.
3. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth. Wash the baking rack and tray in warm, soapy water, rinse, and dry thoroughly.
4. **First Use (Burn-off):** To eliminate any manufacturing odors, operate the oven empty for approximately 15 minutes at the maximum temperature (230 °C) with the timer set. Ensure the area is well-ventilated during this process. A slight odor or smoke is normal during initial use.

4. OPERATING INSTRUCTIONS

Follow these steps for general operation of your toaster oven.

1. **Prepare Food:** Place your food on the baking rack or tray.
2. **Insert Accessories:** Slide the baking rack or tray into the desired rack position inside the oven. Use the provided rack handle if needed.



Figure 4.1: Demonstrating the use of the rack handle to safely insert or remove the baking rack.

3. **Close Door:** Ensure the oven door is fully closed.
4. **Set Temperature:** Turn the Temperature Control Knob to your desired temperature (100 °C - 230 °C).
5. **Select Function:** Turn the Function Selector Knob to choose the appropriate heating mode (e.g., upper heat, lower heat, or both).
6. **Set Timer:** Turn the Timer Knob to the desired cooking time (up to 60 minutes). The oven will begin heating.
 - For continuous operation, turn the Timer Knob past the 60-minute mark to the "STAY ON" position. Remember to manually turn the timer knob to "OFF" when cooking is complete in this mode.
7. **Monitor Cooking:** The tempered glass door allows you to monitor your food without opening the oven, helping to maintain consistent temperature.
8. **Completion:** When the timer reaches "OFF", a bell will sound, and the oven will turn off. If using "STAY ON" mode, manually turn the timer to "OFF".
9. **Remove Food:** Carefully remove cooked food using oven mitts and the rack handle to prevent burns.

5. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your toaster oven.

1. **Unplug and Cool:** Always unplug the oven from the power outlet and allow it to cool completely before cleaning.
2. **Crumb Tray:** Pull out the removable crumb tray from the bottom of the oven. Discard crumbs and wash the tray in warm, soapy water. Rinse and dry thoroughly before replacing.
3. **Interior:** Wipe the interior walls, baking rack, and baking tray with a damp cloth and mild detergent. For stubborn stains, use a non-abrasive cleaner. Do not use steel wool or abrasive pads.
4. **Exterior:** Wipe the exterior surfaces with a damp cloth. Do not use abrasive cleaners or polishes.
5. **Glass Door:** Clean the glass door with a soft cloth and glass cleaner.
6. **Do Not Immerse:** Never immerse the main body of the oven, cord, or plug in water or any other liquid.

6. TROUBLESHOOTING

If you encounter any issues with your DECAKILA KUEV008B Toaster Oven, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the oven is securely plugged into a working outlet. Check your household circuit breaker. Turn the timer knob to the desired cooking time or "STAY ON".
Food is not cooking evenly.	Incorrect rack position; overcrowding; uneven food placement.	Adjust rack position for optimal heat distribution. Avoid overcrowding the oven. Arrange food in a single layer for best results.
Excessive smoke during cooking.	Food drippings on heating elements or crumb tray; residue from previous cooking.	Ensure the crumb tray and interior are clean. Use the baking tray to catch drippings. Reduce cooking temperature if food is burning.
Timer bell does not sound.	Timer knob not set correctly.	Ensure the timer knob is turned past the 10-minute mark and then back to the desired time to activate the mechanism. If using "STAY ON", no bell will sound.

If the problem persists after trying these solutions, please contact customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	DECAKILA
Model	KUEV008B
Capacity	22 Liters
Power/Wattage	1000 Watts
Temperature Range	100 °C - 230 °C (210 °F - 450 °F)
Timer	Up to 60 minutes with "STAY ON" function
Material	Stainless steel (heating elements, handle), Steel (casing), Tempered Glass (door)
Color	Black
Product Dimensions (L x W x H)	24 x 26 x 29 cm (approximately 9.4 x 10.2 x 11.4 inches)
Product Weight	4.5 kg (approximately 9.9 lbs)

8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or visit the official DECAKILA website. Keep your purchase receipt as proof of purchase. If you require assistance with your DECAKILA KUEV008B Toaster Oven, please contact DECAKILA customer service through their official channels. Provide your model number (KUEV008B) and a detailed description of the issue for faster service.

Online Support: [Visit the DECAKILA Store on Amazon](#)