

XS24 Pro

SOYES XS24 Pro Mini Smartphone User Manual

Model: XS24 Pro

1. INTRODUCTION

This manual provides essential information for the proper use and maintenance of your SOYES XS24 Pro Mini Smartphone. Please read it thoroughly before operating the device to ensure optimal performance and longevity.

The SOYES XS24 Pro is a compact smartphone featuring a 3.0-inch display, Android 12 operating system, 8GB RAM, and 512GB ROM. It supports 4G networks, dual SIM functionality, Wi-Fi, Bluetooth, and Face ID for secure access.

2. PACKAGE CONTENTS

Verify that all items are present in the package:

- SOYES XS24 Pro Mini Smartphone
- USB Type-C Charging Cable
- User Manual (this document)

If any items are missing or damaged, contact your retailer.

3. DEVICE OVERVIEW

Familiarize yourself with the physical components of your smartphone.



Figure 3.1: Front and Rear View of SOYES XS24 Pro Mini Smartphone. The image displays the front of the phone with its screen showing app icons and the rear with a camera module and a sleek finish.

- **Front Display:** 3.0-inch HD screen for interaction.
- **Front Camera:** Located at the top of the display.
- **Rear Camera Module:** Contains the main camera and a decorative lens.
- **Power Button:** Typically on the side, used to power on/off and wake/sleep the device.
- **Volume Buttons:** Typically on the side, used to adjust audio levels.
- **USB Type-C Port:** For charging and data transfer.
- **SIM Card Slot:** For inserting Nano-SIM cards.

4. SETUP

4.1 Inserting SIM Cards

1. Locate the SIM card slot on the side of the device.
2. Use a SIM ejector tool (if included) to open the SIM tray.
3. Place your Nano-SIM cards into the designated slots on the tray. Ensure they are correctly oriented.
4. Carefully reinsert the SIM tray into the phone.

4.2 Initial Power On and Basic Setup

1. Press and hold the Power button until the device vibrates and the screen lights up.
2. Follow the on-screen prompts to select your language, region, and connect to a Wi-Fi network.
3. Sign in with your Google account or create a new one to access Android services and the Play Store.
4. Set up a screen lock method (PIN, pattern, password, or Face ID).

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Tap:** Select an item or open an app.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move app icons.

5.2 Making Calls and Sending Messages

- Open the "Phone" app to dial numbers or select contacts.
- Open the "Messages" app to compose and send text messages.

5.3 Wi-Fi and Bluetooth Connectivity

- Navigate to *Settings > Network & internet* to manage Wi-Fi connections.
- Navigate to *Settings > Connected devices* to manage Bluetooth connections and pair with other devices.

5.4 Camera Usage

- Open the "Camera" app.
- Tap the shutter button to take photos.
- Switch between front and rear cameras as needed.
- Note: The device features a 2MP front camera and a 5MP rear camera; one rear lens is decorative.

5.5 Face ID

- To set up Face ID, go to *Settings > Security > Face unlock* and follow the on-screen instructions to register your face.
- Once set up, you can unlock your phone by looking at the front camera.

5.6 Charging the Device

- Connect the USB Type-C cable to the phone's charging port and the other end to a compatible USB power adapter.
- The battery indicator on the screen will show charging status.

6. MAINTENANCE

6.1 Cleaning

- Use a soft, lint-free cloth to clean the screen and body of the phone.
- Avoid using harsh chemicals or abrasive materials.

6.2 Software Updates

- Periodically check for system updates to ensure your device has the latest features and security

patches. Go to *Settings > System > System update*

6.3 Battery Care

- Avoid exposing the device to extreme temperatures.
- Do not fully discharge the battery frequently.
- Use only approved chargers and cables.

7. TROUBLESHOOTING

Problem	Solution
Device does not power on.	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.
Cannot connect to Wi-Fi.	Check if Wi-Fi is enabled in settings. Verify the Wi-Fi password. Restart your router and the phone.
Face ID not working.	Ensure your face is well-lit and not obstructed. Re-register your face in settings if the issue persists.
Poor network signal.	Check SIM card insertion. Move to an area with better network coverage. Contact your service provider.

8. SPECIFICATIONS

The following table outlines the key technical specifications of the SOYES XS24 Pro Mini Smartphone:

Feature	Specification
Model	XS24 Pro
Operating System	Android 12.0
Display Size	3.0 Inches
Resolution	480 x 800
RAM	8 GB
Storage Capacity	512 GB
Front Camera	2 MP
Rear Camera	5 MP (main)
Battery Capacity	900mAh
Network Support	4G, 3G
Connectivity	Wi-Fi, Bluetooth, USB Type-C
Dimensions	10 x 5 x 3 cm
Weight	500 g

One handed control over the lightweight body

Fashionable, minimalist, mini and compact

Card like compact design, with a small volume that doesn't take up any space,
Low profile yet showcasing pure grip,
one machine feels comfortable in hand from the heart.



Figure 8.1: Size comparison of the SOYES XS24 Pro Mini Smartphone. The image illustrates the compact size of the device relative to a larger smartphone, highlighting its portability.







9. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided at the point of purchase or contact the retailer. Keep your proof of purchase for warranty claims.

For further assistance, you may also visit the manufacturer's official website (if available) or consult online resources for troubleshooting common issues.

© 2025 Generic. All rights reserved.

Related Documents - XS24 Pro

 USER MANUAL	Mini Intelligence Smartphone User Manual - SOYES Comprehensive user manual for the Mini Intelligence smartphone by SOYES, covering setup, features, operation, and troubleshooting. Learn to use your Android 9.0 device effectively.
	SOYES XS18 Pro Max 4G Smartphone: Technical Specifications and Features Detailed technical specifications and features of the SOYES XS18 Pro Max 4G smartphone, including hardware, software, connectivity, and supported languages. Learn about its MTK6737A processor, 4.3-inch display, and dual SIM capabilities.
	Beelink Mini PC Auto Power On Configuration Guide Instructions on how to enable the automatic power-on feature for Beelink Mini PCs using either BIOS settings or a hardware jumper.
	Retroid Pocket 4 Pro User Manual: Setup, Features, and Specifications Comprehensive user manual for the Retroid Pocket 4 Pro handheld gaming console, covering interface, initial setup, game emulation, system settings, connectivity, safety, and technical specifications.
	OUKITEL WP18 Pro Rugged Smartphone: Technical Specifications and Features Detailed technical specifications, features, and package contents for the OUKITEL WP18 Pro rugged smartphone by OUKITEL. Includes display, camera, battery, connectivity, dimensions, and regulatory information.
	OUKITEL WP8 Pro Rugged Smartphone - Specifications and Features Detailed information about the OUKITEL WP8 Pro rugged smartphone, including specifications, camera details, connectivity, package contents, warnings, and FCC compliance.