

## DEERTIME E9

# DEERTIME E9 Android 15 Tablet User Manual

Model: E9

## 1. INTRODUCTION

---

Thank you for choosing the DEERTIME E9 Android 15 Tablet. This manual provides essential information for setting up, operating, and maintaining your device. The DEERTIME E9 tablet is designed for versatile use, featuring a powerful Octa-Core CPU, ample memory, and a vibrant display, making it suitable for various tasks from entertainment to productivity.

Key features include:

- **Unmatched Performance & Storage:** Powered by a 2.0GHz Octa-Core CPU with 30GB RAM and 128GB internal storage, expandable up to 1TB via microSD.
- **Android 15 OS & Fast Connectivity:** Runs on Google-certified Android 15, offering Dual-band Wi-Fi (2.4G & 5G), Bluetooth 5.0, and GPS.
- **Vibrant HD Display & Premium Streaming:** Features a 10.1-inch HD Incell display (1280x800 pixels) with Widevine L1 certification for HD streaming and dual stereo speakers.
- **Long-Lasting Battery & Productivity Bundle:** Equipped with an 8000mAh battery and includes a keyboard and mouse for enhanced productivity.
- **Privacy Protection & Family Focus:** Incorporates robust privacy controls and parental management features.

## 2. WHAT'S IN THE BOX

---

Please verify that all items are present in your package:

- DEERTIME E9 Tablet
- Bluetooth Keyboard
- Wireless Mouse
- Protective Case
- Protective Film (Screen Protector)
- Type-C Cable
- 5V/2A Charger

- USB to Type-C Adapter
- User Manual



Figure 2.1: Included accessories with the DEERTIME E9 Tablet.

## 3. SETUP

---

### 3.1 Initial Power On

1. Press and hold the Power button located on the side of the tablet until the DEERTIME logo appears.
2. Follow the on-screen prompts to select your language, region, and accept the terms and conditions.

### 3.2 Connecting to Wi-Fi

1. From the home screen, swipe down from the top to open the Quick Settings panel.
2. Tap the Wi-Fi icon to enable it.
3. Tap and hold the Wi-Fi icon to go to Wi-Fi settings.
4. Select your desired network from the list and enter the password if prompted. The tablet supports both 2.4G and 5G Wi-Fi bands.

### 3.3 Google Mobile Services (GMS) Setup

As a GMS-certified device, your tablet will guide you through signing in with your Google account during initial setup. This enables access to the Google Play Store and other Google services.

### 3.4 Connecting Keyboard and Mouse

The included keyboard and mouse connect wirelessly via Bluetooth. Ensure both accessories are charged or have fresh batteries.

1. **For Keyboard:** Turn on the keyboard. On your tablet, go to Settings > Connected devices > Bluetooth. Turn on Bluetooth and select the keyboard from the list of available devices to pair.
2. **For Mouse:** Turn on the mouse. Repeat the Bluetooth pairing process as with the keyboard.

### 3.5 MicroSD Card Installation

To expand storage up to 1TB:

1. Locate the SIM/MicroSD card tray on the side of the tablet.
2. Use the provided SIM ejector tool to gently push into the small hole next to the tray until it pops out.
3. Place your MicroSD card into the designated slot on the tray.
4. Carefully reinsert the tray into the tablet.

## 30GB RAM 128GB ROM 1TB EXPANDED

With its large built-in memory plus expandable storage, you can easily enjoy entertainment, download apps, and store documents. Compared to tablets with less memory, the DEERTIME tablet launches apps from scratch up to 30% faster.



Video





Entertainment



Work



Online Class

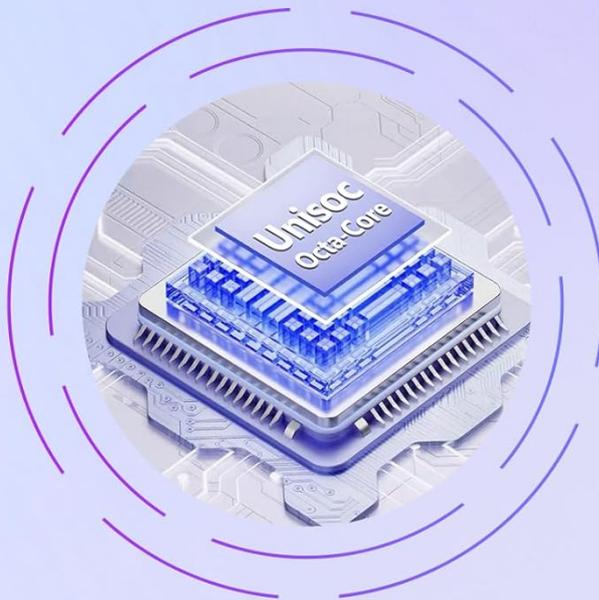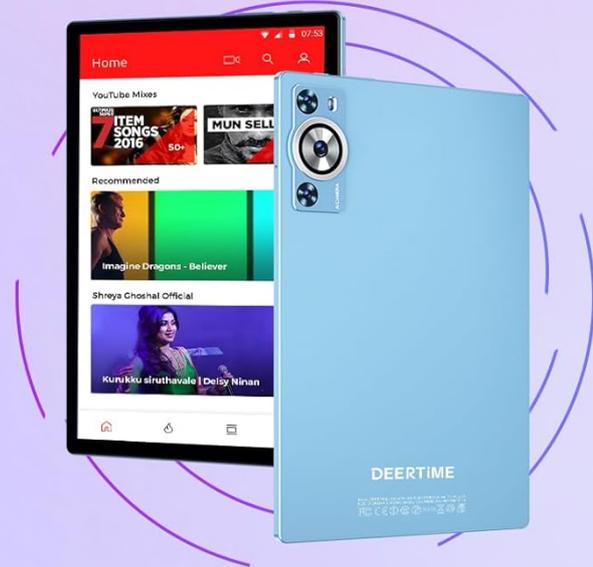

## Octa Core + 2.0GHz



### Octa-Core

Android 15 Operating systems

2.0GHz  
1.6GHz



### A75 High Performance

A55 Intelligent

A75  
A55



### 12nm

Low consumption

12nm  
28nm



### 12nm

Low consumption

G57  
FE8322

Figure 3.1: DEERTIME E9 Tablet with connected keyboard and mouse.

## 4. OPERATING YOUR TABLET

### 4.1 Basic Navigation

- **Touchscreen:** Tap to select, swipe to scroll, pinch to zoom.
- **Home Screen:** Access apps and widgets.
- **Notifications:** Swipe down from the top for notifications and quick settings.
- **App Drawer:** Swipe up from the bottom to view all installed applications.

## 4.2 Android 15 Features

Your DEERTIME E9 tablet runs on Android 15, offering enhanced features:

- **Split-Screen Functionality:** Run two apps side-by-side for multitasking.
- **Casting to TV:** Share your tablet's screen with a compatible TV or display.
- **Personalized Widget Previews:** Customize your home screen with interactive widgets.
- **Secure Face Unlock:** Unlock your device quickly and securely using facial recognition.



Figure 4.1: Overview of Android 15 features on the DEERTIME E9 Tablet.

## 4.3 Display and Media

The 10.1-inch HD Incell display provides clear visuals. With Widevine L1 certification, you can stream high-definition content from services like Netflix, Hulu, and Amazon Prime. Dual stereo speakers deliver immersive audio.

## 4.4 Camera Usage

The tablet features a 5MP front camera for video calls and an 8MP rear camera for capturing photos and videos.

1. Open the Camera app.
2. Tap the shutter button to take a photo or record a video.
3. Switch between front and rear cameras using the camera toggle icon.



Figure 4.2: Using the DEERTIME E9 Tablet's 8MP rear and 5MP front cameras.

## 4.5 Battery Management

The 8000mAh battery provides extended usage. To optimize battery life:

- Adjust screen brightness.
- Close unused apps running in the background.

- Turn off Wi-Fi and Bluetooth when not in use.
- Utilize the tablet's energy-saving modes.



Figure 4.3: Battery life indicators for the 8000mAh battery.

## 4.6 Privacy and Parental Controls

The tablet includes robust privacy controls and built-in parental management features to ensure a safe user experience, especially for children. You can manage app permissions and control screen time.

Your browser does not support the video tag.

Video 4.1: Demonstration of the DEERTIME Android 15 tablet with keyboard, mouse, and case, showcasing various functionalities.

## 5. MAINTENANCE

### 5.1 Cleaning Your Tablet

- Use a soft, lint-free cloth to clean the screen and body.
- Avoid using harsh chemicals or abrasive materials.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.

### 5.2 Software Updates

Regularly check for and install software updates to ensure optimal performance, security, and access to new features. Go to Settings > System > System update to check for available updates.

### 5.3 Storage Management

To maintain performance, periodically manage your tablet's storage:

- Delete unnecessary apps and files.
- Move large files to the MicroSD card.
- Clear cache data for apps in Settings > Apps.

### 5.4 Battery Care

- Avoid extreme temperatures, which can degrade battery life.
- Do not leave the tablet fully charged or fully discharged for extended periods.
- Use the provided charger and cable for optimal charging.

## 6. TROUBLESHOOTING

---

If you encounter issues with your DEERTIME E9 Tablet, refer to the following common solutions:

| Problem                                     | Solution  |
|---|---|
| Tablet does not power on                    | Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again.                            |
| Wi-Fi connection issues                     | Restart your Wi-Fi router. Go to Settings > Network & internet > Wi-Fi, forget the network, and reconnect.                                |
| Slow performance or apps crashing           | Close unused background apps. Clear app cache. Check for system updates. Consider a factory reset if issues persist (back up data first). |
| Touchscreen unresponsive                    | Restart the tablet. If the issue continues, ensure the screen is clean and free of debris.  |
| Accessories (keyboard/mouse) not connecting | Ensure accessories are charged and in pairing mode. Re-pair them via Bluetooth settings.  |

## 7. SPECIFICATIONS

---

| Feature               | Specification  |
|-----------------------|--|
| Model                 | E9   |
| Operating System      | Android 15   |
| Processor             | 2.0 GHz Octa-Core (Unisoc Chipset)                               |
| RAM                   | 30GB (Actual + Virtual)  |
| Internal Storage      | 128GB  |
| Expandable Storage    | Up to 1TB via MicroSD card                                       |
| Screen Size           | 10.1 Inches  |
| Screen Resolution     | 1280 x 800 Pixels (HD Incell Display)                            |
| Rear Camera           | 8 MP   |
| Front Camera          | 5 MP   |
| Battery Capacity      | 8000mAh Lithium Polymer  |
| Wireless Connectivity | 802.11a/b/g/n/ac (Dual-band 2.4G & 5G Wi-Fi), Bluetooth 5.0, GPS |
| Dimensions (LxWxH)    | 9.6 x 0.4 x 6.3 inches   |
| Item Weight           | 1.2 pounds   |

## 8. WARRANTY AND SUPPORT

---

The DEERTiME E9 Tablet comes with a 2-year warranty from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, warranty inquiries, or further assistance, please contact DEERTiME customer service through the retailer's platform or visit the official DEERTiME website for contact information.

**Online Resources:**

- For additional product information and updates, visit the [DEERTiME Store on Amazon](#).