

Flamaker ADL-LR90

Flamaker Swivel Rocker Recliner Chair User Manual

Model: ADL-LR90

1. INTRODUCTION

Thank you for choosing the Flamaker Swivel Rocker Recliner Chair, Model ADL-LR90. This manual provides essential information for the safe assembly, operation, and maintenance of your new recliner. Please read these instructions carefully before use and retain them for future reference.

Safety Information

- Ensure all components are present and undamaged before assembly.
- Assemble the chair on a soft, clean surface to prevent scratches.
- Do not stand on the chair or use it as a step stool.
- Keep children and pets away from moving parts during operation.
- Do not exceed the maximum weight capacity of 350 pounds.
- Unplug the massage function power cord when not in use or before cleaning.

2. PACKAGE CONTENTS

Verify that all parts are included in your package. The Flamaker Swivel Rocker Recliner Chair is typically shipped in two boxes.

- Chair Backrest
- Chair Seat with Armrests (integrated)
- Swivel Base
- Power Adapter for Massage Function
- Massage Remote Control
- Instruction Manual



Figure 2.1: The chair is shipped in two boxes and requires minimal assembly.

3. ASSEMBLY INSTRUCTIONS

The Flamaker Swivel Rocker Recliner Chair is designed for tool-free assembly, typically taking about 15 minutes.

1. **Unpack Components:** Carefully remove all parts from the packaging. Place them on a soft, flat surface to prevent damage.
2. **Attach Swivel Base:** Connect the swivel base to the bottom of the chair seat. Ensure it is securely aligned and locked into place.
3. **Attach Backrest:** Slide the backrest onto the metal brackets located on the rear of the chair seat. Push down firmly until it clicks into position. Verify that both sides are fully engaged.
4. **Connect Power (Optional):** If using the vibration massage function, connect the power adapter to the chair's power input and then to a wall outlet.
5. **Final Check:** Ensure all connections are secure and the chair is stable before use.

4. OPERATING INSTRUCTIONS

4.1 Reclining Function

To recline the chair, locate the manual pull handle on the side of the chair (typically on the right side). Pull the handle to release the footrest and recline the backrest. The chair can recline up to 150 degrees. To return to the upright position, push the footrest down with your legs until it locks into place, and the backrest will return to its original position.



Figure 4.1: The chair features 360° swivel, 30° rocking, and 90-150° recline functions, activated by a manual pull handle.

4.2 Swivel and Rocking Functions

The chair is equipped with a 360° swivel base, allowing you to rotate freely. It also features a 30° rocking function, providing a gentle back-and-forth motion. These functions operate independently of the recline mechanism.



Figure 4.2: The 30° rocking function provides comfort, suitable for various uses including as a nursery chair.

4.3 Vibration Massage Function

The chair includes 8 vibration massage points located in the back, lumbar, leg, and thigh areas. Use the provided remote control to operate this function.

- **Power On/Off:** Press the power button on the remote to activate or deactivate the massage.
- **Intensity Adjustment:** Select from 3 intensity options (low, medium, high) using the intensity buttons.
- **Timer Setting:** Set the massage duration to 15, 30, or 60 minutes using the timer button. The massage will automatically stop after the selected time.
- **Zone Selection:** Some remotes may allow selection of specific massage zones (e.g., back, lumbar, legs). Refer to your remote's specific markings.

SOOTHING MASSAGE FUNCTION



Figure 4.3: The chair offers vibration massage in multiple zones, controlled by a remote.

4.4 Convenient Features

The chair is designed with practical features for enhanced convenience:

- **Cup Holders:** Two integrated cup holders are located in the armrests for beverages.
- **Side Pockets:** Four side pockets provide storage for remote controls, magazines, or other small items.



Figure 4.4: Integrated cup holders and multiple side pockets offer convenient storage.

5. MAINTENANCE

5.1 Cleaning

- **Leather Surface:** Wipe the leather surface with a soft, damp cloth. For stubborn stains, use a mild leather cleaner, testing it on an inconspicuous area first. Avoid harsh chemicals or abrasive cleaners.
- **Frame:** Dust the metal frame with a dry cloth.
- **General:** Vacuum regularly to remove dust and debris from crevices.

5.2 Care

- Avoid direct sunlight exposure to prevent fading and cracking of the leather.
- Keep the chair away from heat sources like radiators or fireplaces.
- Periodically check all bolts and connections to ensure they remain tight.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Chair does not recline or footrest does not extend.	Recline handle not fully pulled; mechanism obstructed.	Ensure the handle is fully engaged. Check for any obstructions around the footrest mechanism.
Massage function not working.	Power cord disconnected; remote control battery low; power outlet issue.	Check if the power cord is securely plugged into the chair and the wall outlet. Ensure the wall outlet is functional. Replace remote control batteries if applicable.
Chair feels unstable or wobbly.	Loose connections; uneven floor.	Check and tighten all assembly bolts. Ensure the chair is on a flat, even surface.
Squeaking or grinding noise during rocking/swivel.	Lack of lubrication; debris in mechanism.	Apply a silicone-based lubricant to moving parts of the swivel/rocking mechanism. Clean any visible debris.

7. SPECIFICATIONS

- **Brand:** Flamaker
- **Model Name:** Swivel Rocker Recliner Chair
- **Model Number:** ADL-LR90
- **Color:** Black (Leather)
- **Product Dimensions (Upright):** 28.7"D x 34.6"W x 41.7"H
- **Frame Material:** Metal
- **Item Weight:** 44.5 pounds
- **Weight Capacity:** Up to 350 pounds
- **Recline Angle:** Up to 150 degrees
- **Rocking Angle:** 30 degrees
- **Massage Points:** 8 vibration points (Back, Lumbar, Leg, Thigh)
- **Massage Intensity:** 3 levels
- **Massage Timer:** 15/30/60 minutes

PRODUCT SIZE



Figure 7.1: Detailed product dimensions and weight capacity.

8. WARRANTY AND SUPPORT

For specific warranty information, please refer to the documentation included with your purchase or contact Flamaker customer service directly. If you encounter any issues or have questions regarding your Flamaker Swivel Rocker Recliner Chair, please reach out to the manufacturer's support team for assistance.

Manufacturer: Flamaker

Contact information can typically be found on the product packaging or the official Flamaker website.