

[Manuals.plus](#) /

› [Steelite](#) /

› Steelite Electric Pressure Washer AZ6041VC User Manual

Steelite AZ6041VC

Steelite Electric Pressure Washer AZ6041VC User Manual

Model: AZ6041VC | Brand: Steelite

1. INTRODUCTION

This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your Steelite Electric Pressure Washer Model AZ6041VC. Please read these instructions thoroughly before using the product and retain them for future reference.

The Steelite Electric Pressure Washer is designed for efficient outdoor cleaning tasks, offering a powerful water flow for various applications such as washing cars, driveways, patios, and outdoor furniture.



Image 1.1: Steelite Electric Pressure Washer and included accessories.

2. SAFETY INFORMATION

WARNING: Improper use of this pressure washer can result in serious injury or property damage. Always follow safety guidelines.

- Always wear appropriate personal protective equipment, including eye protection, during operation.
- Ensure the safety lock on the spray wand is engaged when the unit is not in use to prevent accidental activation.
- Never direct the water spray towards people, pets, or electrical devices. The high-pressure stream can cause severe injury.
- Keep children and bystanders away from the operating area.

- Before performing any maintenance or cleaning, always disconnect the power supply.
- Do not operate the pressure washer if the power cord or high-pressure hose is damaged.
- Ensure all connections are secure to prevent leaks and maintain proper pressure.

Safety Lock

Avoid accidental activation of the switch, safer to use.



CAUTION: Use away from people and animals

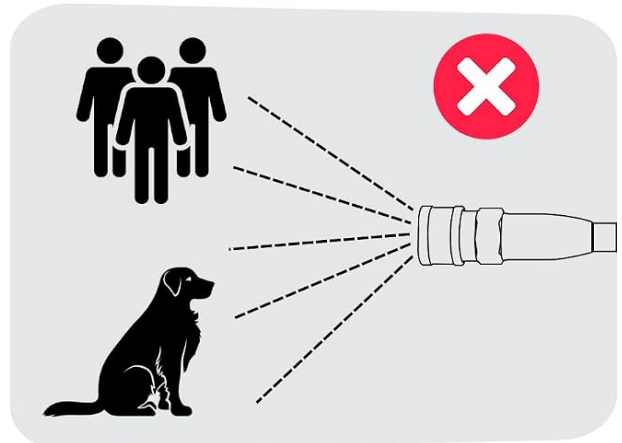 
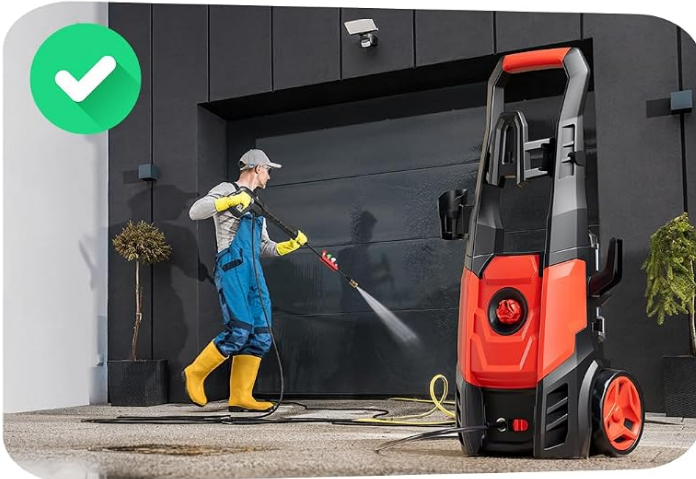 


Image 2.1: Illustration of the safety lock feature and a caution against directing spray towards people or animals.

3. PACKAGE CONTENTS

Verify that all items listed below are included in your package. If any parts are missing or damaged, contact customer support.

- Steelite Electric Pressure Washer Unit
- High-Pressure Spray Wand
- 4 Quick-Connect Nozzles (0°, 15°, 25°, 40°)
- Foam Cannon

- 20 FT High-Pressure Hose
- 16 FT Power Cord
- Nozzle Holder
- User Manual (this document)

4. SETUP

 
1. **Assemble the Unit:** Attach the handle and wheels if they are not pre-assembled. Ensure all components are securely fastened.
2. **Connect the High-Pressure Hose:** Connect one end of the 20 FT high-pressure hose to the pressure washer's outlet and the other end to the spray wand. Ensure connections are tight to prevent leaks.
3. **Connect Water Supply:**
 - **From a Faucet:** Connect a standard garden hose (not included) to your water faucet and then to the pressure washer's water inlet. Turn on the water supply fully.
 - **From a Bucket (Self-Priming):** Place the water inlet hose (not included) into a bucket of clean water. Ensure the hose is fully submerged.

Note: Ensure there is a continuous and adequate water supply before starting the unit.

4. **Select and Attach Nozzle:** Choose the appropriate quick-connect nozzle for your task (refer to Section 5.1 for nozzle guide) and firmly insert it into the end of the spray wand until it clicks into place.
5. **Connect Power:** Plug the 16 FT power cord into a grounded electrical outlet.




20 FT
Pressure Hose

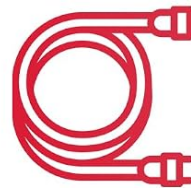

16 FT
Power Cord

Suitable Length for Long Distance Use

 Image 4.1: The 20-foot pressure hose and 16-foot power cord provide ample reach for various cleaning tasks.

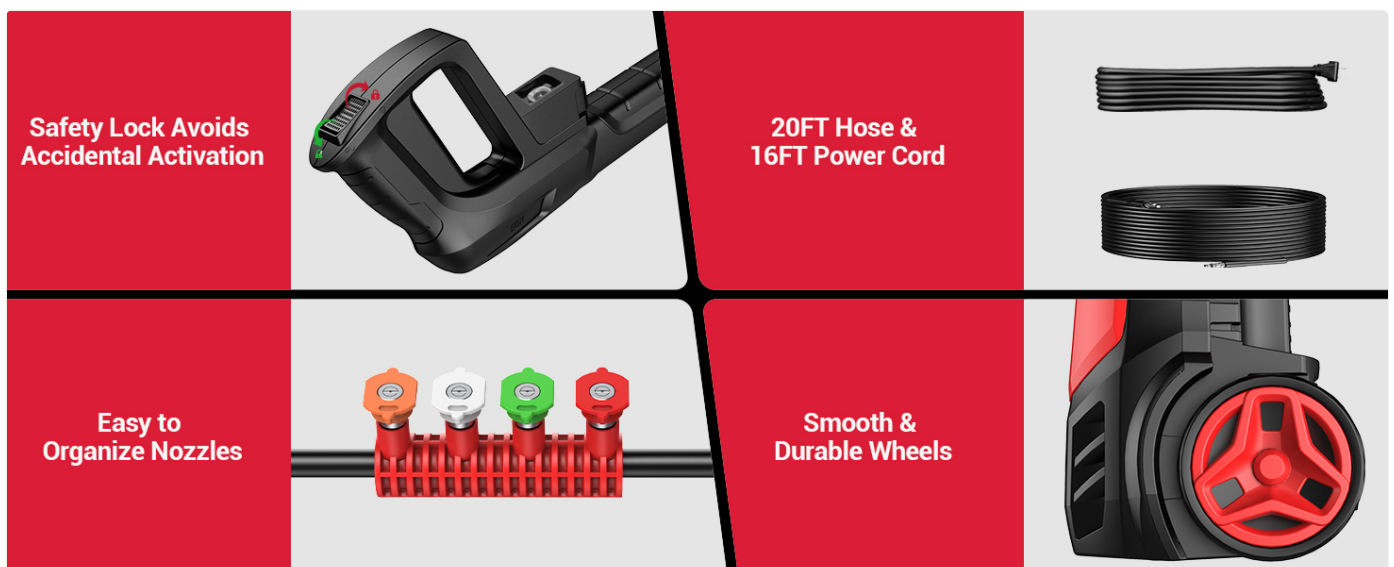

**Safety Lock Avoids
Accidental Activation**

**20FT Hose &
16FT Power Cord**

**Easy to
Organize Nozzles**

**Smooth &
Durable Wheels**

Image 4.2: The pressure washer supports water intake from both a faucet and a bucket for versatile use.

5. OPERATING INSTRUCTIONS

5.1. Nozzle Selection Guide

The Steelite pressure washer includes 4 quick-connect nozzles and a foam cannon, each designed for specific cleaning tasks. Always select the appropriate nozzle to avoid damaging surfaces.

Nozzle Color/Type	Spray Angle	Recommended Use
Red	0° (Pencil Jet)	Intense spot cleaning, removing stubborn stains from concrete or metal. Use with extreme caution.
Yellow	15° (Fan Spray)	Aggressive cleaning of hard surfaces like driveways, sidewalks, and brick.
Green	25° (Fan Spray)	General cleaning of wood decks, fences, patios, and lawn equipment.
White	40° (Wide Fan Spray)	Gentle cleaning for delicate surfaces such as vehicles, boats, and windows.
Foam Cannon	Variable	Applying detergent or soap for pre-soaking and deep cleaning, especially for vehicles.

5 Quick-Connect Spray Modes



Image 5.1: Visual guide to the quick-connect nozzles and their spray patterns for different cleaning tasks.

5.2. Starting the Pressure Washer

1. Ensure all connections (water, hose, power) are secure.
2. Turn on the water supply completely.
3. Squeeze the trigger on the spray wand to purge air from the system until a steady stream of water emerges. This prevents air pockets from damaging the pump.
4. Turn the power switch on the pressure washer unit to the "ON" position. The motor will start.
5. Release the safety lock on the spray wand and squeeze the trigger to begin spraying.

5.3. Using the Foam Cannon

1. Fill the foam cannon bottle with appropriate pressure washer detergent or soap. Do not use harsh chemicals.
2. Attach the foam cannon to the spray wand.
3. Operate the pressure washer as described in Section 5.2. The foam cannon will dispense a thick layer of foam for

effective cleaning.

4. After applying foam, detach the foam cannon and re-attach a rinse nozzle (e.g., 25° or 40°) to rinse the surface thoroughly.



Super Foam Spray

Foam Bottle Included

Add Detergent for More Effective Cleaning



Image 5.2: The foam cannon provides a dense foam for enhanced cleaning, particularly for vehicles.

5.4. General Cleaning Tips

- Always test the spray on an inconspicuous area first to ensure it does not damage the surface.
- Start with a wider spray angle (e.g., 40°) and gradually move to a narrower angle if more pressure is needed.
- Maintain a consistent distance from the surface being cleaned.
- Work from top to bottom to allow gravity to assist in washing away dirt and debris.

Meeting Outdoor Cleaning Needs

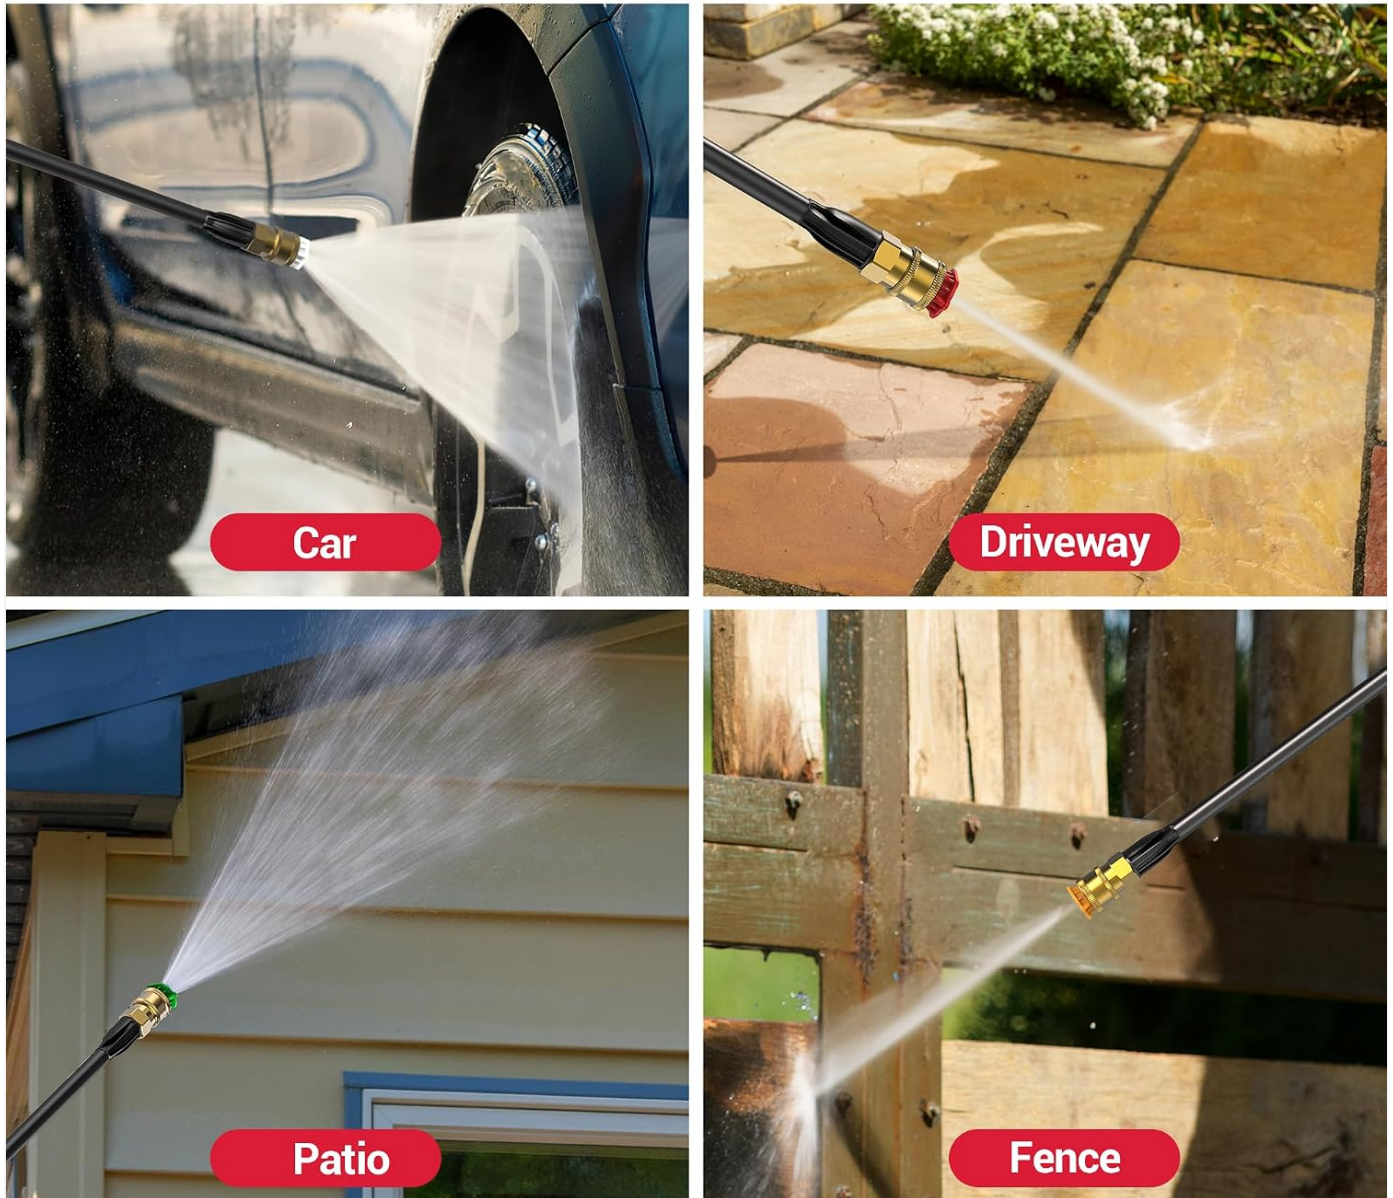 


Image 5.3: The pressure washer is suitable for cleaning various outdoor surfaces including cars, driveways, patios, and fences.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

6.1. After Each Use

1. **Shut Down:** Turn off the pressure washer, then turn off the water supply.
2. **Relieve Pressure:** Squeeze the trigger on the spray wand to release any remaining pressure in the system.
3. **Disconnect:** Disconnect the garden hose and power cord.
4. **Drain Water:** Drain all water from the pump, hose, and spray wand to prevent freezing damage in cold weather.
5. **Clean Nozzles:** Remove any debris from the nozzles using a small pin or the included nozzle cleaning tool.

6.2. Storage

- Store the pressure washer in a dry, frost-free area.

- Coil the high-pressure hose and power cord neatly. Utilize the integrated hose hook and nozzle holder for organized storage.
- Ensure the foam cannon is empty and clean before storage.



1

Hose Hook
Easy to organize hose



2

Quick-connect Nozzles
Easy to change spray modes



3

Easy to Store
Convenient to organize nozzels

Image 6.1: Features like the hose hook and nozzle holder aid in convenient storage and organization.

7. TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Motor does not start	No power supply; Power switch off; Thermal overload activated.	Check power connection and outlet; Ensure power switch is ON; Allow unit to cool down for 30 minutes.

Problem	Possible Cause	Solution
Low pressure or no pressure	Insufficient water supply; Clogged nozzle; Air in pump; Leaks in connections.	Ensure water supply is fully open; Clean nozzle; Purge air from system (see Setup); Tighten all hose connections.
Water leaks	Loose connections; Damaged O-rings or seals.	Tighten all connections; Inspect and replace damaged O-rings or seals.
Motor runs intermittently	Air in pump; Water supply issues; Clogged nozzle.	Purge air from system; Check water supply for kinks or blockages; Clean nozzle.

8. SPECIFICATIONS

Model Number	AZ6041VC
Brand	Steelite
Power Source	AC Electric
Max Water Flow	Up to 2.5 GPM (Gallons Per Minute)
Product Dimensions (L x W x H)	12 x 10 x 30 inches (30.5 x 25.4 x 76.2 cm)
Item Weight	18.56 pounds (8.44 kg)
High-Pressure Hose Length	20 Feet (6.1 meters)
Power Cord Length	16 Feet (4.9 meters)
Nozzles Included	0°, 15°, 25°, 40° Quick-Connect, Foam Cannon

9. WARRANTY AND SUPPORT

For warranty information or technical support, please contact Steelite customer service. Keep your purchase receipt as proof of purchase.

Contact information may be found on the product packaging or the official Steelite website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJLN7W5B>

More documents and user manuals: <https://manuals.plus/>