

[manuals.plus](#) /

› [XLEADER](#) /

› [XLEADER SoundAngel Mate \(2nd Gen\) Bluetooth Shower Speaker Instruction Manual](#)

XLEADER Mate2

XLEADER SoundAngel Mate (2nd Gen) Bluetooth Shower Speaker Instruction Manual

Model: Mate2 | Brand: XLEADER

1. INTRODUCTION

The XLEADER SoundAngel Mate (2nd Gen) is a compact, waterproof Bluetooth speaker designed to enhance your audio experience in various environments. Featuring 8W crystal clear sound with rich bass, IPX7 waterproofing, and a long-lasting 1200mAh battery for up to 12 hours of playtime, this speaker is ideal for showers, pools, and outdoor activities. This manual provides comprehensive instructions for its setup, operation, maintenance, and troubleshooting.



Image 1: The XLEADER SoundAngel Mate (2nd Gen) speaker, showcasing its control panel and vibrant LED lights.

2. SAFETY INFORMATION

- Do not attempt to disassemble or modify the device.
- Keep the speaker away from extreme temperatures and direct sunlight.
- Ensure the Type-C charging port cover is securely closed before exposing the speaker to water.
- Use only the provided charging cable or a certified Type-C cable for charging.
- Avoid dropping the speaker or subjecting it to strong impacts.

3. PACKAGE CONTENTS

Please check the box for the following items:

- 1x XLEADER SoundAngel Mate Shower Speaker
- 1x Suction Cup
- 1x Silicone Lanyard
- 1x Type-C Charging Cable
- 1x Multilingual Instruction Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the speaker's components and controls.

Gift box packaging

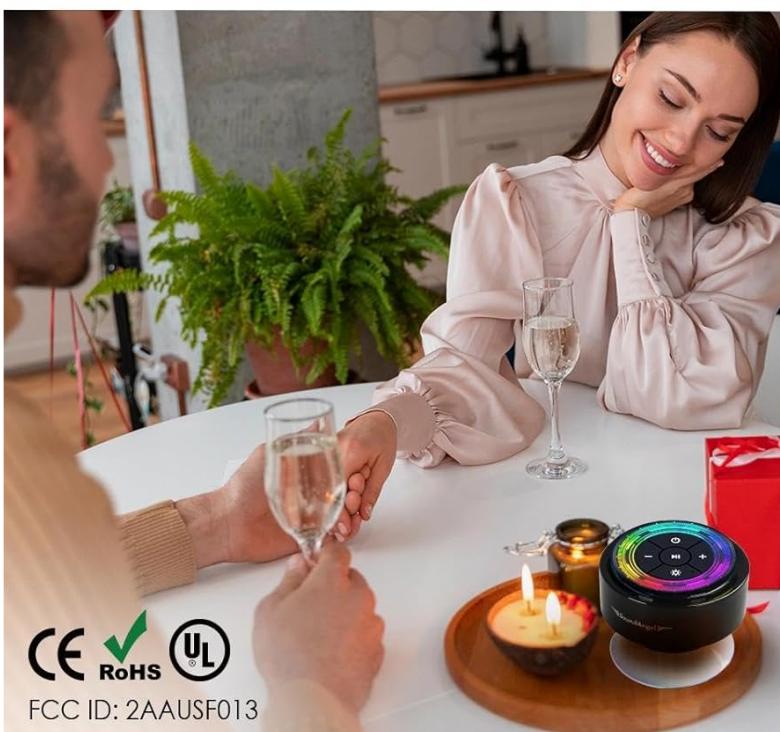


Image 2: Detailed view of the speaker's control panel, dimensions, and Type-C charging port.

Control Panel Functions:

- **Power Button ()**: Press and hold to Power On/Off.
- **Play/Pause Button ()**: Press to Play or Pause music.
- **Volume Down / Previous Track Button (- /)**: Press for Volume Down; Press and hold for Previous Track.
- **Volume Up / Next Track Button (+ /)**: Press for Volume Up; Press and hold for Next Track.
- **Light Mode Button ()**: Press to cycle through different RGB light modes.
- **Call Button ()**: Press to Answer/End calls.

Other Components:

- **Type-C Charging Port**: Located on the side, protected by a silicone cover.
- **Suction Cup**: Attaches to the bottom for mounting on smooth surfaces.
- **Silicone Lanyard**: For hanging or securing the speaker.

5. SETUP

5.1. Charging the Speaker

Before first use, fully charge the speaker. Open the silicone cover on the side to reveal the Type-C charging port. Connect the provided Type-C cable to the speaker and a USB power source (e.g., wall adapter, computer USB port). The LED indicator will show charging status. A full charge takes approximately 3 hours.

5.2. Bluetooth Pairing

1. Press and hold the Power Button () for 3 seconds to turn on the speaker. The LED indicator will flash, indicating it's in pairing mode.
2. On your smartphone or Bluetooth-enabled device, enable Bluetooth and search for available devices.
3. Select "SoundAngel Mate" from the list. The speaker will automatically reconnect to the last paired device within 3 seconds if it's in range.
4. Once paired, the LED indicator will remain solid, and you will hear a confirmation tone.



Image 3: Visual representation of the speaker's Bluetooth 5.4 connectivity, 66ft range, and True Wireless Stereo (TWS) capabilities.

5.3. Attaching the Suction Cup and Lanyard

The speaker comes with a powerful suction cup and a silicone lanyard for versatile mounting.

- **Suction Cup:** Ensure the surface (e.g., shower wall, glass, tile) is clean and dry. Press the suction cup firmly against the surface until it adheres securely.
- **Silicone Lanyard:** Thread the lanyard through the designated loop on the speaker. This allows you to hang the speaker from hooks or secure it to objects like kayaks.



Image 4: The speaker securely mounted in a shower using its upgraded suction cup and silicone lanyard.

6. OPERATING INSTRUCTIONS

6.1. Power On/Off

- To Power On: Press and hold the Power Button () for 3 seconds.
- To Power Off: Press and hold the Power Button () for 3 seconds.

6.2. Music Playback

- **Play/Pause:** Press the Play/Pause Button ().
- **Volume Adjustment:** Press the Volume Up (+) or Volume Down (-) buttons.
- **Next Track:** Press and hold the Next Track Button ().
- **Previous Track:** Press and hold the Previous Track Button ().

6.3. RGB Light Modes

The speaker features multiple RGB light modes to enhance your listening experience.

- Press the Light Mode Button () to cycle through the available light patterns.
- The lights can pulse to the rhythm of the music or display static colors.



Image 5: The speaker showcasing its dynamic RGB light show, which can be customized to different patterns.

6.4. Hands-free Calling

With the built-in microphone, you can answer calls directly through the speaker.

- **Answer Call:** Press the Call Button () once when a call comes in.
- **End Call:** Press the Call Button () once during a call.
- **Reject Call:** Press and hold the Call Button () for 2 seconds.

7. MAINTENANCE

7.1. Cleaning

Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.

7.2. Water Resistance Care

To maintain the IPX7 waterproof rating, always ensure the silicone cover for the charging port is tightly sealed before exposing the speaker to water. After use in water, dry the speaker thoroughly, especially around the charging port, to prevent corrosion.

7.3. Storage

Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
No sound or low volume.	Volume too low on speaker or device; Not properly connected via Bluetooth.	Increase volume on both speaker and device. Re-pair Bluetooth.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; Device Bluetooth off; Too far from device.	Ensure speaker is in pairing mode (flashing LED). Turn on device Bluetooth. Move device closer to speaker (within 66ft).
Suction cup not sticking.	Surface or suction cup is dirty/wet; Surface is not smooth.	Clean and dry the surface and suction cup. Ensure surface is smooth and non-porous.

9. SPECIFICATIONS

Feature	Detail
Model Name	SoundAngel Mate (2nd Gen)
Wireless Technology	Bluetooth 5.4
Wireless Range	Up to 66 feet
Water Resistance	IPX7 (Waterproof, submersible up to 1 meter for 30 minutes)
Speaker Output Power	8 Watts
Audio Output Mode	Mono
Battery Capacity	1200 mAh Polymer Battery
Playtime	8-15 hours (at 50-80% volume)
Charging Time	Approximately 3 hours
Charging Port	Type-C
Dimensions (D x W x H)	3"D x 3"W x 2.7"H
Item Weight	140 Grams (4.9 ounces)
Material	Acrylonitrile Butadiene Styrene (ABS), Silicone
Special Features	Bass Boost, Built-in Microphone, LED Light, Floating capability



Multi-color available

Image 6: A comparison table highlighting the upgrades in the 2nd Generation SoundAngel Mate speaker, including Bluetooth version, speaker power, battery capacity, and charging port type.

10. WARRANTY AND SUPPORT

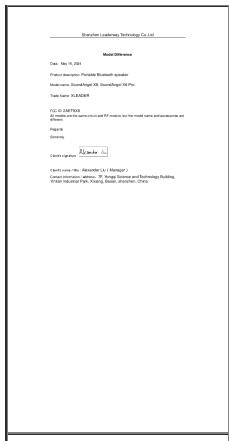
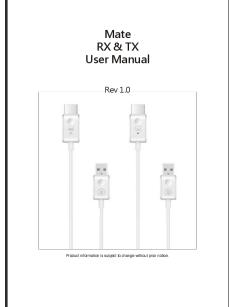
10.1. Warranty Information

The XLEADER SoundAngel Mate (2nd Gen) Bluetooth Shower Speaker comes with an extended 5-year warranty, ensuring long-term reliability and customer satisfaction. Please retain your proof of purchase for warranty claims.

10.2. Customer Support

For any questions, technical assistance, or warranty inquiries, please contact XLEADER customer support through the official website or your retailer's support channels. Refer to the product packaging or the official XLEADER website for the most up-to-date contact information.

Related Documents - Mate2

	<p>XLEADER SoundAngel X8 & X8 Pro Model Difference</p> <p>Information regarding the model differences between the XLEADER SoundAngel X8 and SoundAngel X8 Pro portable Bluetooth speakers, noting shared circuitry and RF modules.</p>
	<p>Winner Wave Mate Wireless Display Adapter User Manual</p> <p>User manual for the Winner Wave Mate wireless display adapter, covering setup, pairing, mirroring, and OTA upgrades for HDMI and Type-C transmitters and receivers.</p>
	<p>SONOFF S-MATE2 User Manual</p> <p>User manual for the SONOFF S-MATE2, a battery-powered switch designed to connect standard rocker or pulse switches without requiring a neutral line. Includes instructions for operation, installation, device addition, smart scenes, and safety information.</p>
	<p>SONOFF S-MATE2 eWeLink-Remote Switch Mate User Manual</p> <p>User manual for the SONOFF S-MATE2, a battery-powered eWeLink-Remote switch mate that connects ordinary rocker or pulse switches without a neutral line, enabling local control and smart scene linkage.</p>