

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [PHILIPS](#) /

> [Philips Multigroom Series 9000 All-in-One Trimmer with OneBlade \(MG9556/15\) User Manual](#)

## PHILIPS MG9556/15

# Philips Multigroom Series 9000 All-in-One Trimmer with OneBlade

Model: MG9556/15

## 1. INTRODUCTION

The Philips Multigroom Series 9000 is a versatile all-in-one grooming tool designed for trimming, styling, and shaving beard, hair, and body. This comprehensive kit includes 19 accessories and a OneBlade shaver, offering 27 cutting lengths from 0.2 mm to 20 mm. It features self-sharpening metal blades for lasting precision and rounded tips for skin protection. This manual provides essential information for safe and effective use of your grooming device.



Image 1.1: The Philips Multigroom Series 9000 19-in-1 All-in-One Trimmer, demonstrating its use for facial hair trimming.

## 2. WHAT'S IN THE BOX

Your Philips Multigroom Series 9000 kit includes the following components:

- Multigroom Trimmer Handle
- OneBlade Shaver
- Metal Trimmer Blade
- Nose and Ear Trimmer Attachment
- Eyebrow Comb
- Premium Precision Comb (1-3 mm, 11 settings)
- 3 Beard and Hair Combs (3-20 mm)
- Skin Protector Comb
- Body Trimmer
- 2 Hair Combs (12 and 16 mm)
- 2 Body Combs (3 and 5 mm)
- Intimate Area Comb
- Premium Travel Pouch
- Charging Dock
- USB-A Charging Cable (power adapter not included)
- Travel Lock Accessory



Image 2.1: A visual guide to all the accessories included with the Philips Multigroom Series 9000, detailing their purpose and usage.

### 3. SAFETY INFORMATION

Please read all safety instructions before using the appliance to prevent injury or damage.

- Always keep the trimmer away from water sources to avoid electrical hazards. Do not immerse the trimmer in water.
- Exercise caution when using the nose hair trimmer to prevent injury.

- Always follow recommended cleaning and maintenance procedures to ensure the safety and longevity of the trimmer.
- Keep the trimmer out of reach of children and infants.
- Only use the appliance for its intended purpose as described in this manual.
- Do not use attachments not recommended by Philips.

## 4. SETUP AND CHARGING

### 4.1 Initial Charge

Before first use, fully charge the trimmer. The robust lithium-ion battery provides up to 120 minutes of cordless use. A quick charge feature allows for a single trim after 5 minutes of charging.

1. Connect the USB-A charging cable to the charging dock or directly to the trimmer.
2. Plug the USB-A cable into a compatible USB power adapter (not supplied).
3. Place the trimmer on the charging dock or connect it directly.
4. The indicator light will show the charging status (empty, low, full, charging).

### 4.2 Attaching and Removing Accessories

To attach an accessory, align it with the trimmer head and push it on until it clicks into place. To remove, gently pull the accessory off the trimmer head.

## 5. OPERATING INSTRUCTIONS

The Multigroom Series 9000 is 100% waterproof and can be used on dry or wet hair for convenience.

### 5.1 Trimming Beard and Facial Hair

Use the metal trimmer blade for precise lines and edges. Attach the premium precision comb for beard lengths from 1 mm to 3 mm, adjustable in 0.2 mm steps. For longer beards, use the beard combs (3-20 mm).

1. Select the appropriate comb for your desired length.
2. Turn on the trimmer.
3. Move the trimmer against the direction of hair growth for an even trim.
4. For detailing, remove the comb and use the metal trimmer blade or the OneBlade.



# OneBlade

Taillez, sculptez et rasez les poils de n'importe quelle longueur



Image 5.1: A man using the Philips Multigroom trimmer to shape his beard, demonstrating precise control.

## 5.2 Hair Clipping

Use the hair combs (12 mm and 16 mm) or the adjustable beard and hair combs (3-20 mm) for various hair lengths.

1. Attach the desired hair comb.
2. Start trimming from the nape of the neck, moving upwards.
3. Ensure even strokes for a consistent cut.

## 5.3 Body Grooming

The body trimmer and body combs (3 mm and 5 mm) are designed for comfortable body hair removal. The intimate area comb provides protection for sensitive zones.

1. Select the body trimmer or a body comb.
2. Gently glide the trimmer over the skin, moving against hair growth.
3. Use the skin protector comb for added comfort on sensitive areas.

## 5.4 Nose and Ear Trimming

Attach the nose and ear trimmer accessory to safely remove unwanted hair.

1. Insert the trimmer tip gently into the nostril or ear canal.
2. Move the trimmer in a circular motion to cut hairs.

### 5.5 Using the OneBlade

The unique OneBlade technology is ideal for trimming, styling, and shaving hair of any length, providing a close shave without irritation.

1. Attach the OneBlade shaver head.
2. For shaving, move the blade flat against the skin in long strokes.
3. For styling, use the edge of the blade to create sharp lines.



Image 5.2: The Philips OneBlade attachment, designed for precise trimming, styling, and shaving of any hair length.

### 5.6 BeardSense Technology

The trimmer features BeardSense Technology, which analyzes beard density 125 times per second and automatically increases power when needed. This ensures consistent performance for all beard types, including dense, bushy, and long beards.

Your browser does not support the video tag.

Video 5.3: An official Philips video demonstrating the various functions and versatility of the Multigroom Series 9000 trimmer and its attachments for beard, hair, and body grooming.

## 6. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and hygiene of your trimmer.

1. **After Each Use:** Turn off the trimmer and remove any attached combs. Rinse the trimmer head and combs under running water.
2. **Drying:** Shake off excess water and allow all parts to air dry completely before reassembling or storing.
3. **Blades:** The self-sharpening metal blades are ultra-durable and designed to stay sharp without lubrication. No oiling is required.
4. **Storage:** Store the trimmer and its accessories in the provided premium travel pouch to protect them from damage.



Image 6.1: A close-up view of the Philips self-sharpening metal blades, highlighting their durable and maintenance-free design.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is empty.	Charge the trimmer for at least 5 minutes for a quick trim, or fully for up to 120 minutes of use.
Trimmer pulls hair or cuts unevenly.	Blades are clogged with hair or dull.	Clean the trimmer head and blades thoroughly. Ensure blades are free of debris. If blades are damaged, replace the trimmer head.

Problem	Possible Cause	Solution
Trimmer is not charging.	Charging cable or adapter issue.	Check if the charging cable is properly connected to both the trimmer/dock and the power adapter. Try a different USB power adapter.

## 8. SPECIFICATIONS

- **Model Number:** MG9556/15
- **Brand:** PHILIPS
- **Power Source:** Battery Powered (Lithium-ion)
- **Blade Material:** Alloy Steel (Self-sharpening metal blades)
- **Special Features:** Waterproof, Self-sharpening blades, BeardSense Technology
- **Cutting Lengths:** 27 settings (0.2 mm - 20 mm)
- **Included Accessories:** 19 pieces, including OneBlade shaver
- **Target Audience:** Men
- **Country of Origin:** Indonesia
- **Package Dimensions:** 22.6 x 15.9 x 7.2 cm; 710 grams

## 9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Philips website. Keep your proof of purchase for any warranty claims.

**Online Support:** [www.philips.com/support](http://www.philips.com/support)