

[Manuals.plus](#) /

› [Morphy Richards](#) /

› Morphy Richards 30 RC OTG 30L Oven Toaster Griller User Manual

Morphy Richards 30 RC OTG

Morphy Richards 30 RC OTG 30L Oven Toaster Griller User Manual

Model: 30 RC OTG (510070)

1. INTRODUCTION

Thank you for choosing the Morphy Richards 30 RC OTG 30L Oven Toaster Griller. This appliance is designed for versatile cooking, including baking, grilling, roasting, and toasting, with the added convenience of a motorized rotisserie. To ensure safe and efficient operation, please read this manual thoroughly before first use and retain it for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before operating the appliance.
- Do not touch hot surfaces. Always use oven mitts or gloves when handling hot materials.
- To protect against electrical shock, do not immerse the cord, plug, or any part of the appliance in water or other liquids.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from the outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Do not use attachments not recommended by the appliance manufacturer, as this may cause hazards.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any

control to 'OFF', then remove the plug from the wall outlet.

- Do not use the appliance for other than intended use.
- Oversize foods or metal utensils must not be inserted in a toaster oven as they may create a fire or risk of electric shock.
- A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation.
- Do not place any materials other than manufacturer's recommended accessories in the oven.
- Do not place cardboard, plastic, paper, or similar materials in the oven.
- Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.

3. PRODUCT OVERVIEW

The Morphy Richards 30 RC OTG is a versatile kitchen appliance designed for various cooking needs. Familiarize yourself with its components and included accessories.

3.1 Main Components

- **Oven Cavity:** The main cooking chamber.
- **Glass Door:** Transparent door for viewing food, with a heat-resistant handle.
- **Control Knobs:** Three knobs for Temperature, Function Selection, and Timer.
- **Heating Elements:** Upper and lower heating elements for even cooking.
- **Indicator Light:** Illuminates when the oven is operating.
- **Crumb Tray:** Removable tray at the bottom for collecting crumbs.



Front view of the Morphy Richards 30 RC OTG 30L Oven Toaster Griller with the door closed, showing the control panel on the right.

3.2 Control Knobs

- **Temperature Knob:** Adjusts the cooking temperature up to 250°C.
- **Function Selector Knob:** Selects heating modes (e.g., upper heat, lower heat, both, rotisserie).
- **Timer Knob:** Sets the cooking time up to 60 minutes with a bell alert.

Perfectly roasted,
all the way around



Motorised
Rotisserie



Close-up view of the control knobs on the Morphy Richards 30 RC OTG, illustrating the temperature, function, and timer settings.

3.3 Included Accessories

- **Bake Pan:** For baking cakes, cookies, and roasting.
- **Wire Grill:** For grilling, toasting, and placing dishes.
- **Rotisserie Rods:** For roasting whole chicken or large meat pieces.
- **Rotisserie Handle:** For safely inserting and removing the hot rotisserie.
- **Tray Handle:** For safely inserting and removing hot bake pan or wire grill.
- **Crumb Tray:** Collects food debris for easy cleaning.

**Spacious inside,
sleek outside.**



All included accessories for the Morphy Richards 30 RC OTG 30L Oven Toaster Griller, including bake pan, grill tray, rotisserie handle, rotisserie fork set, and tray handle.

4. SETUP

4.1 Unpacking

1. Carefully remove the OTG and all accessories from the packaging.
2. Remove any protective films, stickers, or packaging materials from the appliance and accessories.
3. Inspect the appliance for any damage. Do not operate if damaged.

4.2 Placement

- Place the OTG on a stable, flat, and heat-resistant surface.
- Ensure there is adequate ventilation around the appliance (at least 10-15 cm clearance on all sides).
- Do not place the OTG near flammable materials like curtains or walls.
- Ensure the power cord is not pinched or touching hot surfaces.

4.3 Initial Cleaning

1. Wipe the interior and exterior of the oven with a damp cloth.
2. Wash all accessories (bake pan, wire grill, rotisserie parts, crumb tray) with warm soapy water, rinse thoroughly, and dry completely.

4.4 First Use (Burn-off)

Before cooking food, it is recommended to run the oven empty to burn off any manufacturing residues and odors.

1. Plug the OTG into a suitable power outlet.
2. Set the Temperature Knob to 250°C.
3. Set the Function Selector Knob to both upper and lower heating elements.
4. Set the Timer Knob to 15-20 minutes.
5. A slight odor or smoke may be observed during this process; this is normal. Ensure the area is well-ventilated.
6. Once the timer rings, turn all knobs to 'OFF' and unplug the appliance. Allow it to cool completely.

5. OPERATING INSTRUCTIONS

This section details how to use your Morphy Richards 30 RC OTG for various cooking functions.

5.1 General Operation

1. Place the desired food item on the appropriate accessory (bake pan, wire grill, or rotisserie).
2. Insert the accessory into the oven cavity at the desired rack level.
3. Close the oven door securely.
4. Plug the power cord into a grounded electrical outlet.
5. Set the **Temperature Knob** to the desired cooking temperature.
6. Set the **Function Selector Knob** to the desired heating mode (e.g., Bake, Grill, Toast, Rotisserie).
7. Set the **Timer Knob** to the required cooking time. The oven will start operating, and the indicator light will illuminate.
8. When the set time elapses, the timer will ring, and the oven will turn off automatically.
9. Carefully remove the cooked food using oven mitts and the provided tray handle or rotisserie handle.

5.2 Baking

Use the bake pan for baking cakes, cookies, casseroles, and other dishes.

1. Place food on the bake pan.
2. Insert the bake pan into the desired rack position.
3. Set the Temperature Knob to the recipe's recommended temperature (up to 250°C).
4. Set the Function Selector Knob to the 'Bake' symbol (usually both upper and lower heating elements).
5. Set the Timer Knob for the required baking time.

5.3 Grilling / Toasting

Use the wire grill for grilling vegetables, meats, or toasting bread.

1. Place food directly on the wire grill or on an oven-safe dish placed on the wire grill.
2. Insert the wire grill into the upper rack position for best grilling results.
3. Set the Temperature Knob to the desired grilling temperature.

4. Set the Function Selector Knob to the 'Grill' symbol (usually upper heating element only).
5. Set the Timer Knob for the required grilling/toasting time. Monitor closely to prevent burning.

5.4 Roasting

Roasting can be done using the bake pan or the rotisserie function.

5.4.1 Pan Roasting

1. Place meat or vegetables in the bake pan.
2. Insert the bake pan into a lower or middle rack position.
3. Set the Temperature Knob to the desired roasting temperature.
4. Set the Function Selector Knob to 'Bake' (both elements) or 'Roast' if available.
5. Set the Timer Knob for the required roasting time.

5.4.2 Rotisserie Roasting

The motorized rotisserie ensures even cooking for whole chickens or large cuts of meat.

1. Prepare the meat for rotisserie: secure it tightly with twine if necessary.
2. Slide one rotisserie fork onto the rotisserie rod, prongs facing inwards. Secure it with the thumbscrew.
3. Skewer the meat through its center with the rotisserie rod.
4. Slide the second rotisserie fork onto the rod, prongs facing inwards, and secure it firmly into the meat with the thumbscrew. Ensure the meat is centered and balanced on the rod.
5. Using the rotisserie handle, carefully place the assembled rotisserie rod with meat into the oven. The pointed end of the rod fits into the rotisserie drive socket on the left side of the oven, and the square end rests on the support bracket on the right.
6. Set the Temperature Knob to the desired roasting temperature.
7. Set the Function Selector Knob to the 'Rotisserie' symbol (usually both elements with rotation).
8. Set the Timer Knob for the required roasting time.
9. During cooking, the rotisserie will rotate, ensuring even browning.
10. Once cooking is complete, use the rotisserie handle to carefully remove the hot rotisserie assembly from the oven.



**Time your recipes to the minute
with a 60-minute precision timer**



The motorized rotisserie function in action, ensuring even cooking.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your OTG and ensure optimal performance.

6.1 Before Cleaning

1. Always unplug the appliance from the power outlet.
2. Allow the OTG to cool down completely before cleaning any part.

6.2 Exterior Cleaning

- Wipe the exterior surfaces with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as they may damage the finish.

6.3 Interior Cleaning

- The interior walls can be wiped with a damp cloth and mild detergent.

- For stubborn stains, a non-abrasive oven cleaner designed for conventional ovens may be used, following the product instructions carefully. Ensure all residue is wiped away.
- Do not spray oven cleaner directly onto heating elements or control knobs.

6.4 Crumb Tray

The removable crumb tray simplifies cleaning and prevents buildup of food debris.

1. Pull out the crumb tray from the bottom front of the oven.
2. Discard any crumbs or food particles.
3. Wash the crumb tray in warm soapy water, rinse, and dry thoroughly before reinserting.



Removing the crumb tray for easy cleaning.

6.5 Accessories Cleaning

- Wash the bake pan, wire grill, and rotisserie parts in warm soapy water.
- Rinse thoroughly and dry completely before storing or re-using.

7. TROUBLESHOOTING

If you encounter any issues with your Morphy Richards 30 RC OTG, refer to the following table for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not turn on.	Not plugged in; power outage; timer not set.	Ensure the plug is securely in the outlet. Check your household's power supply. Set the Timer Knob to the desired cooking time.
Food not cooking evenly.	Incorrect rack position; uneven food placement; door opened too frequently.	Adjust rack position for optimal heat distribution. Ensure food is evenly spread. Avoid opening the door unnecessarily.
Rotisserie not rotating.	Rotisserie function not selected; rod not properly seated; food too heavy/unbalanced.	Ensure the Function Selector Knob is set to the 'Rotisserie' mode. Check that the rotisserie rod is correctly inserted into the drive socket and support. Ensure food is balanced and not exceeding weight limits.
Excessive smoke during cooking.	Food spills; grease buildup; first use burn-off.	Clean any food spills immediately. Perform regular cleaning to prevent grease buildup. A small amount of smoke is normal during the first use.

If the problem persists after attempting these solutions, please contact customer support.

8. SPECIFICATIONS

Brand	Morphy Richards
Model Name	30 RC OTG
Model Number	510070
Capacity	30 Liters
Wattage	1500 Watts
Product Dimensions (D x W x H)	38D x 50W x 32H Centimeters
Control Type	Knob Control
Temperature Range	Up to 250°C
Timer	60-Minute with Bell Alert
Special Features	Motorised Rotisserie, Removable Crumb Tray
Material	Stainless Steel

Color	Black
-------	-------

9. WARRANTY INFORMATION

The Morphy Richards 30 RC OTG comes with a **2-Year Warranty** from the date of purchase. This warranty covers manufacturing defects and ensures reliable performance under normal use.

To claim warranty service, please retain your purchase receipt and contact the customer support as detailed in the next section. The warranty does not cover damage caused by misuse, accident, unauthorized modification, or normal wear and tear.

10. CUSTOMER SUPPORT

For any queries, service requests, or warranty claims regarding your Morphy Richards 30 RC OTG, please contact the manufacturer or authorized service center.

- **Manufacturer:** M/S DB OEM Appliances
- **Marketed By:** Bajaj Electricals
- Please refer to the contact information provided on your product packaging or visit the official Morphy Richards India website for the most up-to-date service center details and contact numbers.