

[Manuals.plus](#) /

› [Mesliese](#) /

› Mesliese 90Kpa 6-in-1 Food Vacuum Sealer Instruction Manual

Mesliese 90Kpa 6-in-1 Food Vacuum Sealer

Mesliese 90Kpa 6-in-1 Food Vacuum Sealer Instruction Manual

Model: 90Kpa 6-in-1 Food Vacuum Sealer

INTRODUCTION

Thank you for choosing the Mesliese 90Kpa 6-in-1 Food Vacuum Sealer. This appliance is designed to preserve food freshness up to 10 times longer than traditional storage methods, reducing food waste and saving you money. Please read this manual thoroughly before use to ensure safe and efficient operation.



Image: The Mesliese 90Kpa 6-in-1 Food Vacuum Sealer actively sealing a bag containing salmon and herbs.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before using the appliance.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Close supervision is necessary when the appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Use only attachments recommended by the manufacturer.
- Do not use outdoors.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach the plug to the appliance first, then plug the cord into the wall outlet. To disconnect, turn any control to "off", then remove the plug from the wall outlet.
- This appliance is for household use only.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- 1x Mesliese Food Vacuum Sealer Machine
- 2x Vacuum Sealer Rolls (20 x 16 cm / 8" x 6.6' BPA-free)
- 5x Pre-cut Vacuum Sealer Bags (28 x 40.6 cm / 11" x 16" BPA-free)
- 1x User Manual
- 1x Air Suction Hose (for external vacuuming)
- 1x AC Power Cable
- 2x Sealing Sponges/Gaskets (replacement)
- 1x Built-in Cutter

Full Starter Kit & Extra Vacuum Seal Bags

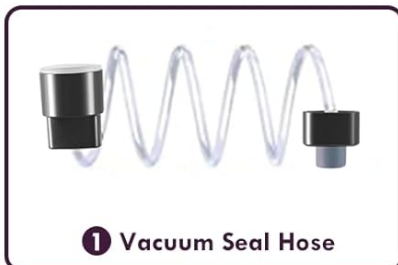
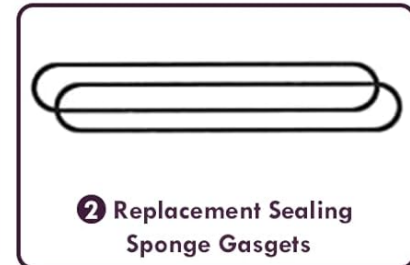


Image: A visual representation of the complete starter kit and extra vacuum seal bags included with the Mesliese vacuum sealer.

SETUP

1. **Unpack:** Carefully remove the vacuum sealer and all accessories from the packaging.
2. **Inspect:** Check the appliance for any signs of damage. Do not use if damaged.
3. **Placement:** Place the vacuum sealer on a flat, stable, and dry surface. Ensure there is enough space around the unit for proper operation.
4. **Power Connection:** Connect the AC power cable to the appliance and then plug it into a standard electrical outlet (110V).
5. **Lid Closure:** Ensure the lid is properly closed and locked before operation. You may need to press down on both sides of the lid until you hear a click.

OPERATING INSTRUCTIONS

General Operation

The Mesliese vacuum sealer features a 6-in-1 smart touch-screen operation system to meet various food preservation needs. It provides a powerful 90Kpa suction, ensuring efficient air removal in 3-10 seconds and sealing in 9-12 seconds.

Meslie 6-in-1 Smart Touch-Screen Operation System

Meets All Your Needs to Keep Food Fresh 5x Longer



Image: The Meslie vacuum sealer demonstrating its smart touch-screen operation system with a sealed food item.

Mesliese 90Kpa Powerful Suction

120W High Power 12l/Min

90KPa



Vacuum & Seal Your Food Quickly

And Tightly in 3-10s

Image: Visual representation of the Mesliese vacuum sealer's 90Kpa powerful suction and high power, quickly vacuuming and sealing food.

Using Vacuum Sealer Bags/Rolls

1. **Prepare the Bag:** If using a roll, use the built-in cutter to create a bag of the desired length. Seal one end of the bag using the "SEAL" function. Ensure the bag is clean and dry.
2. **Fill the Bag:** Place the food item into the bag, leaving at least 7-10 cm (3-4 inches) of space from the open end to the food for proper sealing.
3. **Position the Bag:** Place the open end of the bag into the vacuum chamber, ensuring it lies flat across the sealing strip.
4. **Close the Lid:** Close the lid firmly until both sides click into place.
5. **Select Mode:**
 - **Dry & Moist Modes:** Select "Dry" for solid food items and "Moist" for food with some liquid content.
 - **Normal & Soft Modes:** Select "Normal" for firm foods and "Soft" for delicate items to prevent crushing.
6. **Start Operation:**
 - Press "**VAC&SEAL**" to automatically vacuum and seal the bag.
 - Press "**SEAL**" to only seal the bag without vacuuming.

- Press **"STOP"** at any time to cancel the operation.

7. **Release:** Once the process is complete, the indicator light will turn off. Press the release buttons on both sides to open the lid and remove the sealed bag.

Using the External Vacuum System

The external vacuum system allows you to vacuum seal containers, jars, or wine bottles using the included air suction hose.

1. **Connect Hose:** Insert one end of the air suction hose into the external vacuum port on the appliance.
2. **Connect to Container:** Attach the other end of the hose to the vacuum port of your compatible container, jar, or wine stopper.
3. **Start Vacuum:** Close the appliance lid and press the **"VACUUM"** button. The appliance will remove air from the external container.
4. **Stop:** Once the desired vacuum level is reached, press **"STOP"** or wait for the automatic stop.
5. **Remove Hose:** Carefully remove the hose from both the appliance and the container.



Image: The Mesliese external vacuum system in action, demonstrating its compatibility with various accessories like food containers, mason jars, and

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your Mesliese vacuum sealer. The stainless steel surface and smooth vacuum chamber make cleaning easy.

1. **Unplug:** Always unplug the appliance from the power outlet before cleaning.
2. **Wipe Exterior:** Wipe the exterior of the appliance with a soft, damp cloth. Do not use abrasive cleaners or immerse the unit in water.
3. **Clean Vacuum Chamber:** Use a damp cloth or sponge to wipe clean the vacuum chamber and sealing strip area. Ensure no food residues are left behind.
4. **Dry Thoroughly:** Allow all parts to dry completely before closing the lid or storing the appliance.
5. **Sealing Strip:** Periodically check the sealing strip for any damage or wear. Replace if necessary using the provided spare gaskets. The high-temperature resistant sealing strip is designed for durability.



Image: Detailed view of the Mesliese vacuum sealer's durable 32x12mm high-temperature resistant sealing strip, highlighting its advanced five-layer

TROUBLESHOOTING

If you encounter any issues with your vacuum sealer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Appliance does not turn on.	Power cord not properly connected.	Ensure the power cord is securely plugged into both the appliance and the wall outlet.
Vacuum pump runs, but no vacuum is created.	Lid not properly closed/locked; Bag not correctly positioned; Sealing strip/gasket dirty or damaged.	Ensure the lid is firmly closed and locked on both sides. Reposition the bag so its open end is fully inside the vacuum chamber and flat over the sealing strip. Clean or replace the sealing strip/gasket.
Bag does not seal properly.	Sealing strip dirty or damaged; Bag material incompatible; Moisture or food particles on sealing area.	Clean the sealing strip. Ensure you are using compatible vacuum sealer bags. Wipe the inside of the bag's open end to remove any moisture or food particles before sealing.
Vacuum is weak or inconsistent.	External vacuum port not sealed; Air suction hose not properly connected (for external use).	Ensure the external vacuum port is covered if not in use. For external vacuuming, ensure the hose is securely connected to both the appliance and the container.

SPECIFICATIONS

- **Brand:** Mesliese
- **Model:** 90Kpa 6-in-1 Food Vacuum Sealer
- **Color:** Dark Grey
- **Suction Power:** 90 Kpa
- **Power:** 120W
- **Voltage:** 110V
- **Vacuum Time:** 3-10 seconds
- **Sealing Time:** 9-12 seconds
- **Item Weight:** 2.21 Kilograms
- **Unit Dimensions:** Approximately 37.8 x 14.5 x 8.9 cm
- **ASIN:** B0FJMCQ68F
- **First Available Date:** October 11, 2025

WARRANTY AND SUPPORT

Mesliese offers a **5-year extended warranty** for this product, including refund or replacement options. If you encounter any issues or have questions regarding your Mesliese 90Kpa 6-in-1 Food Vacuum Sealer, please do not hesitate to contact our customer support. We are committed to providing assistance and ensuring your satisfaction. For support, please refer to the contact information provided in your purchase documentation or visit the official Mesliese website.

