



Manuals.plus /

› AKASO /

› AKASO 360 Action Camera Standard Combo User Manual

## AKASO AKASO 360 Action Camera

# AKASO 360 Action Camera Standard Combo User Manual

Model: AKASO 360 Action Camera

## INTRODUCTION

---

Welcome to the user manual for your AKASO 360 Action Camera Standard Combo. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your camera to help you capture stunning 360-degree videos and photos. The AKASO 360 Action Camera is designed for immersive content creation, featuring 5.7K video recording, 72MP photo capabilities, and advanced in-camera stabilization.

## WHAT'S IN THE BOX

---

Before you begin, please ensure all items are present in your package:



Image: The AKASO 360 Action Camera, two rechargeable batteries, two USB charging cables, a 128GB microSDXC U3 memory card, a microSD to SD adapter, a cleaning cloth, and a protective carrying case.

- AKASO 360 Action Camera
- Rechargeable Batteries (x2)
- USB Charging Cables (x2)
- 128GB microSDXC U3 Memory Card
- MicroSD to SD Adapter
- Cleaning Cloth
- Protective Carrying Case

## 1. Charging the Battery

Before first use, fully charge the camera batteries. Insert a battery into the camera. Connect one of the provided USB charging cables to the camera's USB port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

## 2. Inserting the microSD Card

The AKASO 360 Action Camera requires a microSDXC card for storing footage. Your bundle includes a 128GB microSDXC U3 memory card. Locate the microSD card slot on the camera, typically under a protective flap. Insert the microSD card with the gold contacts facing the correct direction until it clicks into place.

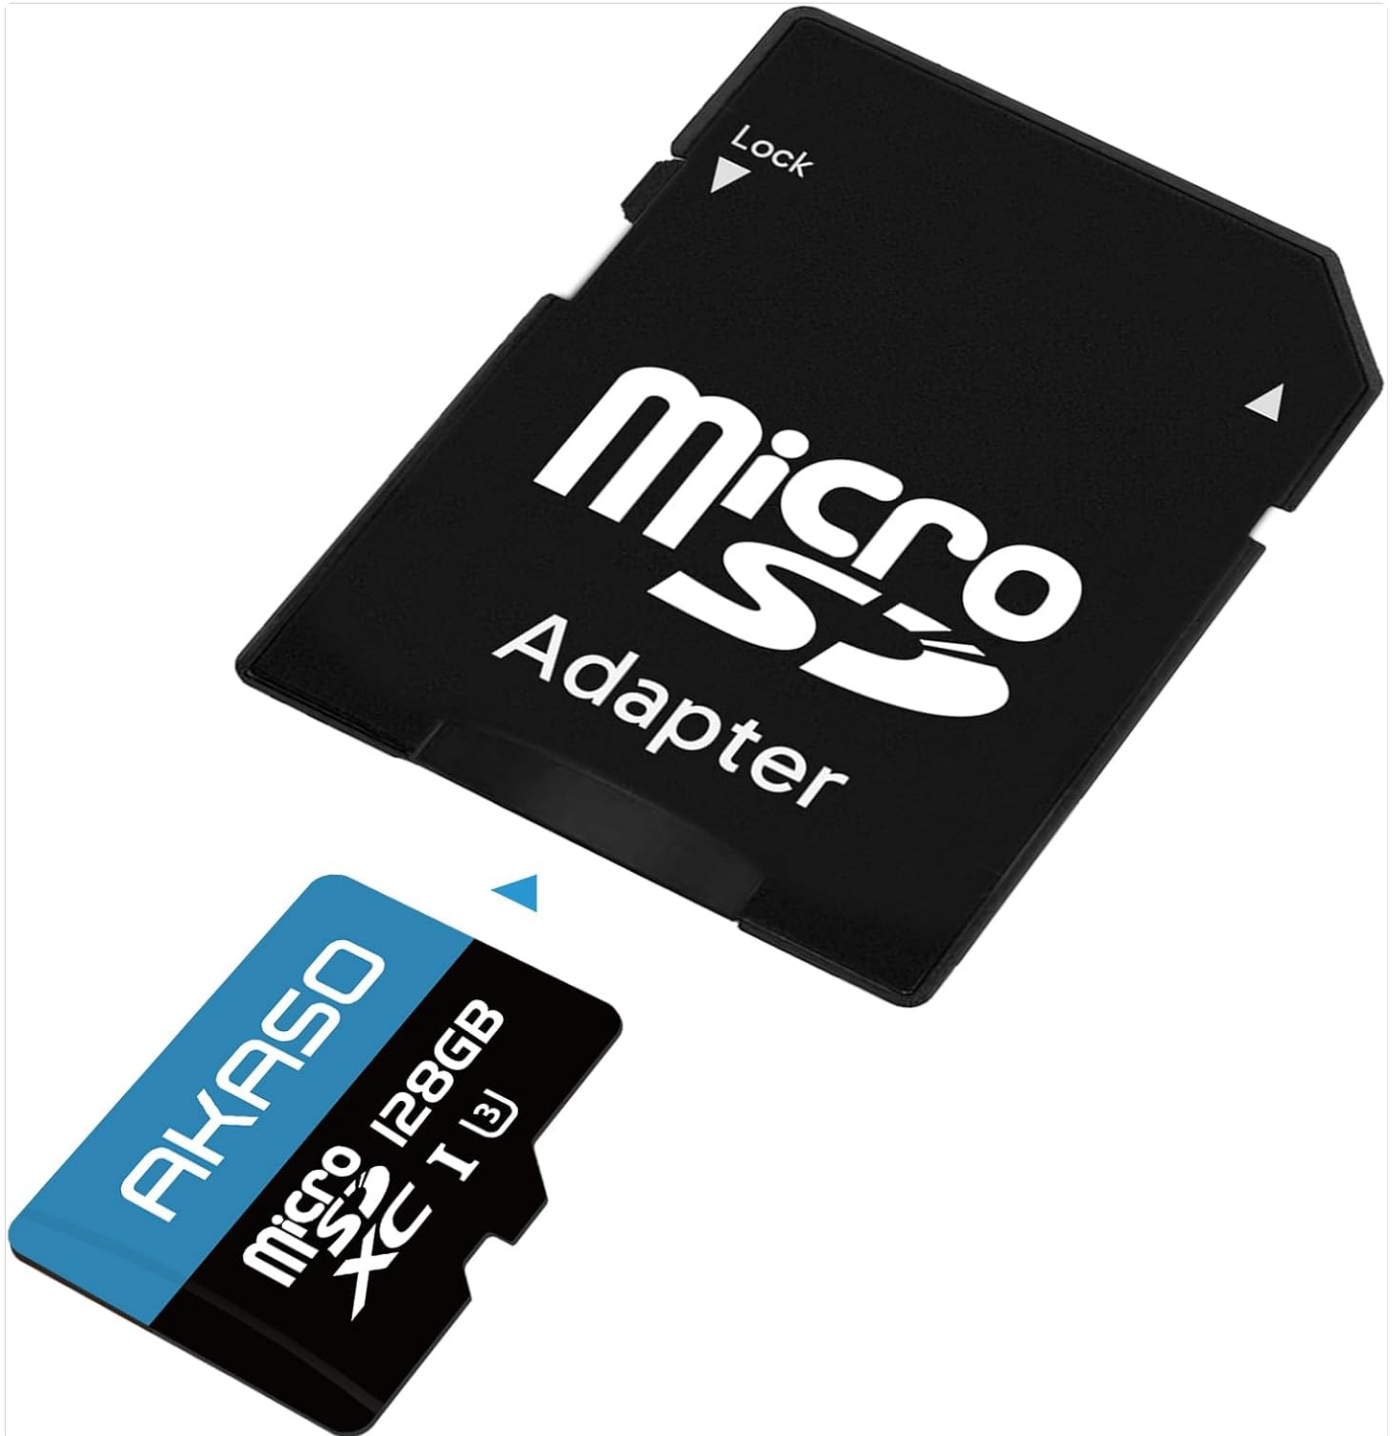


Image: A 128GB AKASO microSDXC card being inserted into a standard SD card adapter, illustrating the type of memory card used.

**Note:** Ensure the card is formatted by the camera before first use for optimal performance. Refer to the camera's on-screen menu for formatting options.

### 3. Powering On/Off

- **To Power On:** Press and hold the Power/Mode button for a few seconds until the screen illuminates.
- **To Power Off:** Press and hold the Power/Mode button again until the camera shuts down.

### 4. Connecting to the Mobile App

For advanced features, real-time preview, and easy editing, download the official AKASO mobile application from your device's app store. Enable Wi-Fi on your camera and connect your smartphone to the camera's Wi-Fi network. Follow the in-app instructions to pair your device.

## OPERATING THE CAMERA

---

### 1. Basic Controls

Familiarize yourself with the camera's buttons:

- **Power/Mode Button:** Powers the camera on/off and cycles through shooting modes (Video, Photo, etc.).
- **Shutter/Record Button:** Starts/stops recording video or takes a photo.
- **Navigation Buttons (if present):** Used to navigate menus and settings on the camera screen.

### 2. Video Recording (5.7K 360°)

The AKASO 360 captures immersive 360-degree video at 5.7K resolution. Select the video mode using the Power/Mode button. Press the Shutter/Record button to begin recording. Press it again to stop. The camera's dual lenses capture the full 360-degree field of view, which can be reframed later in the mobile app.



Image: A visual representation of 5.7K 360-degree video capture, showing a dog on a grassy field with a circular 360-degree perspective.

### **3. Photo Capture (72MP)**

Capture high-resolution 72MP 360-degree photos. Switch to photo mode and press the Shutter/Record button to take a picture. The dual 1/2" 48MP sensors contribute to the exceptional clarity and detail of your still images.



## 72MP Ultra HD Photo

*For the first time, our action camera captures the highest number of megapixels. Your photos have never been this sharp and clear!*

Image: A family standing on a bridge over a river, with "72MP" prominently displayed, illustrating the high-resolution photo capability.

### 4. Stabilization Features

The AKASO 360 Action Camera incorporates advanced stabilization for smooth footage:

- **360° Supersmooth Video:** In-app stabilization algorithms reduce shakes and jitters, providing stable video even in dynamic environments.
- **360° Horizon Steady:** This feature ensures your footage remains level regardless of how the camera is tilted or rotated during recording.




## Ultra-Smooth Videos

**Advanced in-app SuperSmooth stabilization and 360°Horizon Lock keep every shot rock-steady - no matter how wild things get!**

Image: A side-by-side comparison showing a blurry, unstabilized video frame labeled "OFF" next to a clear, stabilized frame labeled "ON", demonstrating the effectiveness of the camera's stabilization.

### 5. Invisible Selfie Stick Effect

Achieve unique third-person perspectives with the invisible selfie stick effect. When using a compatible selfie stick (not included), the camera's software automatically removes the stick from the final 360-degree footage, making it appear as if the camera is floating or being held by an invisible drone.

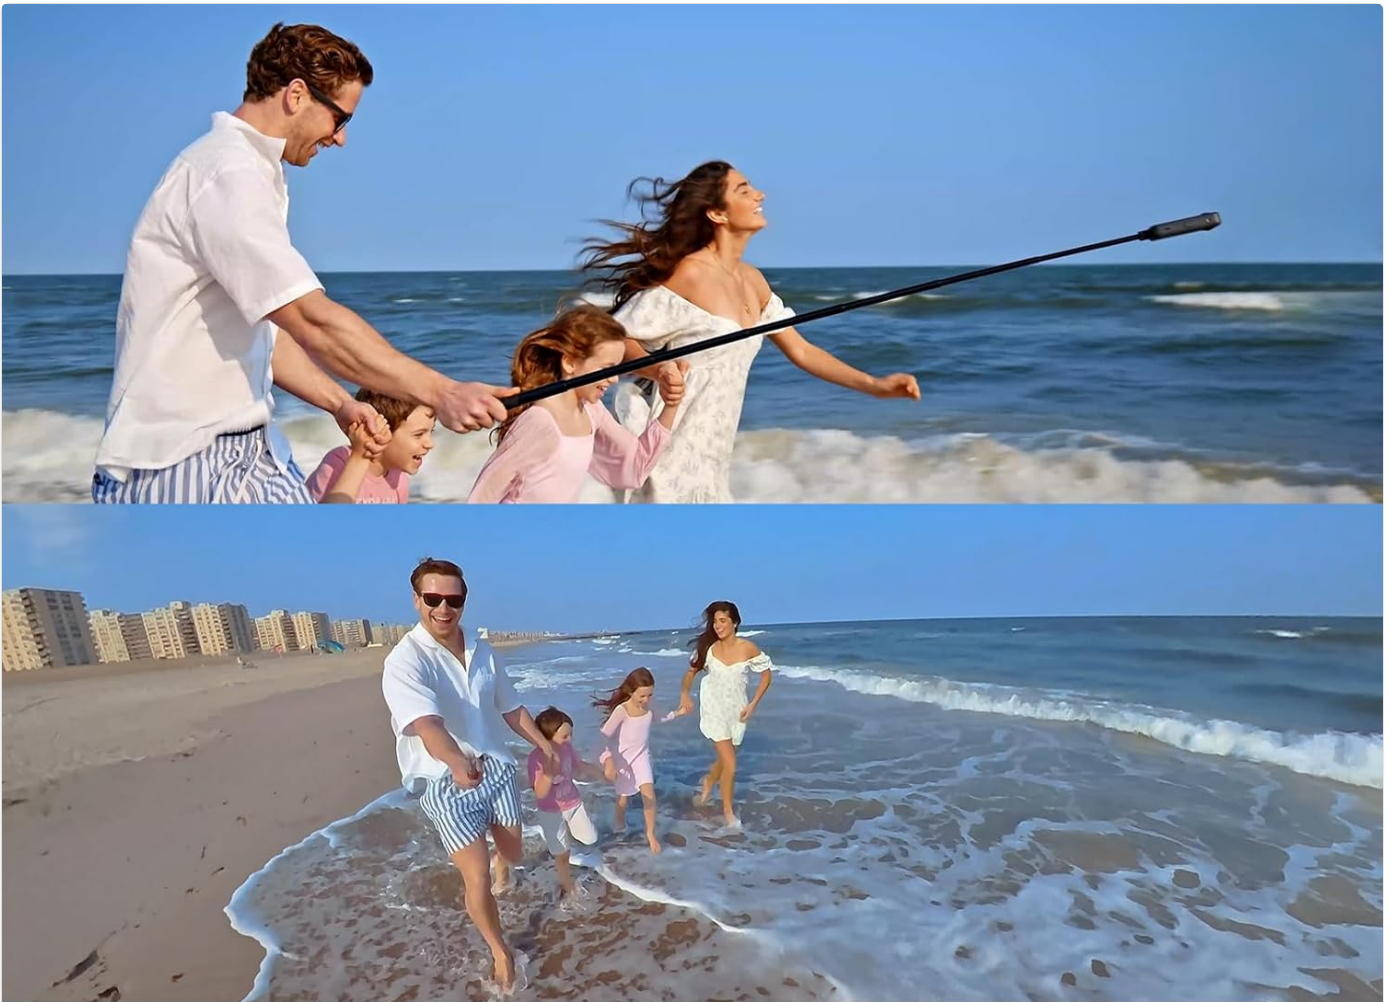

## Invisible Selfie Stick Effect

Shoot magic third-person and drone-style footage all by yourself with the Invisible Selfie Stick!


\*Invisible Selfie Stick sold separately.

Image: Two frames showing a family on a beach. The top frame shows a person holding a selfie stick, while the bottom frame shows the same scene with the selfie stick digitally removed, creating an invisible effect.

### 6. Using the Mobile App for Editing and Reframing

The AKASO mobile app is crucial for unlocking the full potential of your 360-degree footage. After recording, transfer your files to the app for advanced editing:

- **AI Tracking Active:** The app can intelligently track subjects in your 360-degree video, automatically reframing the shot to keep them in focus.
- **Shoot First, Reframe Later:** Record everything in 360 degrees, then use the app to choose your favorite angles and perspectives to create traditional flat videos or photos. This allows for creative flexibility after capture.

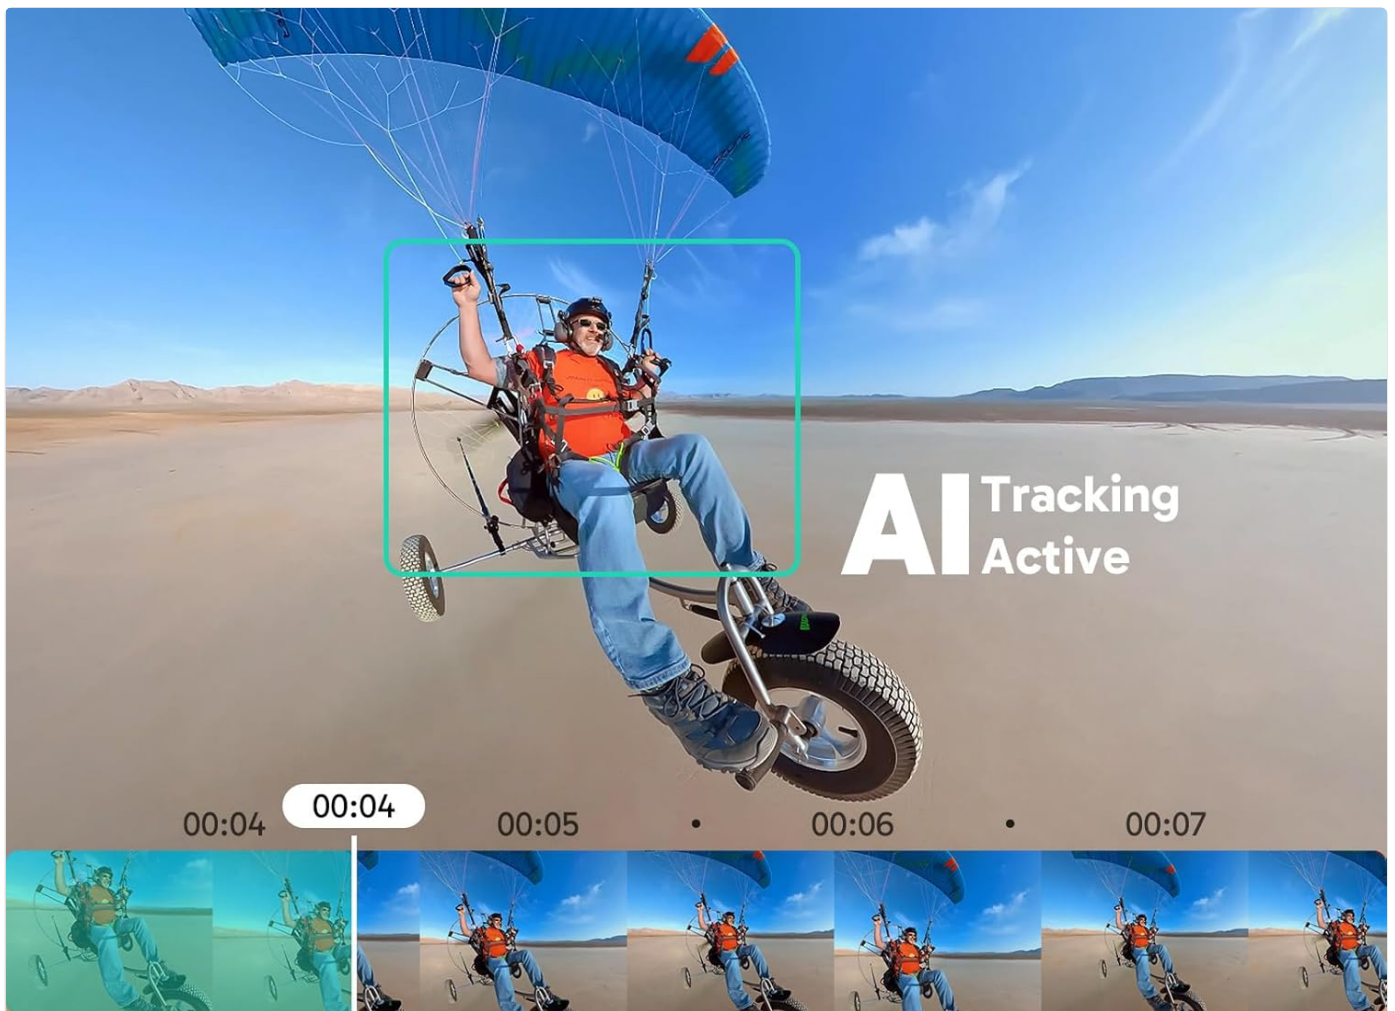


## **Edit with Ease, Create Without Borders**

***AI analyzes your footage to find the perfect story moments,  
then handpicks the best shots for you.***

Image: A screenshot from an editing interface showing a person paragliding, with a green box indicating AI tracking of the subject and a timeline below with various frames.



360°

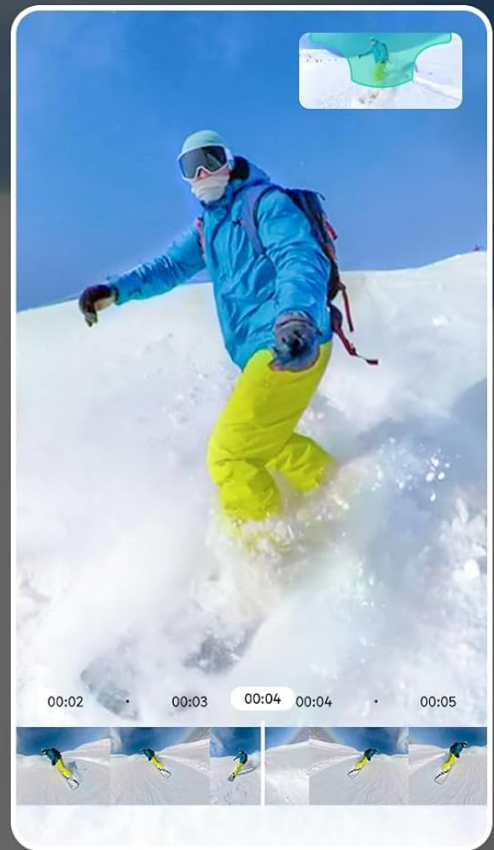

## Shoot First, Reframe Later

*Just hit record and enjoy the moment - reframe your perfect shots later in the app!*

Image: Two mobile phone screens displaying different reframed perspectives from a single 360-degree video of a snowboarder, illustrating the "Shoot First, Reframe Later" capability.

## MAINTENANCE

### 1. Cleaning the Camera and Lenses

Regular cleaning ensures optimal performance and image quality:

- Use the provided cleaning cloth or a soft, lint-free cloth to gently wipe the camera body.
- For lenses, use a lens cleaning pen or a specialized lens cloth. Avoid using abrasive materials or harsh chemicals.
- Ensure the camera is dry before closing any ports or compartments.

### 2. Battery Care

- Store batteries in a cool, dry place when not in use.
- Avoid fully discharging batteries frequently to prolong their lifespan.
- Do not expose batteries to extreme temperatures.

### 3. Storage

When not in use, store the camera in its protective carrying case to prevent scratches and damage from dust or impacts. Remove the battery if storing for extended periods.

## TROUBLESHOOTING

---

If you encounter issues with your AKASO 360 Action Camera, refer to the following common problems and solutions:

Problem	Possible Solution
Camera does not power on.	Ensure the battery is fully charged and correctly inserted. Try a different charged battery if available.
Recording stops unexpectedly.	Check if the microSD card is full or if it's a low-speed card. Use a U3 or V30 rated card. Format the card in-camera.
Wi-Fi connection issues.	Ensure the camera's Wi-Fi is enabled. Restart both the camera and your mobile device. Re-pair the devices in the app.
Poor image/video quality.	Clean the camera lenses. Ensure sufficient lighting. Check camera settings for resolution and frame rate.
Camera freezes or becomes unresponsive.	Remove and reinsert the battery to perform a hard reset. Update camera firmware if available.

## SPECIFICATIONS

---

Feature	Detail
Video Resolution	5.7K 360°
Photo Resolution	72MP
Image Sensors	Dual 1/2" 48MP
Stabilization	360° Supersmooth, 360° Horizon Steady
Memory Card Support	MicroSDXC (U3/V30 recommended, 128GB included)
Connectivity	Wi-Fi (for mobile app connection)
Special Features	Invisible Selfie Stick Effect, AI Tracking Active, Shoot First Reframe Later

## WARRANTY AND SUPPORT

---

AKASO products come with a standard manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official AKASO website. If you require technical support, have questions about your product, or need to initiate a warranty claim, please contact AKASO customer service through their official website or the contact information provided in your product packaging.

For the latest information, firmware updates, and additional resources, please visit [www.akaso.net](http://www.akaso.net)