

[manuals.plus](#) /› [Hatteker](#) /› [Hatteker HT-6105 Professional Hair Trimmer User Manual](#)

Hatteker HT-6105

Hatteker HT-6105 Professional Hair Trimmer User Manual

Model: HT-6105

INTRODUCTION

The Hatteker HT-6105 Professional Hair Trimmer is a high-performance grooming tool designed for precision and convenience. This manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new trimmer. Please read it thoroughly before first use and retain it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical appliance, basic precautions should always be followed, including the following:

- Do not reach for an appliance that has fallen into water. Unplug immediately.
- Do not use while bathing or in a shower.
- Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- Always unplug this appliance from the electrical outlet immediately after using.
- Unplug this appliance before cleaning, putting on or taking off parts.
- Close supervision is necessary when this appliance is used by, on, or near children or invalids.
- Use this appliance only for its intended household use as described in this manual. Do not use attachments not recommended by the manufacturer.
- Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged.
- Keep the cord away from heated surfaces.
- Never drop or insert any object into any opening.
- Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- Always attach plug to appliance first, then to outlet. To disconnect, turn all controls to "OFF", then remove plug from outlet.
- Do not use this appliance with a damaged or broken comb, as facial injury may occur.
- Always store this appliance in a moisture-free area.
- Ensure the cord is detached from the trimmer when not charging.

PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present:

- Hatteker HT-6105 Professional Hair Trimmer (Red)
- USB Charging Cable
- Cleaning Brush
- Lubricating Oil
- Guide Comb 1mm
- Guide Comb 2mm
- Guide Comb 3mm



Image: Hatteker HT-6105 Professional Hair Trimmer with all included accessories: the trimmer itself, three guide combs (1mm, 2mm, 3mm), a cleaning brush, lubricating oil, and a USB charging cable.

PRODUCT FEATURES

The Hatteker HT-6105 is engineered with advanced features for superior grooming:

- **Precise & Sharp Blades:** Features a self-sharpening 5CR15 stainless steel fixed blade with DLC coating and a ceramic moving blade for smooth, snag-free cutting. T-shaped design for outlining and detailing.
- **Dual-Speed Motor:** Two-gear motor allows flexible speed control for various hair types and cutting styles, operating with low noise.
- **Long-Lasting Battery:** Equipped with a rechargeable 1500 mAh Li-ion battery, providing up to 180 minutes of cordless operation after a 3-hour charge. Can also be used corded.
- **0mm Cutting & Guide Combs:** Achieves a close 0mm cut without a comb. Includes 1mm, 2mm, and 3mm attachment combs for versatile styling.
- **LED Display:** Integrated LED screen clearly shows battery level, speed settings, charging reminder, and maintenance reminder.
- **USB Charging:** Convenient Type-C fast charging, compatible with various USB charging devices.



Image: Visual breakdown of the Hatteker HT-6105's key features, including the DLC cutting blade, LED display, ON/OFF button, USB charging port, three guide combs, and one-click acceleration.



Image: Close-up view of the Hatteker HT-6105's sharp DLC-coated blade, highlighting its precision and "2X Faster Double-Cut" capability for efficient trimming.

POWERFUL MOTOR

High power motor, fast operation without jamming

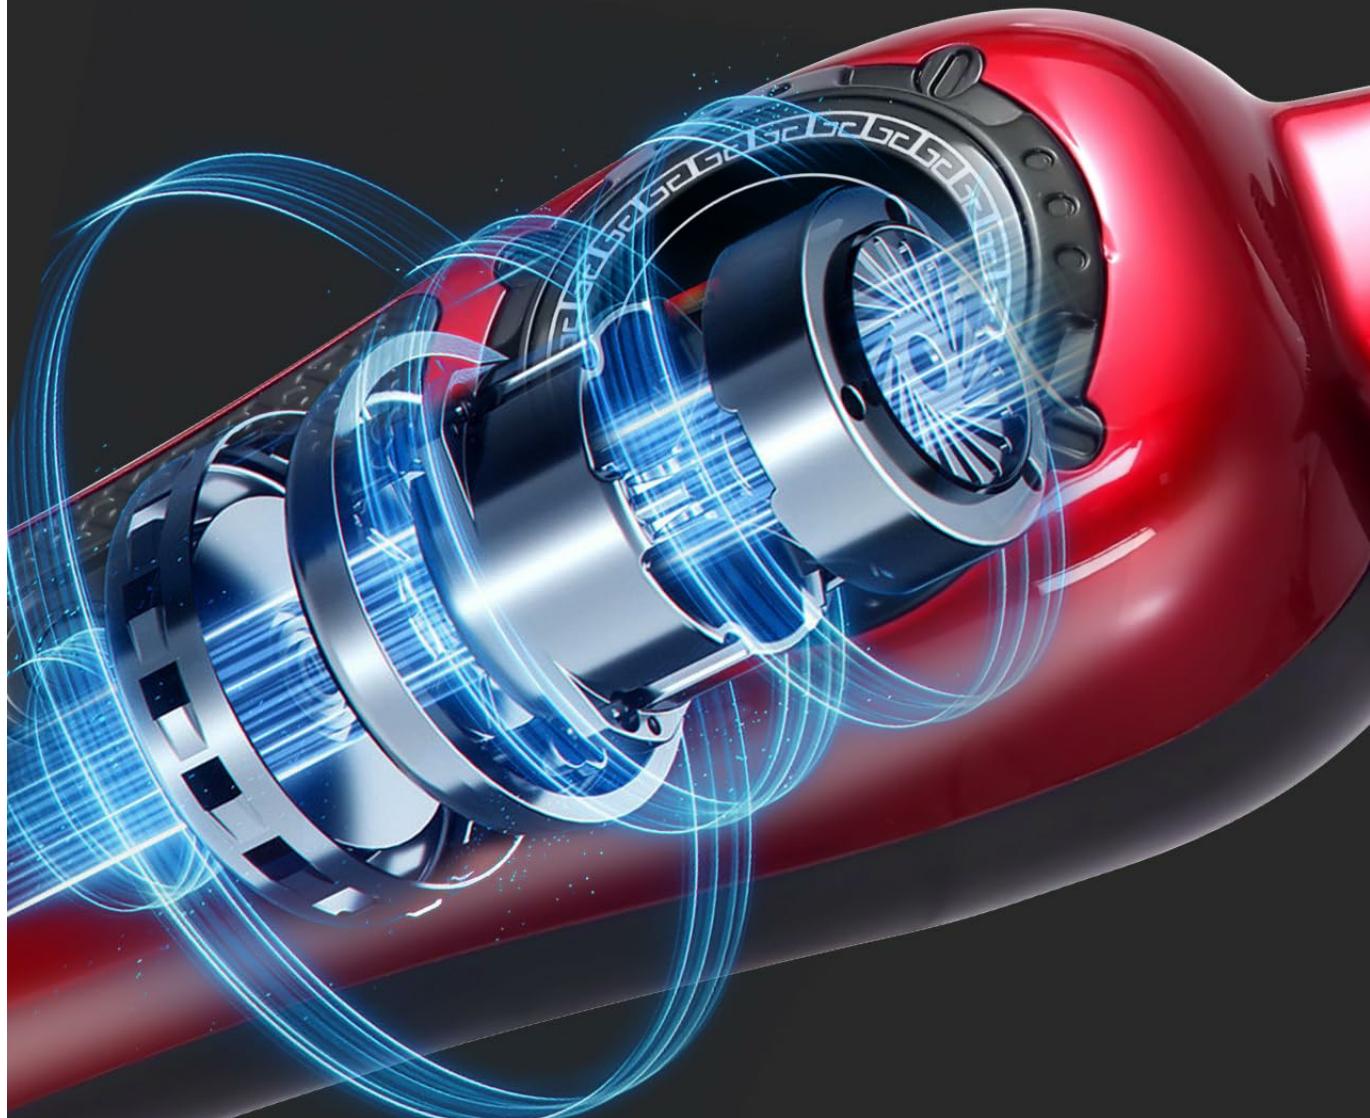


Image: An illustrative diagram showcasing the powerful motor inside the Hatteker HT-6105 trimmer, emphasizing its high performance and smooth operation without jamming.

SETUP

Charging the Trimmer

1. Before first use, fully charge the trimmer for approximately 3 hours.
2. Connect the USB charging cable to the trimmer's Type-C port.
3. Plug the other end of the USB cable into a compatible USB power source (e.g., computer, wall adapter, power bank).
4. The LED display will indicate the charging status and battery percentage. A full charge provides up to 180 minutes of cordless runtime.

USB CHARGING

Type-C fast charging, compatible with various charging devices
LED display screen is clear at a glance



1500 mAh
Lithium Battery



3 Hours
Charging Time



180 Mins
Working Time

Image: The Hatteker HT-6105 trimmer connected via its USB-C port to a laptop for charging, illustrating its compatibility with various charging devices and highlighting its 1500mAh battery, 3-hour charging time, and 180-minute working time.

Attaching Guide Combs

1. Ensure the trimmer is turned off before attaching or removing guide combs.
2. Select the desired guide comb (1mm, 2mm, or 3mm).
3. Align the comb with the trimmer blade and push it firmly until it clicks into place.
4. To remove, gently pull the comb away from the blade.



3 GUIDE COMBS

Image: A man using the Hatteker HT-6105 trimmer, with an inset showing the three available guide combs (1mm, 2mm, 3mm) for different cutting lengths.

OPERATING INSTRUCTIONS

Turning On/Off and Speed Control

- Press the power button to turn the trimmer on. The LED display will illuminate.
- The trimmer features a dual-speed motor. Press the acceleration button (often integrated with the power button or a separate button) to switch between speeds.
- Press the power button again to turn the trimmer off.

Using the Trimmer

1. For best results, ensure hair is clean and dry.
2. If using a guide comb, attach the desired size. For a 0mm close cut, use without a comb.
3. Hold the trimmer with the blade flat against the skin or at a slight angle, depending on the desired cut.

4. Move the trimmer slowly against the direction of hair growth.
5. For outlining and detailing, use the T-shaped blade carefully around the edges of the hairline, beard, or mustache.
6. Regularly clear accumulated hair from the blade during use to maintain optimal performance.



Image: A man getting his hair outlined with the Hatteker HT-6105 trimmer, demonstrating its precision for detailed styling.



Image: A man using the Hatteker HT-6105 trimmer for a haircut, with the trimmer and its three guide combs (1mm, 2mm, 3mm) displayed alongside.

MAINTENANCE

Cleaning the Trimmer

1. Turn off the trimmer and unplug it from any power source.
2. Remove any attached guide comb.
3. Use the provided cleaning brush to brush away hair clippings from the blades and the trimmer body.
4. For a more thorough clean, the blade head can be detached (refer to specific instructions if available, otherwise proceed with caution). Rinse the blade head under running water. Ensure the main body of the trimmer does not get wet.
5. Allow the blade head to air dry completely before reattaching or storing.

Oiling the Blades

- After each use, or at least once a week, apply a few drops of the lubricating oil (provided) to the blades.

- Turn the trimmer on for a few seconds to allow the oil to distribute evenly across the blades.
- Wipe off any excess oil with a soft cloth. Regular oiling ensures smooth operation and extends blade life.

Storage

- Store the trimmer in a cool, dry place, away from direct sunlight and moisture.
- Keep out of reach of children.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Trimmer does not turn on.	Battery is depleted.	Charge the trimmer fully (approx. 3 hours).
Trimmer runs slowly or pulls hair.	Blades are dirty or not oiled. / Hair accumulation.	Clean the blades thoroughly and apply lubricating oil. Remove any hair accumulation.
LED display not working.	Trimmer is off or battery is very low.	Turn on the trimmer or charge it. If problem persists, contact customer support.
Trimmer makes unusual noise.	Blades are not properly aligned or need oiling.	Ensure blades are clean and oiled. If noise persists, contact customer support.

SPECIFICATIONS

- **Model:** HT-6105
- **Brand:** Hatteker
- **Blade Material:** DLC-coated 5CR15 Stainless Steel fixed blade & Ceramic moving blade
- **Motor:** Dual-Speed Motor
- **Battery Type:** 1500 mAh Lithium-Ion
- **Charging Time:** Approximately 3 hours
- **Runtime:** Up to 180 minutes (cordless)
- **Charging Interface:** USB Type-C
- **Cutting Lengths:** 0mm (without comb), 1mm, 2mm, 3mm (with guide combs)
- **Product Dimensions:** 18.8 x 8.2 x 6 cm
- **Item Weight:** 360 g
- **Country of Origin:** China

LED DISPLAY

LED display screen is clear at a glance



Remaining Power Percentage

Acceleration Reminder

Charging Reminder

Maintenance Reminder

Image: A close-up of the Hatteker HT-6105's LED display, showing indicators for remaining power percentage, acceleration reminder, charging reminder, and maintenance reminder.

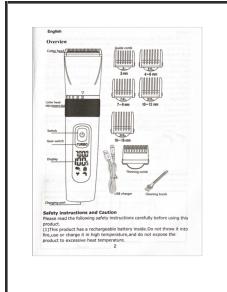
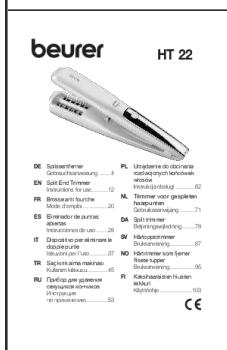
WARRANTY AND SUPPORT

Hatteker provides a 12-month quality warranty for this product. If you encounter any issues or are not satisfied with your purchase, please contact our customer service. Our team will respond within 24 hours to provide a satisfactory resolution.

For support, please refer to the contact information provided with your purchase or visit the official Hatteker website.

Brand Used by Professionals: HATTEKER Clippers & Trimmers are trusted by professionals in the salon and barbering industry worldwide, ensuring quality and performance.

Related Documents - HT-6105

	<p>HATTEKER RFC-695 Electric Hair Clipper User Manual and Safety Guide</p> <p>Comprehensive user manual for the HATTEKER RFC-695 Electric Hair Clipper, covering features, safety instructions, charging, usage, cleaning, maintenance, and environmental disposal.</p>
	<p>Hatteker HT-300 4-in-1 Hot Air Hair Brush Keratin Protect Styling Tool</p> <p>Discover the Hatteker HT-300, a 1000W 4-in-1 hot air hair brush for salon-quality styling. Features Keratin Protect technology for fast, hassle-free results. Includes multiple attachments for drying and styling.</p>
	<p>Hatteker HT-302 Auto-Rotation Hot Air Brush User Manual</p> <p>Comprehensive user manual for the Hatteker HT-302 Auto-Rotation Hot Air Brush, detailing its features, usage, safety precautions, and disposal information. Includes instructions for styling, changing accessories, and operation.</p>
	<p>Wellshave HT-6006 Bodygroomer Hair Trimmer Instruction Manual</p> <p>Comprehensive guide for the Wellshave HT-6006 Bodygroomer. Learn about its features, accessories, safe usage, cleaning, maintenance, and technical specifications.</p>
	<p>Beurer HT 22 Split End Trimmer User Manual</p> <p>User manual for the Beurer HT 22 Split End Trimmer, providing instructions for safe operation, maintenance, and technical specifications to help achieve healthier hair by cutting split ends.</p>