

[manuals.plus](#) /

- › [Timex](#) /
- › [Timex Men's Monopoly Watch Model TW2Y47100JR Instruction Manual](#)

Timex TW2Y47100JR

Timex Men's Monopoly Watch Model TW2Y47100JR Instruction Manual

Model: TW2Y47100JR

[Introduction](#) [Setup](#) [Operating](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

This manual provides essential instructions for the proper use and care of your Timex Men's Monopoly Watch, model TW2Y47100JR. Please read this manual thoroughly to ensure optimal performance and longevity of your timepiece.



Image 1.1: Front view of the Timex Men's Monopoly Watch. This image displays the watch face with its white dial, black hour and minute hands, and a green second hand. The iconic Monopoly man is visible on the lower half of the dial, above the "MONOPOLY" text. The watch features a black case and a green fabric strap with a black stripe down the center.

2. SETUP: SETTING THE TIME

To set the time on your Timex Monopoly Watch, follow these steps:

- 1. Locate the Crown:** The crown is the small knob located on the right side of the watch case.
- 2. Pull Out the Crown:** Gently pull the crown outwards until you feel a click. This will stop the second hand.
- 3. Set the Time:** Rotate the crown clockwise or counter-clockwise to move the hour and minute hands to the desired time.
- 4. Push In the Crown:** Once the correct time is set, push the crown back into its original position. The second hand will resume movement.



Image 2.1: Side view of the watch, highlighting the crown. This image shows the watch from the side, revealing the black case and the textured crown used for time adjustment. The green fabric strap is also visible, curving around.

3. OPERATING YOUR WATCH

3.1 Wearing the Watch

Adjust the green fabric strap to fit comfortably around your wrist. The buckle should be securely fastened to prevent the watch from slipping or causing discomfort.

3.2 Water Resistance

Your Timex Monopoly Watch is water resistant up to 30 meters (3 ATM). This means it is suitable for everyday use and can withstand splashes or brief immersion in water. However, it is **not recommended** for swimming, showering, or diving. Avoid operating the crown while the watch is wet to prevent water intrusion.



Image 3.1: Close-up of the watch's back casing. This image clearly shows the "WR 30M" marking, indicating its water resistance level, along with other model and cell information. The green fabric strap is also visible.

4. MAINTENANCE AND CARE

- **Cleaning:** Wipe the watch case and crystal with a soft, dry cloth. For the fabric strap, a damp cloth with mild soap can be used, but ensure it is thoroughly dried afterwards.
- **Avoid Chemicals:** Do not expose your watch to harsh chemicals, solvents, or detergents, as these can damage the case, strap, or internal components.
- **Temperature Extremes:** Avoid exposing the watch to extreme temperatures (hot or cold) or sudden temperature changes, which can affect its accuracy and seals.
- **Battery Replacement:** When the watch stops running, it indicates the battery needs replacement. This should be performed by a qualified watch technician to ensure proper sealing and function. The watch uses a SR626SW cell.

- **Storage:** When not in use, store your watch in a cool, dry place, away from direct sunlight and strong magnetic fields.

5. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Dead battery	Replace battery (SR626SW) by a professional.
Incorrect time display	Crown pulled out; time not set correctly	Push crown in completely. Re-set time as per Section 2.
Condensation under crystal	Water intrusion; exposure to extreme temperature changes	Seek professional service immediately to prevent further damage.

If you encounter issues not listed here or if the suggested solutions do not resolve the problem, please contact Timex customer support or an authorized service center.

6. SPECIFICATIONS

- **Model Number:** TW2Y47100JR
- **Case Diameter:** 36mm
- **Case Material:** Black case
- **Strap Length:** 8 inch
- **Strap Color:** Green
- **Dial Color:** White
- **Lens Material:** Acrylic
- **Water Resistance:** Up to 30 meters (3 ATM)
- **Movement:** Quartz
- **Battery Type:** SR626SW
- **Weight:** Approximately 8 ounces (watch and packaging)

7. WARRANTY AND SUPPORT

Your Timex watch is covered by a limited warranty. For detailed warranty information, including terms, conditions, and how to make a claim, please refer to the warranty card included with your purchase or visit the official Timex website.

For customer support, service, or to find an authorized service center, please visit the [Timex Store on Amazon](#) or the official Timex brand website.