

[Manuals.plus](#) /

> [Coleshome](#) /

> Coleshome 5-Drawer Fabric Dresser (Model: B0FJQDPPWN) - Instruction Manual

## Coleshome B0FJQDPPWN

# Coleshome 5-Drawer Fabric Dresser - Instruction Manual

Model: B0FJQDPPWN

## 1. INTRODUCTION

Thank you for purchasing the Coleshome 5-Drawer Fabric Dresser. This manual provides essential information for the safe assembly, operation, and maintenance of your new furniture. Please read these instructions carefully before assembly and retain them for future reference.

This dresser features a compact design with five fabric drawers, a sturdy steel frame, and a durable wooden top. It is designed for efficient storage in various living spaces.

## 2. SAFETY INFORMATION

- **Keep children away:** Small parts can be a choking hazard. Keep all components and packaging materials away from children during assembly.
- **Assembly by adults:** This product should be assembled by adults only.
- **Use on a level surface:** Always assemble and use the dresser on a flat, stable, and level surface to prevent tipping.
- **Anti-tip device:** Secure the dresser to the wall using the provided anti-tip kit to prevent serious injury from tipping furniture.
- **Weight limits:** Do not overload drawers or the top surface. Refer to the 'Specifications' section for weight capacities.
- **Proper handling:** Do not stand on the dresser or use it as a step stool.

## 3. PACKAGE CONTENTS

Before beginning assembly, ensure all parts listed below are present. If any parts are missing or damaged, please contact customer support.

### Components:

- Top Wooden Board

- Steel Frame (Left & Right Sides)
- Cross Bars (for stability)
- Adjustable Feet
- Fabric Drawers (5 units)
- Drawer Handles

#### Hardware:

- Screws for Top Board
- Screws for Frame Assembly
- Anti-Tip Kit (Wall anchor, strap, screws)
- Allen Wrench (if required)

## 4. SETUP AND ASSEMBLY INSTRUCTIONS

Follow these steps carefully to assemble your Coleshome 5-Drawer Fabric Dresser. It is recommended to have a second person assist with assembly.

### Step 1: Prepare the Area

Clear a spacious, clean, and level area for assembly. Lay out all components and hardware. Keep tools such as a screwdriver (not included) handy.

### Step 2: Assemble the Steel Frame

1. Attach the adjustable feet to the bottom of the two side steel frames. Ensure they are securely tightened but allow for minor adjustments later.
2. Connect the two side steel frames using the horizontal cross bars. Secure them with the provided screws. Ensure the frame is stable and square.
3. Install the X-shaped cross bar at the back of the frame for enhanced stability. This prevents wobbling.


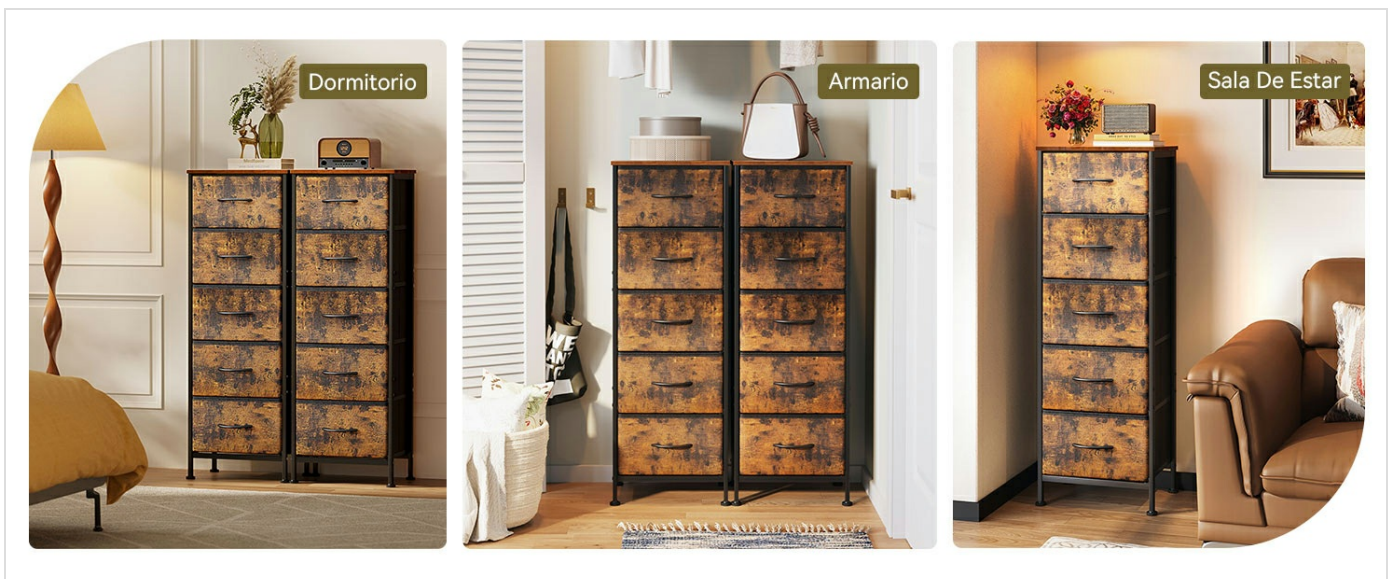


Image: Illustration of the steel frame assembly, highlighting the X-cross bar for stability.

### Step 3: Attach the Top Wooden Board

Place the wooden top board onto the assembled steel frame. Align the pre-drilled holes on the board with the holes on the frame. Secure the top board using the designated screws.

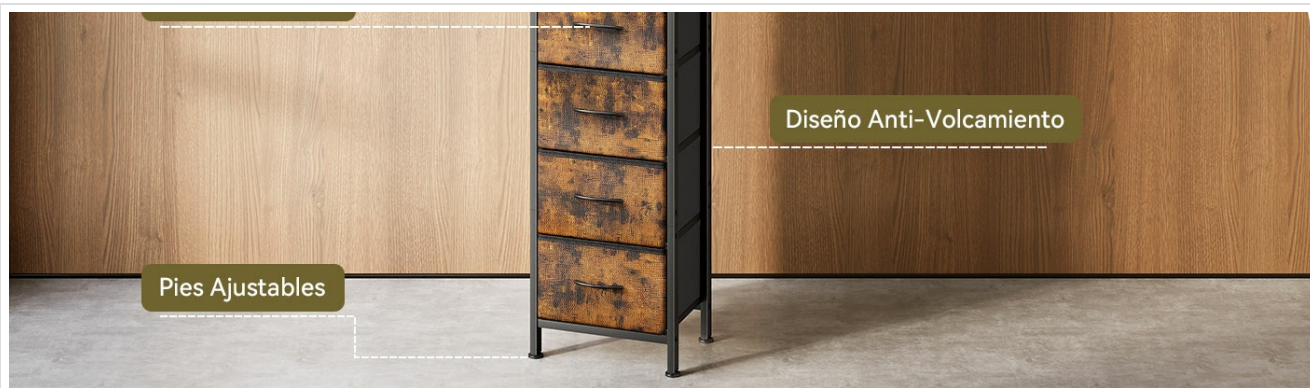

## Visualización De Detalles

Mostrar Detalles Para Satisfacer Sus Necesidades

Image: Detail of the quality wooden top board and an easy-pull handle on a drawer.

### Step 4: Prepare and Insert Fabric Drawers

1. Unfold each fabric drawer. Insert the bottom support panel into each drawer to give it shape and rigidity.
2. Attach the handles to the front of each fabric drawer.
3. Slide the assembled fabric drawers into the designated slots in the steel frame.

## Cada Uno Puede Contener Uno

Amplia Capacidad De Almacenamiento

 <b>60-80</b> Calcetines	 <b>8-11</b> Vaqueros	 <b>15-18</b> Camiseta
---	--	---



21cm  
28.5cm  
39.4cm

Image: Open fabric drawers demonstrating ample storage capacity for various items.

## Step 5: Install the Anti-Tip Kit

For safety, it is crucial to install the anti-tip device. Locate a suitable wall stud or use appropriate wall anchors (not included if different from standard) for your wall type.

1. Position the dresser in its desired location.
2. Attach one end of the anti-tip strap to the back of the dresser's top frame using the provided screw.
3. Mark the wall where the other end of the strap will reach, ensuring the strap is taut.
4. Drill a pilot hole in the marked spot on the wall. Insert a wall anchor if necessary.
5. Secure the other end of the strap to the wall using the provided screw.



Image: Visual representation of the anti-tip mechanism and adjustable feet for stability.

## Step 6: Adjust Leveling Feet

Adjust the leveling feet at the bottom of the dresser to ensure it stands stable and level on uneven floors. Turn the feet clockwise or counter-clockwise until the dresser is balanced.

## 5. OPERATING INSTRUCTIONS

### Using the Drawers:

- Gently pull the handles to open the fabric drawers.
- Push the drawers back in until they are fully closed. The fabric drawers are designed for quiet operation.
- Avoid forcing drawers open or closed.
- Distribute weight evenly within each drawer to prevent sagging or damage.

### Placement:

This dresser is suitable for bedrooms, living rooms, closets, and other areas requiring compact storage. Ensure it is placed on a stable surface and away from direct heat sources or excessive moisture.



Image: The dresser positioned in a living room, demonstrating its versatility.

## 6. MAINTENANCE

### Cleaning:

- **Wooden Top:** Wipe with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals. Dry immediately.
- **Steel Frame:** Wipe with a soft, damp cloth.
- **Fabric Drawers:** Spot clean with a mild detergent and a damp cloth. Do not machine wash or tumble dry. Allow to air dry completely before reinserting.

### General Care:

- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.
- Avoid exposing the dresser to direct sunlight or extreme temperature changes, which can affect the wooden top and fabric.
- Do not place hot items directly on the wooden top without a protective coaster.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Dresser is wobbly/unstable.	Uneven floor; loose screws; X-bar not installed.	Adjust leveling feet. Check and tighten all screws. Ensure the X-bar is correctly installed at the back.
Drawers do not slide smoothly.	Drawer overloaded; drawer not fully unfolded; foreign object in slot.	Reduce drawer contents. Ensure the drawer's bottom support is fully inserted. Check for obstructions in the frame slots.
Missing parts.	Packaging error.	Review 'Package Contents' section. Contact customer support with your purchase details.

## 8. SPECIFICATIONS

Feature	Detail
Brand	Coleshome
Model Number	B0FJQDPPWN
Overall Dimensions (D x W x H)	30 cm x 40 cm x 120 cm
Number of Drawers	5
Color	Vintage
Style	Modern
Assembly Required	Yes
Product Weight	7.3 Kilograms
Frame Material	Steel
Top Material	Wood
Drawer Material	Fabric
Country of Origin	China

# Dimensiones del Producto



Image: Detailed product dimensions for the dresser and individual drawers.

## 9. WARRANTY AND SUPPORT

For warranty information, missing parts, or technical support, please contact Coleshome customer service through your original point of purchase. Please have your model number (B0FJQDPPWN) and purchase date available when contacting support.

You can also visit the official Coleshome brand store for more information: [Coleshome Brand Store](#)

