

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

> [Coleshome](#) /

> Coleshome 4-Drawer Fabric Dresser Instruction Manual

## Coleshome 4-Drawer Fabric Dresser

# Coleshome 4-Drawer Fabric Dresser Instruction Manual

Model: 4-Drawer Fabric Dresser | Brand: Coleshome

## INTRODUCTION

Thank you for choosing the Coleshome 4-Drawer Fabric Dresser. This compact and space-saving dresser is designed to provide efficient storage solutions for various items in your bedroom or living room. Its robust construction, featuring a sturdy steel frame, high-quality wood top, and X-brace for stability, ensures durability. The flexible adjustable feet adapt to uneven floors, providing stability wherever it is placed. This manual will guide you through the assembly, operation, and maintenance of your new dresser.





Image: The Coleshome 4-Drawer Fabric Dresser, showcasing its compact design and suitability for various room settings.

## PRODUCT DIMENSIONS

---

The Coleshome 4-Drawer Fabric Dresser measures 40 cm (Width) x 30 cm (Depth) x 80 cm (Height). Each fabric drawer provides ample space for your belongings.

# Dimensions du Produit



Image: Detailed diagram illustrating the overall dimensions of the dresser and individual drawer sizes.

## SETUP INSTRUCTIONS

### 1. Unboxing and Component Check

Carefully unpack all components from the packaging. Lay them out on a clean, soft surface to prevent scratches. Verify that all parts listed in the included assembly guide are present. If any parts are missing or damaged, please contact customer support.

### 2. Assembly

Follow the step-by-step instructions provided in the assembly manual that came with your product. Typically, assembly involves:

1. Assembling the steel frame using the provided screws and tools.
2. Attaching the high-quality wood top to the assembled frame.
3. Inserting the fabric drawers into the designated slots.
4. Adjusting the feet to ensure the dresser is level and stable on your floor. The X-brace design enhances overall stability.

Assembly is designed to be straightforward. Ensure all connections are secure before use.

## OPERATING INSTRUCTIONS

The Coleshome 4-Drawer Fabric Dresser is designed for easy and versatile storage.

### Using the Drawers

- Gently pull the handles to open the fabric drawers.
- Organize small items, clothing, blankets, or other essentials within the spacious drawers.
- Push the drawers back in until they are fully closed.



Image: The dresser with drawers open, demonstrating its large storage capacity for various items like socks, t-shirts, pants, and toys.

### Top Surface Usage

The sturdy wood top provides a stable surface for displaying decorative items, lamps, books, or other personal belongings. Avoid placing excessively heavy objects on the top surface to maintain stability and prevent damage.

# Planche En Bois Robust

Résistant à L'Usure et Imperméable



Planche En Bois  
De Qualité



Tiroir De Grande Capacité

Image: Close-up of the robust wooden top surface, showcasing its quality and suitability for holding decorative items.

## MAINTENANCE

### Cleaning the Wood Top

- Wipe the wood top with a soft, damp cloth.
- Avoid using harsh chemicals or abrasive cleaners, as these can damage the finish.
- Promptly wipe up any spills to prevent staining.

### Cleaning the Fabric Drawers

- For light cleaning, use a lint roller or a soft brush to remove dust and debris.
- For stains, spot clean with a mild detergent and a damp cloth. Allow to air dry completely.
- Do not machine wash or tumble dry the fabric drawers.

### Frame Care

- Wipe the steel frame with a damp cloth as needed.
- Periodically check all screws and connections to ensure they remain tight. Retighten if necessary.

## TROUBLESHOOTING

### Dresser is Wobbly

- Ensure all assembly screws are securely tightened.
- Adjust the flexible feet at the bottom of the dresser to compensate for uneven flooring.

## Drawers Do Not Slide Smoothly

- Check that the fabric drawers are inserted correctly and are not overloaded.
- Ensure there are no obstructions in the drawer slots.

## Missing Parts

If you find any parts missing during assembly, please contact Coleshome customer service for assistance.

## SPECIFICATIONS

<b>Brand</b>	Coleshome
<b>Model</b>	4-Drawer Fabric Dresser
<b>Color</b>	Black
<b>Product Dimensions (W x D x H)</b>	40 cm x 30 cm x 80.2 cm
<b>Item Weight</b>	5.85 Kilograms
<b>Number of Drawers</b>	4
<b>Material</b>	Steel frame, Fabric drawers, Wood top
<b>Assembly Required</b>	Yes

## WARRANTY AND SUPPORT

Coleshome offers a 30-day return and exchange guarantee for this product. Our professional customer service team is available online 24/7 to provide effective solutions for any inquiries or issues you may encounter. Please refer to your purchase documentation for specific contact details or visit the Coleshome brand store on Amazon. For further assistance, you can visit the Coleshome store: [Coleshome Brand Store](#)