

[manuals.plus](#) /› [gogonova](#) /› [gogonova Musical Plush Caterpillar Toy Instruction Manual \(Model GT1\)](#)**gogonova GT1**

gogonova Musical Plush Caterpillar Toy

INSTRUCTION MANUAL - MODEL GT1

1. Introduction

Thank you for choosing the gogonova Musical Plush Caterpillar Toy. This versatile toy is designed to engage infants from 0 to 12 months with multiple sensory experiences, including music, textures, and sounds. It promotes early development through interactive play and is crafted with safety and hygiene in mind. Please read this manual thoroughly before use to ensure proper operation and maintenance.

2. Safety Information

- Always supervise infants during play.
- Inspect the toy regularly for any signs of damage or wear. Discontinue use if any parts are broken or loose.
- Ensure the music box is securely placed inside the toy after cleaning or battery replacement.
- Keep small parts, such as batteries, out of reach of children to prevent choking hazards.
- This product is CPSC certified for safety.

3. Package Contents

Your gogonova Musical Plush Caterpillar Toy package should contain:

- 1 x Musical Plush Caterpillar Toy (Green)
- 1 x Detachable Teething Toy (Star shape)
- 1 x Detachable Rattle Ring



Image: The green gogonova Musical Plush Caterpillar Toy with its detachable star-shaped teether and rattle ring.

4. Key Features

- **Washable Design:** The plush toy is machine and hand washable after removing the music box and detachable parts.
- **Musical Function:** Features 10 early-learning songs activated by an extra-large one-touch button.
- **7-in-1 Sensory Engagement:** Combines music, rattle, teether, crinkle, squeak, bell, and rustle sounds.
- **Multiple Textures:** Various fabric textures and patterns for tactile stimulation.
- **Detachable Accessories:** Includes a star-shaped teether and a rattle ring that can be removed or replaced.
- **Tummy Time Support:** Engaging design encourages longer tummy time, aiding in neck, back, and muscle development.

- **Height Chart:** Integrated height measurements on the underside of the caterpillar.



Image: A baby engaging with the musical caterpillar toy, illustrating its role in brain, visual, muscle, and auditory development, and preventing flat head syndrome.

5. Setup

5.1. Initial Inspection

Upon unpacking, inspect the toy for any shipping damage. Ensure all listed package contents are present.

5.2. Battery Installation (if needed)

The music box is pre-installed. If music function is not working or requires new batteries, follow these steps:

1. Locate the Velcro closure on the underside of the caterpillar's head.
2. Open the Velcro and carefully remove the small woven bag containing the music box.
3. Gently cut a small opening in the woven bag to access the music box. Do not cut the entire bag off.
4. Press the link point to disconnect the music box from the toy's internal wiring.
5. Using a small screwdriver, open the battery compartment on the music box.
6. Insert new batteries (type specified on the music box, usually button cells), ensuring correct polarity.

Align the bottom of the battery with the spring.

7. Close the battery compartment and re-screw it.
8. Reconnect the music box to the internal wiring.
9. Tuck the music box and its woven bag back into the caterpillar's head and secure the Velcro.

Your browser does not support the video tag.

Video: Demonstrates how to address music interruption by tapping the toy, pressing the start button, or reinserting/replacing batteries in the music box.

6. Operating Instructions

6.1. Activating Music

Press the large music button located on the caterpillar's hand to play one of 10 early-learning songs. Press again to pause or switch songs.

6.2. Sensory Exploration

- Encourage your baby to touch and feel the different textures on each segment of the caterpillar.
- Shake the rattle ring and squeeze the crinkly and squeaky segments to introduce various sounds.
- The star-shaped teether can be used to soothe teething gums.

Why choose GOGONOVA ?

Ours	VS	Others
 Washable Design		 Not Washable
 Extra-Large Buttons	 VS	 Hidden Buttons
 Pause Switching Function	 VS	 No Pause
 10 Songs	 VS	 Only 1 Song
 Interchangeable Part	 VS	 Fixed Design

Image: Detailed view of the musical caterpillar's head, highlighting the large music button and the upgraded detachable rattle design.

7. Maintenance and Cleaning

7.1. Disassembly for Cleaning

1. Open the Velcro on the underside of the caterpillar's head.
2. Remove the woven bag containing the music box.
3. Disconnect the music box from the internal wiring by pressing the link point.
4. Remove any detachable rattles or teethers from the toy.

7.2. Cleaning the Plush Toy

The plush caterpillar (without the music box) can be cleaned by machine or hand washing.

- **Machine Wash:** Place the plush toy in a laundry bag and wash on a gentle cycle with cold water.
- **Hand Wash:** Wash with mild soap and cold water.
- After washing, gently fluff the cotton clusters by hand if needed.
- Allow the toy to air dry completely before reassembling. Do not soak in water for more than 24 hours.

Video: Instructions on how to disassemble the music box and detachable parts for cleaning the plush toy.

8. Troubleshooting

8.1. Music Interruption

If the music stops or plays intermittently, this can be caused by:

- **Bumps during shipping or storage:** Gently tap the caterpillar to reset the battery connection.
- **Loose connection:** Press the start button repeatedly to restart the music.
- **Low or dead batteries:** Reinsert existing batteries or replace them with new ones (refer to Section 5.2 for instructions).

9. Specifications

Feature	Detail
Brand	gogonova
Model Number	GT1
Material Composition	100% Polyester
Item Weight	9.9 ounces
Package Dimensions	7.2 x 6.46 x 3.5 inches
Age Range	Infant, Toddler (0-12 months)
Batteries Required	Yes (type not specified in input, but implied by music box)

10. Warranty and Support

For warranty information, product support, or to contact customer service, please refer to the official gogonova website or the contact information provided on the product packaging.

You can visit the gogonova store on Amazon: [gogonova Amazon Store](#)