

Borosil BIF22PC01

Borosil 2200W Smart Kook Infrared Induction Cooktop User Manual

MODEL: BIF22PC01

Introduction

Welcome to the Borosil Smart Kook Infrared Induction Cooktop. This manual provides essential information for the safe and efficient operation of your appliance. Please read it thoroughly before use and retain it for future reference. This 2200W cooktop features a digital display with touch buttons, a durable glass crystallite plate, and 8 preset cooking modes, designed to simplify your daily cooking.

Important Safety Instructions

To reduce the risk of fire, electric shock, injury to persons, or damage to the appliance, always follow basic safety precautions, including the following:

- Read all instructions carefully before using the appliance.
- **Caution: The glass surface is hot after cooking. Do not touch with bare hands immediately after use. Allow it to cool completely.**
- Ensure the cooktop is placed on a stable, flat, heat-resistant surface, away from water and other heat sources.
- Do not immerse the appliance, cord, or plug in water or other liquids.
- Unplug the cooktop from the outlet when not in use, before cleaning, and before moving.
- Keep the appliance out of reach of children and pets.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Ensure adequate ventilation around the cooktop during operation.
- The cooktop is equipped with overheat protection and up to 4KV surge protection for enhanced safety.
- Use only Borosil recommended accessories.

SAFE TO USE



flame cooking

- ✓ Overheat Protection
- ✓ Super quick heating due to high wattage



No-flame, cooking

Image illustrating the safety benefits of no-flame cooking with the Borosil Smart Kook Infrared Induction Cooktop compared to traditional flame cooking, highlighting reduced fire risk.

Product Components

Your Borosil Smart Kook Infrared Induction Cooktop package includes the following items:

- 1N Infrared Cooker Unit
- 1N SS Jali for Barbeque
- 1N User Manual

Familiarize yourself with the main parts of the cooktop:

EASY TO OPERATE



Image showing the Borosil Smart Kook Infrared Induction Cooktop's control panel, cooking zone, and the temperature and time control knob. The control panel features touch buttons for Fried, BBQ, Soup, Function, Timer, and ON/OFF.

Setup

1. **Unpack:** Carefully remove the cooktop and all accessories from the packaging. Retain packaging for future transport or storage.
2. **Placement:** Place the cooktop on a dry, flat, stable, and heat-resistant surface. Ensure there is sufficient space around the unit for proper ventilation (at least 10-15 cm from walls or other appliances). Do not place it near water sources or flammable materials.
3. **Power Connection:** Plug the power cord into a standard 230 Volts (AC) electrical outlet. Ensure the outlet is properly grounded.

Operating Instructions

Powering On/Off

To turn the cooktop ON, press the **ON/OFF** touch button. The digital display will illuminate. To turn the cooktop OFF,

press the **ON/OFF** button again. The automatic cooling fan will continue to operate for a short period after turning off to cool the unit.

Using the Control Panel and Knob

The cooktop features a user-friendly digital display and touch-sensitive buttons for various functions. The temperature and time control knob allows for precise adjustments during cooking.

Cookware Compatibility

Unlike traditional induction cooktops, the Borosil Smart Kook Infrared Cooktop works with all types of metal cookware. This includes pots and pans made of copper, aluminum, and steel. Flat-bottomed cookware is not a requirement for this appliance.



Image illustrating the Borosil Smart Kook Infrared Induction Cooktop's compatibility with various metal cookware types, including copper, aluminum, and steel. The image shows different pots placed on the cooktop.

Preset Cooking Modes

The cooktop offers 8 convenient preset cooking modes to simplify your culinary tasks. Select the desired mode by pressing the corresponding touch button or cycling through options using the 'Function' button:

- **Deep Fry:** Optimized for deep frying.
- **Pressure Cooking:** Suitable for pressure cooker use.
- **Milk/Tea:** Ideal for heating milk or preparing tea.
- **Curry:** Pre-set for cooking various curries.
- **Boil:** For boiling water or other liquids.
- **Roti/Dosa:** Specific setting for making rotis and dosas.
- **Idli:** Optimized for steaming idlis.
- **BBQ:** Use with the included SS Jali for barbeque cooking.



Image showing the Borosil Smart Kook Infrared Induction Cooktop with the included stainless steel grill rack, demonstrating its use for barbeque cooking.

QUICK, EFFICIENT & SMART



Image of the Borosil Smart Kook Infrared Induction Cooktop in operation, displaying a dish being cooked in a pan. The digital display shows '2:30', indicating a timer or cooking duration. The image also highlights the 1-year warranty and 2200W power.

Maintenance and Cleaning

Regular cleaning and maintenance will ensure the longevity and optimal performance of your cooktop.

1. **Always unplug the cooktop** from the power outlet and allow it to cool completely before cleaning.
2. **Cleaning the Glass Surface:** Wipe the glass crystallite plate with a soft, damp cloth. For stubborn stains, use a mild detergent specifically designed for glass cooktops. Rinse with a clean, damp cloth and dry thoroughly. Do not use abrasive cleaners, scouring pads, or harsh chemicals.
3. **Cleaning the Body:** Wipe the exterior plastic body with a soft, dry, or slightly damp cloth. Do not allow water to enter the internal components.
4. **Ventilation:** Ensure the ventilation openings are clear of dust and debris. The automatic cooling fan will help maintain the unit's temperature after use.
5. Do not immerse the entire unit in water or any other liquid.

Troubleshooting

If you encounter any issues with your Borosil Smart Kook Infrared Induction Cooktop, please refer to the following common troubleshooting steps:

- **Cooktop does not turn on:**
 - Ensure the power cord is securely plugged into a working 230V AC outlet.
 - Check if the main power switch or circuit breaker has tripped.
 - Press the ON/OFF button firmly.
- **Cooktop is not heating:**
 - Verify that the cooktop is powered on and a cooking mode is selected.
 - Ensure the cookware is properly placed on the cooking zone.
- **Unusual odors or smoke:**
 - This may occur during initial use due to manufacturing residues. It should dissipate quickly.
 - If smoke persists or is accompanied by burning smells, immediately unplug the unit and contact customer support.

If the problem persists after attempting these steps, please contact Borosil customer support for assistance.

Product Specifications

Feature	Specification
Brand	Borosil
Model Number	BIF22PC01
Wattage	2200 Watts
Voltage	230 Volts (AC)
Heating Elements	1
Colour	Black
Item Dimensions (W x D x H)	41.4W x 28D x 6H Centimeters
Item Weight	2.32 Kilograms
Material Type	Plastic
Heater Surface Material Type	Crystal Glass
Special Features	Adjustable Temperature, Cool Touch, Digital Display, Power-On Indicator, Timer, Overheat Protection, 4KV Surge Protection
Included Components	1N Infrared Cooker, 1N SS Jali for Barbeque, 1N User Manual

COMES WITH GRILL RACK FOR BARBEQUE

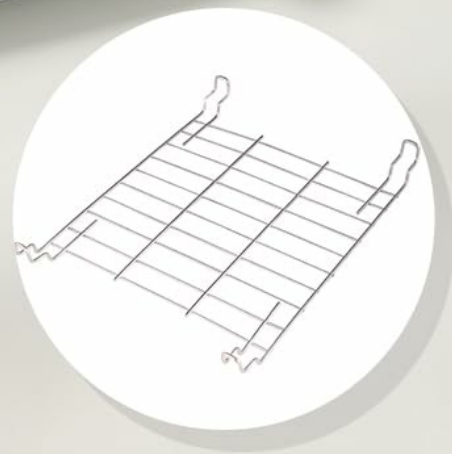


Image displaying the top surface dimensions of the Borosil Smart Kook Infrared Induction Cooktop. The cooktop measures 41.4 cm in width and 28 cm in depth.



Image of the Borosil Smart Kook Infrared Induction Cooktop highlighting its 'Up to 4KV Surge Protection' feature, ensuring electrical safety.

Warranty and Customer Support

Warranty: This Borosil product comes with a 1-year warranty against any manufacturing defects from the date of purchase.

For customer support, service requests, or warranty claims, please contact Borosil Limited directly. Ensure you have your purchase receipt and product model number (BIF22PC01) available when contacting support.

Manufacturer Contact Information:

Borosil Limited
1101, Parinee Crescenzo, G Block, BKC,
Bandra Kurla Complex, Bandra East,
Mumbai, Maharashtra 400051, India

