

Mini Action Camera 4K

Generic 4K Mini Action Camera User Manual

MODEL: MINI ACTION CAMERA 4K

Introduction

This manual provides detailed instructions for the Generic 4K Mini Action Camera. It covers setup, operation, maintenance, and troubleshooting to ensure optimal performance and longevity of your device. Please read this manual thoroughly before use and retain it for future reference.

What's in the Box

- Mini Video Camera 4K
- Waterproof Case
- Magnetic Lanyard
- 360° Swivel Back Clip
- Helmet Mount
- Bike Mount
- Side Mount
- Mounting Adapter
- Camera Frame
- Rectangular Adhesive Pads
- Instruction Manual
- Data Cable (Type-C)



The compact Generic 4K Mini Action Camera, shown with its sleek black design.

Product Features

- Thumb-Sized & Ultra-Light:** Weighing only 35g for effortless portability.
- 4K Video & 120° Wide-Angle Lens:** Captures clear, expansive footage.
- Wi-Fi Connectivity:** Connects to your phone for live viewing, settings adjustment, and file transfer.
- One-Touch Recording:** Simple operation for instant capture.
- Webcam Functionality:** Can be used as a webcam when connected to a computer.
- Waterproof (with case):** Dive up to 30 meters with the included waterproof case.
- Magnetic Attraction:** Built-in magnet allows attachment to metal surfaces.
- Versatile Mounting:** Includes helmet, bike, side mounts, and a 360° rotating back clip.
- Loop Recording:** Supports up to 256GB TF cards (not included) with automatic loop recording.
- Record While Charging:** Continuous operation during charging.



This image highlights the camera's ultra-lightweight design, weighing only 35 grams, making it highly portable for various activities.



Illustrates the superior clarity of 4K video resolution and the expansive 120-degree wide-angle view, capturing more detail in every shot.

Setup

1. Inserting/Removing TF Card

The camera requires a Micro SD (TF) card for storage (up to 256GB, not included). Ensure the camera is powered off before inserting or removing the card.

1. Locate the Micro SD card slot on the side of the camera.
2. Gently push the TF card into the slot until it clicks into place.
3. To remove, gently push the card again until it springs out.



Complete Accessory Set


Mini action camera 4k, multiple mounts, back clip, adhesive pads, magnetic lanyards, and more—your complete sports camera kit!

Image showing the Micro SD card slot for local storage on the camera.

2. Charging the Camera

Connect the camera to a power source using the provided Type-C USB cable.

- The red indicator light will be on during charging.
- The red light will turn off once the camera is fully charged.

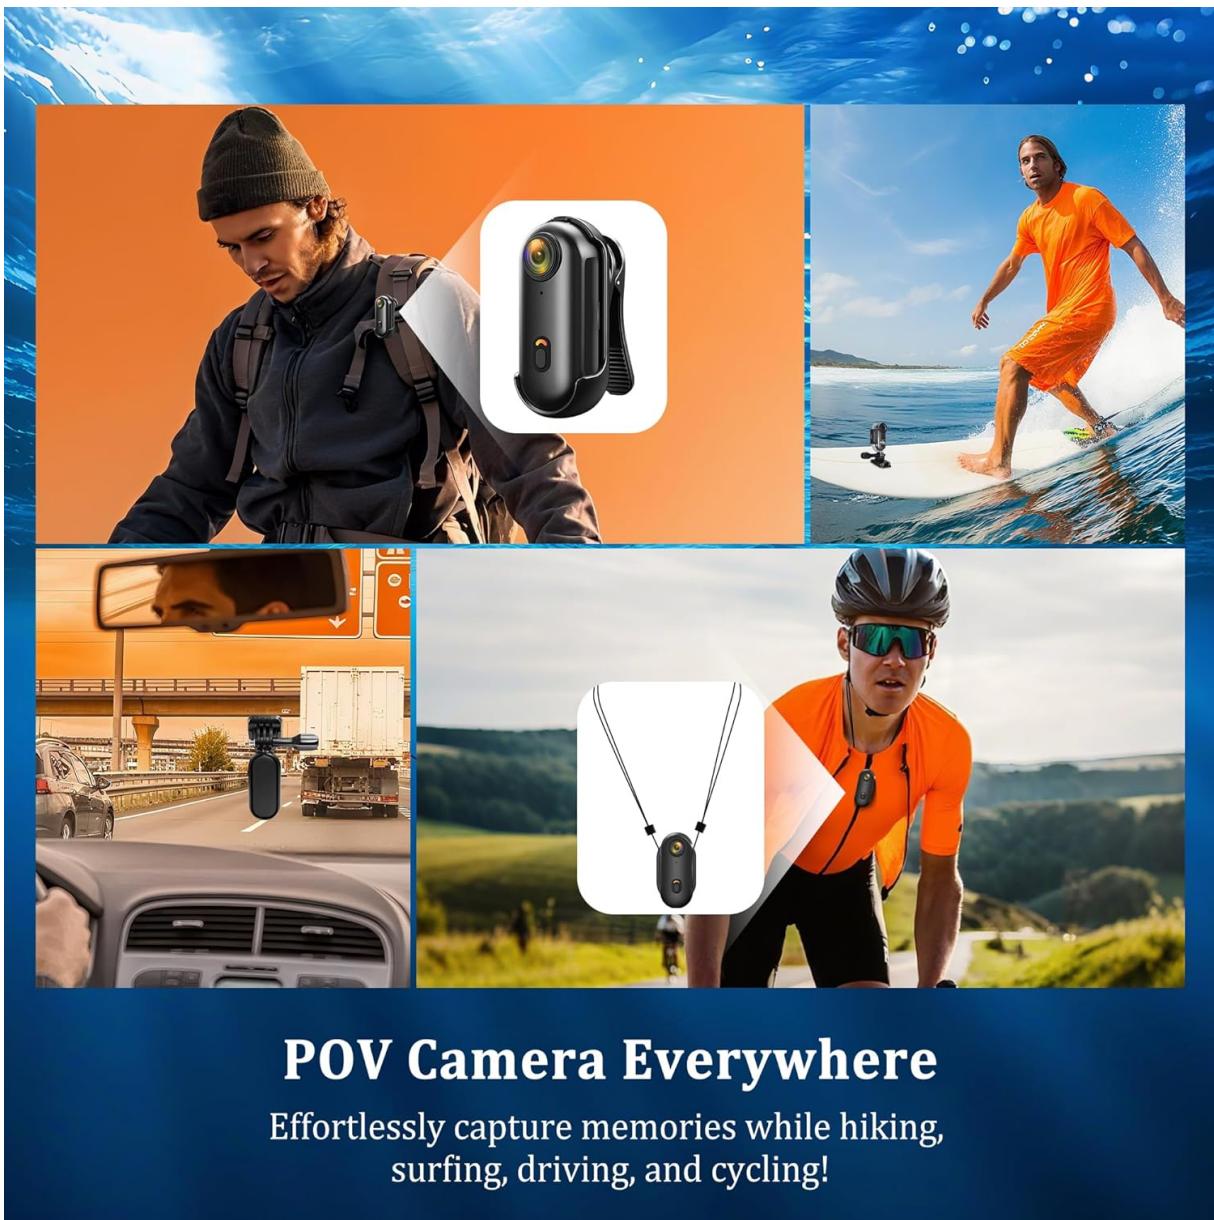

POV Camera Everywhere

Effortlessly capture memories while hiking, surfing, driving, and cycling!

The camera connected to its Type-C charging cable, indicating it is ready to charge.

Operating Instructions

1. Basic Operation (Power On/Off, Record)

- **Power On:** Long press the power button. The camera will vibrate once, and the blue light will remain on, indicating standby mode.
- **Record Video:** In standby mode, short press the video button. The camera will vibrate once, and the blue light will flash slowly to indicate recording.
- **Stop Recording:** Short press the video button again. The camera will vibrate once, and the blue light will return to solid, indicating standby mode. The video will be saved.
- **Power Off:** Long press the power button. The camera will vibrate, and the lights will turn off.

2. Wi-Fi Connection & App Control

The camera can connect to your smartphone via Wi-Fi for live viewing and control.

1. Download and install the 'Viidure' app from your device's app store (Apple App Store for iOS, Google Play for Android).
2. On the camera, consecutively press the Wi-Fi button twice to activate Wi-Fi mode. The blue and green

lights will flash.

3. On your smartphone, go to Wi-Fi settings and connect to the camera's Wi-Fi network (e.g., H88_dc84037a1bb0).
4. Open the 'Viidure' app. You should see the live footage from the camera and be able to control it.
5. *Note: Temporarily disable VPN for 1-2 minutes during Wi-Fi pairing; re-enable afterward.*



WiFi Control

Connect to phone app—easily upload, download and share videos/photos!

Webcam Mode

Use as webcam for video calls, live streams and online meetings easily!

Demonstrates the camera's Wi-Fi connectivity for live viewing and control via a smartphone app, and its ability to function as a webcam when connected to a laptop.

3. Webcam Mode

Connect the camera to your computer using the Type-C USB cable. The camera can be used as a PC camera for video calls or online classes.

Your browser does not support the video tag.

Video showcasing the 4K Mini Action Camera's waterproof capabilities, hands-free operation, and magnetic mounting options.

Your browser does not support the video tag.

A comprehensive video illustrating the upgraded features of the 4K Body Cam, focusing on its Wi-Fi connectivity for POV recording and overall performance.

Waterproof Case Usage

To use the camera for underwater activities, it must be enclosed in the provided waterproof case.

1. Open the waterproof case by pressing the front and rear covers tightly with both hands, then pulling the buckle cover upwards.
2. Insert the camera into the case, ensuring it is properly seated.
3. Close the case by pressing the front and rear covers, then pushing the buckle cover down to tighten it securely.
4. *Always ensure the case is properly sealed before submerging to prevent water damage.*



Shows the camera enclosed in its waterproof case, capable of diving up to 30 meters, ideal for capturing underwater scenes.

Mounting Accessories

The camera comes with a variety of accessories for different mounting needs.

1. 360° Rotating Back Clip

Attach the camera to the 360° rotating back clip to secure it to clothing, backpacks, or other straps for flexible angles.

2. Magnetic Lanyard

Use the magnetic lanyard to wear the camera around your neck, allowing for quick and easy attachment to metal surfaces or hands-free recording.

3. Helmet, Bike, and Side Mounts

Utilize the specialized mounts to attach the camera to helmets, bicycle handlebars, or other surfaces for stable recording during sports and activities.



Displays a range of multi-mount accessories, such as helmet, bike, and side mounts, providing versatile attachment options for different activities.




Use while Charging

Charge while recording—perfect for long drives, events, and endless shoots!

Loop Recording

Supports 256GB cards for loop recording – unlimited storage, endless editing!

Showcases the comprehensive accessory kit, featuring a 360-degree rotating back clip, magnetic lanyard, and waterproof case for diverse usage scenarios.

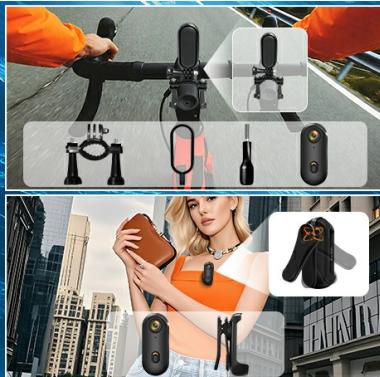

6 Versatile Mounting Kits

Bike mount, helmet mount, side mount, 360° rotating back clip, magnetic lanyard, waterproof case
—perfect for any shooting scenario!

Illustrates the camera's versatility for capturing point-of-view footage during activities like hiking, surfing, driving, and cycling.

Accessory Bonanza!

- 4K Action Camera
- Waterproof Case
- Magnetic Lanyard
- 360° Swivel Back Clip
- Helmet Mount
- Bike Mount
- Side Mount
- Camera Frame
- Mounting Adapter
- Rectangular Adhesive Pads
- Instruction Manual
- Data Cable



A visual representation of the complete accessory set, including various mounts, clips, and cables, ensuring readiness for any adventure.

4K Action Camera – Unleash Your Creativity

Perfect for all your shots.

Capture daily outdoor adventures, extreme sports, and water activities from a first-person view.

Endless potential!



A collage demonstrating diverse applications of the 4K action camera, from extreme sports like skydiving to everyday activities like running and cycling.

Maintenance

- Keep the camera and accessories clean and dry.
- Avoid exposing the camera to extreme temperatures or direct sunlight for prolonged periods.
- When not in use, store the camera in a cool, dry place.
- Regularly check the waterproof case for any damage or wear before underwater use.

Troubleshooting

- Camera not turning on:** Ensure the battery is charged. If the issue persists, try resetting the camera using the reset button.
- Cannot record:** Check if a TF card is inserted and has sufficient storage space. Format the card if necessary.
- Wi-Fi connection issues:** Ensure the camera's Wi-Fi is enabled and your device's VPN is temporarily disabled during pairing.
- Poor video quality:** Ensure the lens is clean and free from smudges. Check recording settings in the app.
- Camera crash:** If the camera crashes, short press the reset button to power it off and restart.

Technical Specifications

Feature	Specification
Video Resolution	4K
Video Code	H.265
Video Format	MP4
Picture Format	JPG
Memory Card	Micro SD (supports up to 256GB, not included)
Interface	Type-C USB

Waterproof Depth	Up to 30 meters (with waterproof case)
Connectivity	USB, Wi-Fi
Battery Capacity	800mAh
Item Weight	11.3 ounces (approx. 35g for camera only)

Warranty and Support

This product comes with a standard manufacturer's warranty. For detailed warranty information, technical support, or service inquiries, please refer to the contact information provided with your purchase or visit the manufacturer's website. Keep your proof of purchase for warranty claims.