

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [Dynamic](#) /

› [Dynamic Walkfitpad T500 Trekking Band User Manual](#)

Dynamic T500

Dynamic Walkfitpad T500 Trekking Band User Manual

Model: T500 (1DYKBWLKFTHB/V1)

1. INTRODUCTION

Thank you for choosing the Dynamic Walkfitpad T500 Trekking Band. This user manual provides essential information for the safe and effective operation, maintenance, and troubleshooting of your new fitness equipment. Please read this manual thoroughly before first use and keep it for future reference.

The Dynamic Walkfitpad T500 is designed for home use, featuring an ultra-slim profile for easy storage, an energy-saving motor, Bluetooth connectivity for app integration, and convenient remote control operation.



Image 1.1: Dynamic Walkfitpad T500 Trekking Band in use, highlighting its compact design and user-friendly interface.



Image 1.2: Key features of the Dynamic Walkfitpad T500, including Bluetooth support, speaker, remote control, energy-saving motor, quiet operation, and 2-year warranty.

2. SAFETY INFORMATION

To ensure your safety and prolong the life of your trekking band, please adhere to the following safety guidelines:

- Always read the entire user manual before operating the trekking band.
- Place the trekking band on a flat, stable surface. Ensure there is at least 2 meters of clear space behind the unit and 0.5 meters on each side.
- Keep children and pets away from the trekking band during operation.
- The maximum user weight for this device is 90 kg (as per product description) / 120 kg (as per detailed specifications). Do not exceed the stated weight limit.
- Always attach the safety key clip to your clothing before starting your workout. The safety key is an emergency stop mechanism.
- If you feel faint, dizzy, or experience pain during your workout, stop immediately and consult a physician.
- Do not use the trekking band if it is damaged or malfunctioning. Contact customer support for assistance.
- Ensure the power cord is not pinched or damaged and is kept away from hot surfaces.

3. PACKAGE CONTENTS

Carefully unpack your Dynamic Walkfitpad T500 Trekking Band and verify that all items are present:

- Dynamic Walkfitpad T500 Trekking Band Unit
- Remote Control
- Safety Key
- User Manual (this document)

4. SETUP

4.1 Unpacking and Placement

1. Remove the trekking band from its packaging.
2. Place the unit on a firm, level surface. Ensure adequate clearance around the device as described in the Safety Information section.
3. This trekking band is designed for immediate use and requires no complex assembly.



Image 4.1: Dimensions of the Dynamic Walkfitpad T500 Trekking Band, showing its length of 120cm and width of 49cm, along with compatible fitness applications.

4.2 Storage

The ultra-slim design of the Walkfitpad T500 allows for convenient storage. It can be easily stored under furniture such as a sofa or bed, or placed upright against a wall when not in use.

DYNAMIC®

WALKFIT T500

YÜRÜYÜŞ BANDI

1DYKBWLKFTHB/V1



750 WATT
ENERGY SAVING
MOTOR

**KURULUM
GEREKTİRMEYEN,
YER KAPLAMAYAN, ULTRA İNCE TASARIM**



KinoMap, Zwift ve FITime uygulamaları sayesinde Bluetooth sayesinde koşu bandınıza bağlanabilir, hoparlörler sayesinde müzik dinleyebilir, uygulamalardan belirlediğiniz aktivasyon videoları ile koşabilirsiniz.



UZAKTAN KUMANDALI

Uzaktan kumandası sayesinde koşu bandınızı kontrol edebilirsiniz.



YAĞLAMA GEREKTİRMEZ

Yağlama gerektirmeyen koşu bandı



Ultra ince 10.5 cm kalınlığında platform • 1.0-8 Km/H Hız • LED ekran • Hız, zaman, mesafe, kalori bilgilerini göstergeden takip edebilirsiniz • Kurulum gerektirmez, kutudan çıkıp kullanabilirsiniz • Uzaktan kumanda ile kontrol edilir • Bluetooth ile koşu bandınıza bağlanıp, hoparlörleri sayesinde müzik dinleyebilirsiniz • Yer kaplamaz yatak, koltuk altında muhafaza edebilirsiniz • Tekerlekleri sayesinde kolayca taşınabilir.



IMPORTED BY **INTER SPOR®**

www.interspor.com

Image 4.2: The Dynamic Walkfitpad T500 stored compactly under a sofa, demonstrating its ultra-slim design for easy storage.

5. OPERATING INSTRUCTIONS

5.1 Powering On/Off

1. Connect the power cord to a suitable electrical outlet.

2. Attach the safety key to the designated slot on the trekking band's console and clip the other end to your clothing. The display will illuminate.
3. To power off, remove the safety key and unplug the unit from the power outlet.

5.2 Using the Remote Control

The trekking band is operated via the included remote control.

- **Start/Stop:** Press the 'Start' button to begin the walking belt movement. Press 'Stop' to pause or end your workout.
- **Speed Adjustment:** Use the '+' and '-' buttons to increase or decrease the walking speed. The speed range is 0-6.4 km/h.

5.3 Bluetooth Connectivity and Apps

The Walkfitpad T500 supports Bluetooth connectivity, allowing you to connect to compatible fitness applications and stream audio.

- **App Connection:** The trekking band is compatible with fitness apps such as Kinomap and Zwift. Download the respective app on your smartphone or tablet, enable Bluetooth, and follow the app's instructions to connect to your Walkfitpad T500.
- **Audio Streaming:** Connect your device via Bluetooth to the trekking band's built-in speakers to enjoy music or audio during your workout.



Image 5.1: Close-up of the Dynamic Walkfitpad T500 handlebar, featuring a built-in stand for a phone or tablet.

5.4 Display Information

The integrated LCD display shows key workout metrics:

- **Speed:** Current walking speed in km/h.
- **Time:** Duration of your workout.
- **Distance:** Total distance covered.
- **Calories:** Estimated calories burned.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your trekking band.

6.1 Cleaning

- Always unplug the trekking band before cleaning.
- Wipe down the console and exterior surfaces with a soft, damp cloth. Avoid using abrasive cleaners or solvents.

- Keep the area around the trekking band clean and free of dust and debris.

6.2 Walking Belt Care

The Dynamic Walkfitpad T500 features a specialized non-lubricating, self-resin band system. This means **no lubrication is required** for the walking belt, simplifying maintenance.

- Inspect the walking belt regularly for any signs of wear or damage.
- Ensure the belt is centered and not rubbing against the sides of the frame. If adjustment is needed, refer to the troubleshooting section or contact customer support.

7. TROUBLESHOOTING

If you encounter any issues with your Dynamic Walkfitpad T500, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Trekking band does not power on.	Power cord not connected, safety key not in place, power outlet issue.	Ensure power cord is securely plugged in. Verify safety key is fully inserted. Test the power outlet with another device.
Walking belt does not move.	Safety key not in place, 'Start' button not pressed, motor issue.	Ensure safety key is correctly placed. Press the 'Start' button on the remote. If the issue persists, contact customer support.
Remote control is unresponsive.	Low battery in remote, remote out of range, interference.	Replace the remote control battery. Ensure you are within effective range of the trekking band. Remove any obstructions between the remote and the unit.
Walking belt slips or hesitates.	Belt tension too loose, user weight exceeds limit.	Refer to the belt adjustment instructions (if provided separately) or contact customer support. Ensure user weight is within the specified limit.

If you cannot resolve the issue using the above table, please contact Dynamic customer support for further assistance.

8. SPECIFICATIONS

Detailed technical specifications for the Dynamic Walkfitpad T500 Trekking Band:

Feature	Specification
Model Number	1DYKBWLKFTHB/V1
Motor Power	750W (Energy Saving System) / 1.25 HP
Speed Range	0 - 6.4 km/h
Walking Area	42 cm x 120 cm
Maximum User Weight	90 kg (Product Description) / 120 kg (Detailed Specifications)
Product Dimensions (D x W x H)	120D x 49W x 10.5H Centimeters

Feature	Specification
Item Weight	21.5 Kilograms
Material	Metal
Display	LCD Display
Connectivity	Bluetooth (Kinomap, Zwift compatible)
Warranty	2 Years
Special Feature	Non-lubricating self-resin band system

9. WARRANTY AND SUPPORT

Your Dynamic Walkfitpad T500 Trekking Band comes with a 2-year warranty, ensuring peace of mind regarding manufacturing defects and performance.

9.1 Warranty Coverage

The warranty covers defects in materials and workmanship under normal use for a period of two years from the date of purchase. Please retain your proof of purchase for warranty claims.

9.2 Technical Service and Spare Parts

Intersport provides comprehensive technical service and replacement parts for the Dynamic Walkfitpad T500. With a service network spanning over 100 points in 81 countries, you can expect reliable support.

INTER SPOR®



31 yıldır sektörün lider firmasıdır.



KATİLETİ ÜRÜN UYGUN FİYAT

Amacımız, kaliteden taviz vermeden, ürünlerimizi uygun fiyatla müşterilerimize sunmaktır.



DÜNYA MARKALARI

Voit, Dynamic, Universal, Diesel Fitness, ProFitness, Raxon ve bünyesindeki diğer lider markaların ithalatçı firmasıdır.



ORJİNAL ÜRÜN / YÜKSEK STOK

Kapalı koli, orijinal ürünler
Yüksek stok ve hızlı gönderi %100 müşteri memnuniyeti
12.000 m2'lik depo alanı 2000'den fazla ürün çeşidi
1 milyonu aşkın stok ile hizmet vermekteyiz.



TEKNİK SERVİS YEDEK PARÇA

81 ilde 100'den fazla noktada teknik servis ağı ve sektörün en geniş yedek parça stoğu ile kaliteli satış sonrası hizmeti sunuyoruz.

Image 9.1: Information about Intersport's technical service and spare parts network, highlighting 31 years of experience and service points in over 81 countries.

For warranty claims, technical assistance, or to inquire about spare parts, please contact Intersport customer service through their official channels.