

## Whirlpool WOI4IS8PM0SXA

# Whirlpool WOI4IS8PM0SXA Multifunction Built-in Oven User Manual

Model: WOI4IS8PM0SXA

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your new Whirlpool WOI4IS8PM0SXA multifunction built-in oven. Please read these instructions carefully before installation and operation, and keep them for future reference. This appliance features advanced electric cooking technology, a halogen lamp for energy efficiency, exclusive 6th Sense technology for automatic cooking adjustments, a soft-closing door, and the Ready2Cook function to eliminate preheating.

## 2. SAFETY INSTRUCTIONS

- **Electrical Safety:** Ensure the oven is correctly earthed and connected to a suitable power supply. Do not use adapters or extension cords.
- **Hot Surfaces:** The oven and its accessories become very hot during use. Always use oven mitts when handling hot items. Keep children away from the appliance.
- **Cleaning:** Disconnect the oven from the power supply before cleaning or maintenance.
- **Flammable Materials:** Do not store flammable materials in or near the oven.
- **Supervision:** Never leave the oven unattended during cooking, especially when using high-temperature functions like grilling or pyrolytic cleaning.

## 3. INSTALLATION

Proper installation is crucial for the safe and optimal performance of your oven. This appliance is designed for built-in installation.

### 3.1 Placement Requirements

- Ensure adequate ventilation around the oven.

- The cabinet material must be heat-resistant.
- Maintain specified clearances from adjacent surfaces.

### 3.2 Electrical Connection

The electrical connection must be performed by a qualified technician in accordance with local safety regulations. Ensure the voltage and frequency match the specifications on the rating plate.

### 3.3 Mounting Instructions

Carefully slide the oven into the prepared cabinet opening. Secure it using the screws provided, ensuring it is level and stable.



**Figure 1:** Installation diagram showing the precise dimensions for cabinet cut-out and oven placement. Refer to these measurements for proper built-in installation.

## 4. PRODUCT OVERVIEW

---

Familiarize yourself with the components of your Whirlpool oven.



**Figure 2:** Front view of the Whirlpool WOI4IS8PM0SXA oven, showcasing its sleek stainless steel and black design with the integrated control panel.

#### **4.1 Control Panel**

The oven features a touch control panel with a built-in display for easy operation and program selection.



**Figure 3:** Close-up of the touch control panel, displaying various icons for functions, settings, and the digital clock.

## 4.2 Oven Interior and Accessories

The oven interior is enamelled for easy cleaning and includes multiple rack positions and trays.



Figure 4: The oven interior with the door open, showing the removable wire racks and baking trays in position.

## 5. OPERATING INSTRUCTIONS

Your Whirlpool oven offers 17 cooking functions, including advanced features for optimal results.

### 5.1 Initial Use

1. **First Cleaning:** Before first use, clean the oven interior and accessories with a damp cloth.
2. **Burn-in:** Heat the empty oven at maximum temperature for approximately one hour to eliminate any manufacturing odors. Ensure good ventilation during this process.

### 5.2 Setting the Clock

Upon first connection or after a power outage, the display will flash. Use the touch controls to set the current time.

### 5.3 Cooking Functions

Select your desired cooking function using the touch controls. The oven offers various modes:

- **6th Sense Technology:** Select from pre-programmed recipes. The oven automatically adjusts temperature

and cooking time.

- **Ready2Cook:** Eliminates preheating for certain dishes, saving time and energy.
- **Conventional Cooking:** For traditional baking and roasting.
- **Convection Cooking (Fan-assisted):** Ensures even heat distribution, ideal for multiple dishes.
- **Grill:** For browning and toasting.
- **Hot Air Grilling:** Combines grilling with fan assistance.
- **Steam Cooking (Steam+):** For healthier cooking with added moisture.
- **Pizza310°:** Specific function for achieving perfect pizza crusts.
- **Reheat Function:** For warming up previously cooked food.
- **ECO Mode:** Optimized for energy-saving cooking.

## 5.4 Temperature and Time Settings

After selecting a function, adjust the temperature and cooking time using the dedicated controls on the display. The oven will indicate when the set temperature is reached.

## 6. CLEANING AND MAINTENANCE

Regular cleaning and maintenance ensure the longevity and hygiene of your oven.

### 6.1 General Cleaning

- Clean the oven interior and exterior regularly with a soft cloth and mild detergent.
- Avoid abrasive cleaners, scourers, or harsh chemicals that can damage surfaces.
- Remove spills immediately to prevent them from baking onto surfaces.

### 6.2 Self-Cleaning Functions

Your oven is equipped with two self-cleaning systems:

- **Pyrolytic Cleaning:** This high-temperature cleaning cycle burns off food residues, turning them into ash that can be easily wiped away. Remove all accessories before starting a pyrolytic cycle.
- **Hydrolytic Cleaning:** This steam-assisted cleaning function uses water and heat to loosen dirt, making it easier to wipe clean.

### 6.3 Replacing the Oven Light

Ensure the oven is disconnected from the power supply. Unscrew the protective cover, replace the bulb with one of the same type (check specifications), and reattach the cover.

## 7. TROUBLESHOOTING

If you encounter issues with your oven, refer to the following common problems and solutions before contacting service.

Problem	Possible Cause	Solution
Oven does not turn on	No power supply; door not closed properly; clock not set.	Check power connection; ensure door is fully closed; set the clock.

Problem	Possible Cause	Solution
Oven not heating	Incorrect function/temperature selected; fuse tripped.	Verify settings; check household fuse box.
Display shows an error code	Internal fault.	Turn off the oven at the main switch for a few minutes, then restart. If the error persists, contact customer service.
Excessive smoke during cooking	Food residue or grease buildup.	Clean the oven thoroughly, especially after cooking fatty foods.

## 8. SPECIFICATIONS

Key technical specifications for the Whirlpool WOI4IS8PM0SXA oven:

- **Model:** WOI4IS8PM0SXA
- **Type:** Electric Built-in Multifunction Oven
- **Total Oven Capacity:** 73 Liters
- **Number of Cooking Programs:** 17
- **Cleaning Type:** Pyrolytic + Hydrolytic
- **Energy Efficiency Class:** A+
- **Control Type:** Touch
- **Product Dimensions (HxWxD):** Approximately 56.4 x 64 x 67 cm (refer to installation diagram for precise measurements)
- **Color:** Black, Stainless Steel
- **Internal Material:** Enamelled

## 9. WARRANTY AND SUPPORT

Your Whirlpool WOI4IS8PM0SXA oven comes with a manufacturer's warranty. Please refer to the separate warranty document provided with your purchase for specific terms and conditions, including warranty period and coverage details.

For technical assistance, spare parts, or to schedule a service appointment, please contact Whirlpool Customer Service. You can find contact information on the official Whirlpool website or in the warranty documentation.

When contacting support, please have your oven's model number (WOI4IS8PM0SXA) and serial number ready. The serial number is typically located on a label inside the oven door frame or on the back of the appliance.