



Manuals.plus /

› plimpton /

› Plimpton Kids20 10-inch Android 15 Kids Tablet User Manual

## plimpton Kids20

# Plimpton Kids20 10-inch Android 15 Kids Tablet User Manual

Model: Kids20 | Brand: Plimpton

---

## INTRODUCTION

Welcome to the user manual for your Plimpton Kids20 10-inch Android 15 Kids Tablet. This guide provides essential information for setting up, operating, maintaining, and troubleshooting your device. Designed for children aged 3 and above, this tablet combines educational content with robust parental controls and a durable design to ensure a safe and engaging experience.



Image: Plimpton Kids20 Tablet with Pink Protective Case


## WHAT'S IN THE BOX

---

Upon unboxing your Plimpton Kids20 tablet, please ensure all the following items are present:

- Plimpton Kids20 Android 15 Tablet (with pre-installed EVA protective case)
- Power Adapter
- 1.8M Charging Cable
- Tempered Film (Screen Protector)
- User Manual

## More cute and practical accessories available here

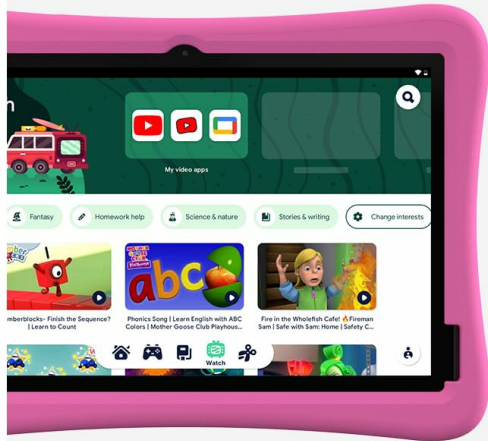

Adapter



Tablet storage bag



Tempered film



1.8M charging cable



Manual

Image: Contents of the Plimpton Kids20 Tablet Box, including the tablet, charger, cable, screen protector, and manual.

## PRODUCT OVERVIEW

The Plimpton Kids20 tablet features a durable design with a 10.1-inch display and an integrated protective case. Key components include:

- **10.1" HD IPS Glass Screen:** For clear and vivid visuals.
- **Front Camera:** Located above the screen for video calls and photos.
- **Rear Camera:** On the back of the tablet for capturing images and videos.
- **Power Button:** Typically on the side or top edge.
- **Volume Buttons:** For adjusting audio levels.
- **USB-C Port:** For charging and data transfer.
- **3.5mm Headphone Jack:** For audio output.
- **MicroSD Card Slot:** For expandable storage up to 1TB.
- **EVA Protective Case:** Odorless, resistant to deformation, and provides superior durability and impact resistance.
- **360° Rotatable Bracket:** Integrated into the case for versatile viewing angles.



Image: Plimpton Kids20 Tablet in its EVA protective case, showcasing the 360-degree rotating stand.

## SETUP

1. **Charge the Tablet:** Before first use, fully charge the tablet using the provided USB-C cable and power adapter. The battery indicator will show charging status.
2. **Power On:** Press and hold the Power button until the Plimpton logo appears on the screen.
3. **Initial Setup Wizard:** Follow the on-screen prompts to select your language, connect to a Wi-Fi network, and set up your Google account.
4. **Google Kids Space Setup:** The tablet comes pre-installed with Google Kids Space. During initial setup or later, you can configure profiles for your children, selecting age-appropriate content and apps.
5. **Parental Controls (Google Family Link):** Download the Google Family Link app on your own device to manage your child's tablet usage. This allows you to filter content, set screen time limits, approve app downloads, and monitor activity.

Video: An overview of the Plimpton Kids20 tablet's features, including educational applications, YouTube Kids, Google Kids Space, and the protective case with a rotating stand.



Image: A child engaging with educational content within Google Kids Space on the Plimpton Kids20 Tablet.

## OPERATING INSTRUCTIONS

### Power On/Off

- **To Power On:** Press and hold the Power button until the screen lights up.
- **To Power Off:** Press and hold the Power button until the power options appear, then select 'Power off'.
- **To Restart:** Press and hold the Power button until the power options appear, then select 'Restart'.

### Google Kids Space

Google Kids Space offers a curated library of apps, books, and videos tailored for children. It provides a safe environment for learning and entertainment. Content is categorized for easy navigation.

### Parental Controls

Utilize the Google Family Link app on your smartphone to manage your child's tablet experience. This includes:

- **Screen Time Limits:** Set daily limits for tablet usage.
- **App Approvals:** Approve or block apps your child wants to download.

- **Content Filtering:** Restrict access to inappropriate websites and content.
- **Downtime Scheduling:** Schedule times when the tablet cannot be used, such as bedtime.

Video: A demonstration of the parental control features available on the Plimpton Kids20 tablet, highlighting how parents can manage content and screen time.

## Eye Protection Mode

The tablet features low blue light technology and an eye protection mode to reduce eye fatigue. This mode can be activated through the tablet's display settings and automatically adjusts brightness for optimal viewing comfort.

## Connectivity

- **Wi-Fi:** Connect to a wireless network via Settings > Network & internet > Wi-Fi.
- **Bluetooth:** Pair with Bluetooth headphones or other devices via Settings > Connected devices > Bluetooth.

## MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen. For the protective case, a damp cloth with mild soap can be used. Avoid harsh chemicals.
- **Battery Care:** To prolong battery life, avoid fully discharging the tablet frequently. Charge it regularly and avoid exposing it to extreme temperatures.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to Settings > System > System update.
- **Storage Management:** Periodically clear unnecessary files and apps to free up storage space and maintain performance.

## TROUBLESHOOTING

Issue	Possible Solution
Tablet won't turn on	Ensure the tablet is fully charged. Press and hold the Power button for 10-15 seconds to force a restart.
Wi-Fi connection issues	Check your router and internet connection. Forget the network in tablet settings and reconnect. Restart the tablet.
Apps are crashing or freezing	Close and reopen the app. Clear the app's cache (Settings > Apps > [App Name] > Storage > Clear cache). Ensure the app is updated. Restart the tablet.
Slow performance	Close unused apps. Clear cache and temporary files. Check for system updates. Consider a factory reset if issues persist (backup data first).
Charging problems	Ensure the charging cable and adapter are securely connected and undamaged. Try a different outlet or charger. Clean the charging port gently.

If you encounter persistent issues not covered here, please contact Plimpton customer support.

## SPECIFICATIONS

Feature	Detail
Model	Kids20
Operating System	Android 15
Processor	2.0GHz Octa-Core
RAM	4GB
Internal Storage	64GB (Expandable up to 1TB via MicroSD)
Screen Size	10.1 inches
Screen Resolution	1280 x 800 pixels HD IPS
Wireless Connectivity	Wi-Fi (802.11ac, 802.11b, 802.11g, 802.11n), Bluetooth 5.3
Battery Life	Approximately 9 hours (typical use)
Dimensions (LxWxH)	10.86 x 7.83 x 1.22 inches
Item Weight	1.76 pounds

## WARRANTY AND SUPPORT

Your Plimpton Kids20 tablet is covered by a **1-year warranty** from the date of purchase. Additionally, a **30-day worry-free return and replacement policy** is in effect. For any questions, technical assistance, or warranty claims, please contact Plimpton customer support through the retailer where the product was purchased or visit the official Plimpton website for contact information.

Plimpton is committed to providing professional kids' tablets and services. Do not hesitate to reach out to our team for assistance.