

## SUNVIVI ZFC006BK

# SUNVIVI 1000W Hand Blender Model ZFC006BK Instruction Manual

Model: ZFC006BK

## INTRODUCTION

Thank you for choosing the SUNVIVI 1000W Hand Blender. This versatile kitchen appliance is designed to simplify your food preparation tasks with its powerful motor and multiple attachments. Please read this manual carefully before use to ensure safe and efficient operation, and retain it for future reference.

## IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before using the appliance.
- Always unplug the appliance from the power outlet before cleaning, assembling, or disassembling parts.
- Do not immerse the motor unit in water or other liquids. Wipe with a damp cloth only.
- Keep hands, hair, clothing, and utensils away from moving blades and attachments during operation to prevent injury.
- Blades are sharp. Handle with care when cleaning and assembling.
- This appliance is not intended for use by children or persons with reduced physical, sensory, or mental capabilities unless supervised.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been dropped or damaged in any manner.
- Avoid contact with moving parts.
- Do not use outdoors.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not use attachments not recommended or sold by the manufacturer.

## PRODUCT OVERVIEW AND COMPONENTS

The SUNVIVI Hand Blender comes with a variety of attachments to assist with diverse kitchen tasks.



Figure 1: All components of the SUNVIVI 10-in-1 Hand Blender.

### Included Components:

- Main Motor Unit (Hand Blender Body)
- Immersion Blender Shaft with 4 Stainless Steel Blades
- 600ml Beaker (Measuring Cup)
- 860ml Chopper Bowl with Blade Assembly
- Whisk Attachment
- Milk Frother Attachment
- Potato Masher Attachment
- Citrus Juicer Attachment
- Spiral Slicer/Shredder Attachment (includes various blades)
- Wall Mount with Screws

### SETUP AND ASSEMBLY

Before first use, wash all detachable parts in warm soapy water, rinse thoroughly, and dry. The motor unit should only be wiped with a damp cloth.

### Attaching Components:

1. **Immersion Blender:** Align the motor unit with the blender shaft and twist until it locks securely.
2. **Chopper:** Place the blade assembly onto the central pin inside the chopper bowl. Place the chopper lid onto the bowl, then attach the motor unit to the lid, twisting to lock.
3. **Whisk:** Insert the whisk into the whisk gear box, then attach the gear box to the motor unit, twisting to lock.
4. **Milk Frother:** Insert the milk frother wand into the frother adapter, then attach the adapter to the motor unit, twisting to lock.
5. **Potato Masher:** Attach the masher shaft to the motor unit, twisting to lock.
6. **Citrus Juicer:** Place the juicer cone onto the juicer base, then attach the juicer base to the motor unit, twisting to lock.
7. **Spiral Slicer/Shredder:** Insert the desired blade into the spiralizer/shredder attachment, then attach the motor unit to the top, twisting to lock.

Your browser does not support the video tag.

Video 1: Demonstration of assembling various attachments for the SUNVIVI Hand Blender.

## OPERATING INSTRUCTIONS

### General Operation:

- Ensure the appliance is properly assembled and plugged into a power outlet.
- The hand blender features 12 variable speeds and a Turbo function. Rotate the speed dial on top of the motor unit to select the desired speed (1-12).
- Press and hold the power button to start blending. For maximum power, press the Turbo button. Release the button to stop.



Figure 2: Speed control and Turbo button on the hand blender.

### Specific Attachment Usage:

- **Immersion Blender:** Ideal for blending soups, smoothies, sauces, and baby food directly in pots or bowls. Use the 600ml beaker for smaller quantities.
- **Chopper:** Use for chopping meat, onions, nuts, garlic, and vegetables. Do not overfill the 860ml chopper bowl (max capacity 500ml).



- **Whisk:** Perfect for whipping cream, egg whites, or mixing cake batter.
- **Milk Frother:** Creates delicious milk foam for coffee and other beverages.
- **Potato Masher:** For mashing cooked potatoes and other soft vegetables.
- **Citrus Juicer:** Extracts juice from citrus fruits.
- **Spiral Slicer/Shredder:** For creating vegetable spirals, slices, or shreds from firm vegetables like carrots, cucumbers, and potatoes.

## BLEND, WHIP, CHOP, AND BEYOND!



Figure 3: Versatility of the hand blender with different attachments.

## MAINTENANCE AND CLEANING

Proper cleaning and maintenance ensure the longevity and performance of your hand blender.

- **Motor Unit:** Always unplug before cleaning. Wipe the motor unit with a damp cloth. Do not immerse it in water or any other liquid.
- **Detachable Attachments:** The immersion blender shaft, chopper bowl, whisk, milk frother, potato masher, citrus juicer, and

spiral slicer/shredder attachments are generally dishwasher safe (top rack recommended) or can be washed by hand in warm, soapy water. Rinse thoroughly and dry immediately.

- **Blades:** Handle blades with extreme care as they are very sharp. Use a brush for cleaning if necessary.
- **Storage:** Store the hand blender and its accessories in a dry place. The included wall mount can be used for convenient storage.

# CLEAN DETACH ORGANIZE



Figure 4: Cleaning the immersion blender shaft and wall mount for storage.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet not working; motor unit not properly attached to accessory.	Check power connection; test outlet with another appliance; ensure motor unit is securely locked onto the attachment.

Problem	Possible Cause	Solution
Motor runs, but blades do not move.	Attachment not properly assembled or locked.	Disassemble and reassemble the attachment, ensuring all parts are correctly aligned and locked.
Food is not blending/chopping effectively.	Too much food; food pieces are too large; incorrect speed setting.	Reduce food quantity; cut food into smaller pieces; increase speed or use Turbo function.
Appliance overheats or stops during use.	Overload protection activated.	Unplug the appliance and let it cool down for at least 15-20 minutes. Reduce load before restarting.

## SPECIFICATIONS

- **Brand:** SUNVIVI
- **Model Number:** ZFC006BK
- **Power:** 1000W DC Copper Motor
- **Voltage:** 120 Volts
- **Number of Speeds:** 12 + Turbo
- **Blade Material:** Stainless Steel
- **Immersion Blender Shaft Material:** Stainless Steel
- **Chopper Bowl Capacity:** 860ml (Max fill 500ml)
- **Beaker Capacity:** 600ml
- **Product Dimensions:** 1.98"D x 1.97"W x 15.75"H
- **Item Weight:** 5.28 pounds
- **Special Features:** Detachable Attachment, LED Light, Quiet Operation, Ergonomic Handle

## WARRANTY AND SUPPORT

Your SUNVIVI Hand Blender is backed by a **12-month warranty** from the date of purchase. This warranty covers manufacturing defects under normal household use.

For warranty claims, technical assistance, or any questions regarding your product, please contact our customer service team. We offer **24/7 customer service** to ensure your satisfaction.

Please refer to your purchase documentation for specific contact details or visit the official SUNVIVI website for support information.