

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [W & O](#) /

› [W & O Q1 Kids Instant Print Camera User Manual](#)

W & O Q1

W & O Q1 Kids Instant Print Camera User Manual

Model: Q1 | Brand: W & O

INTRODUCTION

This manual provides essential instructions for the safe and effective use of your W & O Q1 Kids Instant Print Camera. Please read this manual thoroughly before operating the device and retain it for future reference.

PACKAGE CONTENTS

Verify that all items are present in the package:

- 1x W & O Q1 Instant Print Camera
- 3x Thermal Printer Paper Rolls
- 1x USB Charging Cable
- 1x 32GB SD Card (pre-installed)
- 1x Hanging Lanyard
- 1x User Manual (this document)



Image: The W & O Q1 Kids Instant Print Camera shown with its included accessories: three rolls of thermal paper, a USB charging cable, a 32GB SD card, and a lanyard.

PRODUCT FEATURES

- **Instant Thermal Printing:** Captures color photos and prints black and white images instantly.
- **Dual Camera Configuration:** Front and rear lenses for standard photos and selfies.
- **2.6-inch LCD Screen:** For viewing photos, videos, and navigating menus.
- **HD 1080P Video Recording:** Records videos with sound.
- **16X Digital Zoom:** Allows for closer shots.
- **Built-in Games:** Includes Tetris, Snake, and PushBox.
- **Photo Frames and Filters:** 20 photo frames and 7 filters for creative effects.
- **Flash Function:** For improved low-light photography.
- **800mAh Battery:** Provides 3-4 hours of continuous use.
- **32GB SD Card:** Stores over 20,000 pictures.

★ Multifunctional Kids ★ ★ Digital Camera



Image: A child holding the W & O Q1 camera, illustrating its multifunctional capabilities including instant printing, 2.5K UHD video, MP3 player, games, DIY painting, and photo frames.

★ Upgraded to Dual-Camera Configuration

Easy to take selfies ★



Image: The W & O Q1 camera displaying its dual-camera configuration for easy selfies and its 2.6-inch LCD screen.

SETUP

1. Charging the Camera

Before first use, fully charge the camera. Connect the provided USB charging cable to the camera's charging port and to a USB power adapter (not included) or a computer USB port. The charging indicator light will illuminate during charging and

turn off when fully charged.

2. Inserting/Checking the SD Card

The 32GB SD card is typically pre-installed. To check or re-insert, locate the SD card slot on the side of the camera. Gently push the card until it clicks into place. Ensure the camera is powered off before inserting or removing the SD card.

3. Loading Thermal Print Paper

Follow these steps to load the thermal paper:

1. Open the paper slot door by sliding it in the direction of the arrow.
2. Place a new roll of thermal paper into the slot, ensuring the paper feeds from the bottom and the end of the paper extends slightly out of the slot.
3. Close the paper slot door firmly. Ensure it is completely closed to prevent printing issues.



Image: A four-step diagram illustrating how to install the thermal print paper into the W & O Q1 camera, from opening the slot to closing it after placing the paper roll.

OPERATING INSTRUCTIONS

1. Power On/Off

Press and hold the Power button (usually located on the side or front) for a few seconds to turn the camera on or off.

2. Basic Photography

- **Taking Photos:** Point the camera at your subject. Use the navigation buttons to adjust zoom (if applicable). Press the "OK" button to capture a photo.
- **Selfies:** Switch to the front camera using the designated button (refer to camera layout). Frame your shot and press "OK".
- **Instant Print:** After taking a photo, the camera will automatically print a black and white version if the instant print function is enabled. You can usually toggle this feature on/off via a dedicated button or in the settings menu.

Instant Print Camera for Kids



Image: A child coloring an instant print photo, demonstrating the creative aspect of the W & O Q1 camera's thermal printing feature.

3. Video Recording

Navigate to the video mode using the menu buttons. Press "OK" to start recording and press "OK" again to stop. Videos are saved to the SD card.

4. Playing Games

Access the "Games" option from the main menu. Select from available games like Tetris, Snake, or PushBox and use the

navigation buttons to play.



Image: The W & O Q1 camera screen showing three built-in games: Snake, Tetris, and a puzzle game involving pushing boxes.

5. Music Playback

If MP3 files are loaded onto the SD card, navigate to the "Music" option in the menu to play them. Ensure audio files are in a compatible format.

生成

3 Interesting Games

3 interesting games that can develop children's intelligence and exercise their ability to react and think



Image: A child wearing headphones, smiling, with the W & O Q1 camera in the foreground displaying music notes, indicating its music playback feature.

6. Menu Navigation and Settings

Use the directional buttons to navigate through the menu options on the 2.6-inch LCD screen. Press "OK" to select an option. Settings include date/time, photo resolution (up to 2.5K UHD), print density, flash control, and auto power-off duration.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the camera body and screen. Do not use liquid cleaners.
- **Storage:** Store the camera in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Charge the battery regularly, even if not in use, to maintain its lifespan. Avoid fully discharging the battery for extended periods.
- **Paper Replacement:** Replace thermal paper rolls as needed. Only use compatible thermal paper.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Camera does not turn on.	Low battery.	Charge the camera fully.
No photos are printing.	Paper incorrectly loaded or out of paper. Instant print function disabled.	Check paper loading and ensure the paper slot door is closed. Load new paper if necessary. Verify instant print is enabled in settings.
Poor print quality.	Low print density setting. Paper quality issue.	Adjust print density in settings (e.g., to '7' for darker prints). Ensure you are using compatible thermal paper.
Cannot save photos/videos.	SD card full or not inserted correctly.	Check SD card insertion. Delete old files or replace with a new SD card if full.
Camera freezes or is unresponsive.	Software glitch.	Press and hold the power button for 10 seconds to force a restart. If issue persists, contact support.

SPECIFICATIONS

Feature	Detail
Model Name	Q1
Brand	W & O
Display	2.6-inch LCD
Photo Sensor Technology	CMOS
Effective Still Resolution	48 MP
Video Resolution	1080p (up to 2.5K UHD)
Digital Zoom	16X
Storage	32GB SD Card (included)
Battery Type	Lithium Polymer (800mAh)
Battery Life	Approx. 3-4 hours continuous use
Connectivity	USB

Feature	Detail
Supported File Format	JPEG (for images)
Material	Plastic
Color	Pink

WARRANTY INFORMATION

The W & O Q1 Kids Instant Print Camera comes with a **2-Year Manufacturer Warranty**. This warranty covers defects in materials and workmanship under normal use. It does not cover damage caused by misuse, accidents, unauthorized modifications, or normal wear and tear. Please retain your proof of purchase for warranty claims.

SUPPORT

For technical assistance, troubleshooting not covered in this manual, or warranty inquiries, please contact W & O customer support. Refer to the contact information provided on the product packaging or the official W & O website.

Manufacturer: Shenzhen Yishunxing Technology Co., Ltd

IMPORTANT SAFETY INFORMATION

- Do not disassemble or attempt to repair the camera yourself.
- Keep the camera away from water and moisture. This product is not water-resistant.
- Avoid exposing the camera to extreme temperatures or direct sunlight for prolonged periods.
- Use only the provided charging cable and compatible power sources.
- Small parts (like the SD card) can be a choking hazard for young children. Adult supervision is recommended.

PRODUCT VIDEO

Your browser does not support the video tag.

Video: An overview of the W & O Kids Instant Print Camera, demonstrating its features including unboxing, printing photos, and taking selfies. This video is provided by the seller, Kaluode.

