

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Seesii](#) /
- > [SEESII 8-Inch Cordless Mini Chainsaw M8 Boost User Manual](#)

Seesii M8 Boost

SEESII 8-Inch Cordless Mini Chainsaw (M8 Boost) User Manual

Model: M8 Boost | Brand: Seesii

1. PRODUCT OVERVIEW

The SEESII M8 Boost is an 8-inch cordless mini chainsaw designed for efficient and convenient tree branch cutting and garden pruning. Featuring an upgraded brushless motor and a dual battery system, it offers powerful performance in a compact, lightweight design suitable for single-handed operation.

Small But Powerful

➤➤ One-Hand design, big cutting power



Image: A user demonstrates the compact and lightweight design of the SEESII M8 Boost chainsaw, highlighting its ease of handling.

Official Product Video: Lightweight and Powerful

Video: This video showcases the SEESII M8 Boost chainsaw in action, demonstrating its lightweight nature and powerful cutting capabilities for various garden tasks.

Official Product Video: Small But Mighty

Video: A brief overview highlighting the compact size and robust performance of the SEESII M8 Boost 8-inch mini chainsaw.

2. SAFETY INFORMATION

Always prioritize safety when operating power tools. Read and understand all instructions before use.

- **Wear Protective Gear:** Always wear safety goggles, gloves, and appropriate clothing to protect yourself from debris and potential injuries.
- **Child-Safety Lock:** The chainsaw is equipped with a child-safety lock. It will only operate when the safety button and trigger are pressed simultaneously. This prevents accidental starts.
- **Maintain Firm Grip:** Hold the chainsaw firmly with one or two hands, ensuring stable control

during operation.

- **Proper Oiling:** Ensure the chain is adequately lubricated before and during use to prevent overheating and wear.
- **Clear Work Area:** Keep your work area clear of obstructions and bystanders.



Image: A detailed view of the child-safety lock mechanism, which requires simultaneous pressing with the trigger for operation.

3. PACKAGE CONTENTS

Your SEESII M8 Boost Mini Chainsaw kit includes the following items:

- 1x Mini Chainsaw
- 2x 4000mAh Batteries
- 1x Charger
- 1x Pair of Gloves
- 1x Goggles
- 1x Guide Bar Cover
- 1x Carrying Case

- 1x Replacement Chain
- 1x Instruction Manual
- 1x Screwdriver
- 1x Oil Bottle (for manual oil application)



Image: The complete SEESII M8 Boost mini chainsaw kit, showing the chainsaw, two batteries, charger, gloves, goggles, guide bar cover, replacement chain, and carrying case.

Official Product Video: Unboxing the Chainsaw Kit

Video: A quick preview of the SEESII Cordless Mini Chainsaw Kit, showcasing the contents upon unboxing.

4. SETUP AND ASSEMBLY

4.1 Battery Charging

Before first use, fully charge both 4000mAh batteries using the provided charger. The battery indicator lights will show the charging status.

4.2 Chain Installation

To install or replace the chain:

1. Remove the side cover by loosening the tensioning knob.
2. Carefully place the chain around the guide bar and the drive sprocket. Ensure the cutting teeth are facing the correct direction.
3. Reattach the side cover and lightly tighten the tensioning knob.

Official Product Video: Chain Installation Tutorial

Video: A step-by-step guide on how to properly install the chain on your SEESII mini chainsaw.

4.3 Chain Tensioning

The SEESII M8 Boost features a tool-free chain tensioning knob for quick adjustments.

1. Loosen the outer dial of the tensioning knob by a half-turn.
2. Rotate the inner dial to adjust the chain tension. The chain should be snug but still able to move freely around the guide bar.
3. Tighten the outer dial to secure the chain tension.



Image: Demonstrates the tool-free chain tensioning knob, allowing for quick and easy adjustment of the chain.

4.4 Oiling the Chain

The chainsaw is equipped with an oiler system to keep the chain lubricated. Fill the integrated oil

reservoir with appropriate chainsaw bar oil (not included).

1. Unscrew the oil cap located on the top of the chainsaw.
2. Carefully pour chainsaw bar oil into the reservoir using the provided oil bottle.
3. Replace the oil cap securely.
4. Press the oiler button periodically during operation to ensure continuous lubrication of the chain.



Image: A close-up view of the chainsaw's oiler system, showing the oil reservoir cap and the oiler button.

5. OPERATING INSTRUCTIONS

5.1 Starting the Chainsaw

To start the chainsaw, press the child-safety button (located on the side of the handle) and simultaneously squeeze the trigger. Release the safety button once the chain starts moving.

5.2 Cutting Techniques

The 8-inch guide bar allows for cutting branches up to 8 inches in diameter.

- Ensure the chain is properly tensioned and lubricated.

- Hold the chainsaw firmly. For optimal control, use two hands when possible, especially for larger branches.
- Place the moving chain against the branch and allow the saw to cut through the wood without excessive force.
- Avoid cutting directly into the ground or hitting hard objects, as this can damage the chain and bar.



Image: The 8-inch cutting capacity of the chainsaw is demonstrated by cutting through a 6-inch diameter log.

6. MAINTENANCE

6.1 Cleaning

After each use, remove the battery and clean the chainsaw. Use a brush to remove sawdust and debris from the chain, guide bar, and motor vents. Ensure the oiler nozzle is clear.

6.2 Chain Sharpening

Regularly check the sharpness of the chain. Use the provided files to sharpen the cutting teeth as needed. A sharp chain ensures efficient cutting and reduces strain on the motor.

6.3 Storage

Store the chainsaw in its carrying case in a dry, secure location, away from children and moisture. Ensure the battery is removed before storage.

7. TROUBLESHOOTING

- **Chainsaw not starting:** Ensure the battery is fully charged and properly inserted. Confirm the child-safety button and trigger are pressed simultaneously.
- **Poor cutting performance:** Check chain tension and adjust if too loose or too tight. Ensure the chain is sharp and properly lubricated.
- **Excessive vibration:** This may indicate improper chain tension or a damaged chain. Inspect and adjust as necessary.
- **Oil not dispensing:** Check the oil reservoir level and ensure the oiler nozzle is not clogged.

8. SPECIFICATIONS

Specification	Detail
Brand	Seesii
Model Number	M8 Boost
Item Weight	8.38 pounds
Product Dimensions	16.54 x 12.99 x 3.94 inches
Batteries	2 x 12V 4000mAh Lithium Ion (included)
Power Source	Battery Powered
Wattage	1000 watts
Horsepower	1000 Watts
Chain Length	8 Inches
Motor Type	Brushless

9. WARRANTY AND SUPPORT

The SEESII M8 Boost Mini Chainsaw comes with a 3-Year Warranty covering the chainsaw, battery, and charger.



Image: A promotional image highlighting the 3-Year Warranty offered for the chainsaw, battery, and charger. For any support inquiries, please refer to the contact information provided in your instruction manual or visit the official Seesii website.