



[Manuals.plus](#) /

> [GEKVIVE](#) /

> GEKVIVE RF Remote Control Page Turner (Model RCPT06) User Manual

GEKVIVE RCPT06

GEKVIVE RF Remote Control Page Turner User Manual

MODEL: RCPT06

Introduction

The GEKVIVE RF Remote Control Page Turner is designed to enhance your reading and media experience by providing hands-free control over compatible devices. This device allows you to turn pages on e-readers and tablets, and remotely trigger your smartphone camera for photos and videos. This manual provides detailed instructions for setup, operation, maintenance, and troubleshooting.

Package Contents

Please verify that all items are present in your package:

- 1 x Screen Sensor Clip
- 1 x RF Remote Control
- 1 x Type-C Charging Cable
- 1 x User Manual

Excellent compatibility



Compatible with the following devices:



Newer kindle Models



Kindle Paperwhite



Kindle 10/11



Kindle Oasis




Kindle Kids Edition



Kindle scribe



Kindle Voyage

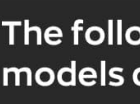

The following models are not:



Older Kindles



Kindle 7/8



Amazon Fire HD 10 (10th/11th generation)



Image: The package includes the screen sensor clip, RF remote, and a Type-C charging cable. This image also illustrates device compatibility.

Setup Guide

1. Charging the Device

Before first use, fully charge both the screen sensor clip and the RF remote control using the provided USB-C cable. The remote features an LCD power display to indicate the battery status, ensuring you are aware of the remaining charge.

Ultra-Long Battery Life



30-60
days use time




2 Hours charging time



LCD power display



MUTE BUTTON DESIGN

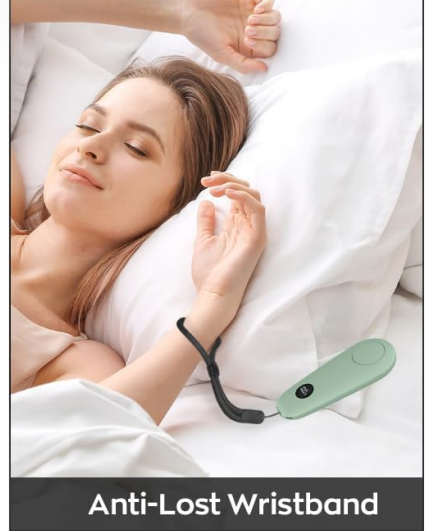

Anti-Lost Wristband

Image: The remote control features an LCD power display for battery status. The image also highlights the mute button design and the anti-lost wristband.

2. Pairing the Remote and Clip

The remote and clip operate without Bluetooth or Wi-Fi. Follow these steps to pair them:

1. First, press and hold the button on the back of the screen sensor clip for 3 seconds. A red light will illuminate.
2. Next, press any key on the RF remote control.
3. The blue light on the screen sensor clip will blink, indicating a successful match.

Easy to use

 Not supported Bluetooth and WiFi

Step 1

First press and hold the clip button for 3 seconds and the red light will come on




Step 2

Press any key on the remote control



Step 3

The blue light of the clip blinks and the match is successful

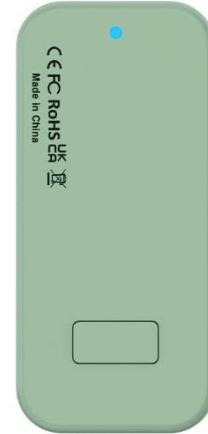

NOTE

This page turner clip can be used for devices with a thickness less than 0.54 in or 13.5mm

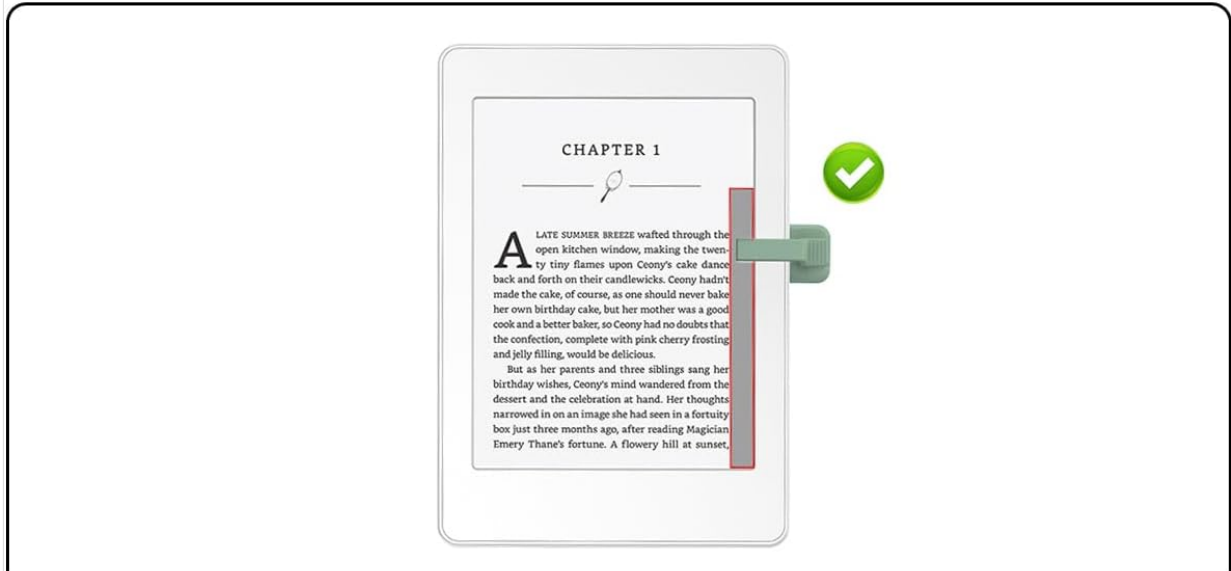


Image: A visual guide demonstrating the three steps to pair the remote control with the screen sensor clip.


3. Attaching the Clip to Your Device

Carefully attach the screen sensor clip to the edge of your e-reader or tablet. Ensure the clip is positioned so that its sensor can interact with the screen for page turning. The clip is designed for devices with a thickness less than 0.54 inches (13.5mm).

How to Install Clips



Correctly Installed Clip

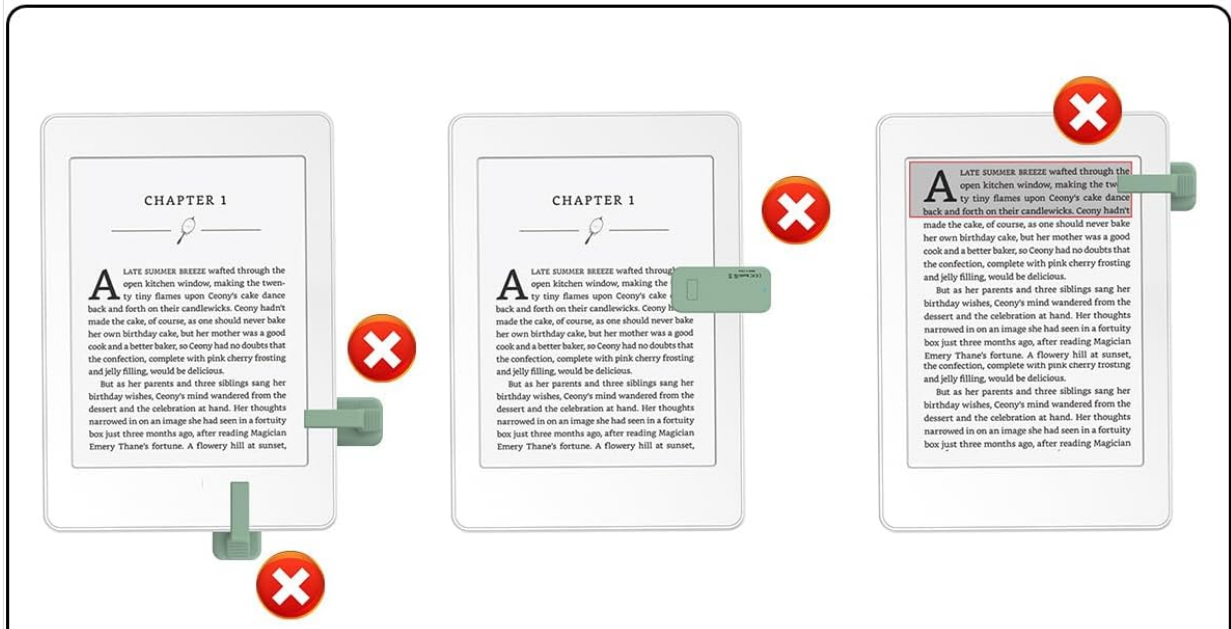

Incorrectly Installed Clip

Image: This diagram illustrates the correct placement of the clip to avoid obstructing text and ensures proper function, along with examples of incorrect placements.

PAGE TURNER FOR KINDLE



Image: A user demonstrating the page turner in use with a Kindle, highlighting the hands-free reading experience.

Operating Instructions

1. Page Turning Function

Once the clip is attached and paired, simply press the button on the RF remote control to turn pages forward. This allows for comfortable, hands-free reading, especially when relaxing or in bed. Note that the device supports only forward page turns.

Liberates your **hands-Enjoy** a more comfortable reading experience

Distance reading helps protect the eyes and cervical spine



Image: This image shows a user enjoying a comfortable reading experience with the page turner, emphasizing the benefit of not having to hold the device.

2. Remote Camera/Video Control

The RF remote control can also function as a remote shutter for your smartphone camera. Pair it with your phone to take photos, selfies, or start/stop video recordings from a distance, offering flexibility for group photos or outdoor adventures.



Image: The remote control is shown in use for taking photos and recording videos with a smartphone, demonstrating its versatility beyond page turning.

Compatibility

The GEKVIVE RF Remote Control Page Turner is compatible with a wide range of capacitive screen devices:

- Kindle Paperwhite, Scribe, Oasis (except 8th Generation), Kindle Colorsoft, Newer Kindle Models, Kindle 10/11, Kindle Voyage, Kindle Kids Edition
- iPad, iPhone, Android Tablets

The following models are **not** compatible:

- Older Kindles, Kindle 7/8
- Amazon Fire HD 10 (10th/11th generation)

Excellent compatibility

|  Compatible with the following devices: | | |  The following models are not: |
|--|--|--|--|
|  Newer kindle Models |  Kindle Paperwhite |  kindle 10/11 |  Older kindles |
|  Kindle Oasis |  Kindle Kids Edition |  Kindle scribe |  kindle 7/8 |
|  Kindle Voyage |  | |  Amazon Fire HD 10 (10th/11th generation) |



Image: A detailed chart outlining compatible and incompatible e-readers and tablets for the page turner.

Maintenance

1. Battery Management

To ensure optimal performance and longevity, charge the device when the LCD display indicates low battery. Avoid fully depleting the battery regularly. The device offers 30-60 days of use time on a single charge, with a charging time of approximately 2 hours.

2. Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive materials, as these may damage the surface or internal components. Keep the device away from water and excessive moisture.

Troubleshooting

1. Text Blocked by Clip

If the screen sensor clip obstructs text on your e-reader, adjust the page margins within your device's settings. Most e-readers allow customization of font and layout to prevent interference.

Ultra-Long Battery Life



30-60
days use time



2 Hours charging time



Image: This image provides a step-by-step visual guide on how to adjust font settings and page margins on an e-reader to ensure the clip does not block any text.

2. Device Not Responding

- Ensure both the remote and clip are sufficiently charged.
- Re-attempt the pairing process as described in the 'Setup Guide'.
- Verify that the clip is correctly positioned on the screen and not loose.

Product Specifications

| | |
|--|---|
| Model Number | RCPT06 |
| Item Weight | 3.52 ounces |
| Package Dimensions | 4.09 x 3.62 x 1.46 inches |
| Batteries | 2 Lithium Polymer batteries (included) |
| Max Number of Supported Devices | 1 |
| Manufacturer | Shenzhen Huazhichuangxing Technology Co., LTD |

Warranty and Support

GEKVIVE provides a 12-month warranty for the RF Remote Control Page Turner. For any issues or assistance, our 24/7 support team is available to help. Please refer to the product packaging or the official GEKVIVE website for contact information.