

[Manuals.plus](#) /

> [Doli Yearning](#) /

> Doli Yearning Visual Timer for Kids, 99 Minute Cute Owl Digital Countdown Timer Instruction Manual

## Doli Yearning DY-Timer-01

# Doli Yearning Visual Timer for Kids (Model: DY-Timer-01) Instruction Manual

Your guide to effective time management with the Cute Owl Digital Countdown Timer.

## 1. INTRODUCTION

The Doli Yearning Visual Timer is designed to make time management engaging and intuitive for both children and adults. Its adorable owl shape and clear digital display, featuring a disappearing sunflower graphic, help foster better time awareness. This timer is ideal for various settings, including home, school, and office, promoting focus and independent task completion.



Image 1.1: The Doli Yearning Visual Timer in use, highlighting its visual countdown.

## 2. PRODUCT OVERVIEW

The Doli Yearning Visual Timer combines a minimalist owl design with practical features for effective time tracking. Key components include an LED display, a multi-function knob for time and volume adjustment, and a visual timing indicator.



Image 2.1: Detailed view of the timer's features, including the knob for adjustments and the LED display.

### 3. SETUP

1. **Battery Installation:** The timer requires 2 standard AA batteries (not included). Open the battery compartment cover on the back of the device and insert the batteries, ensuring correct polarity.
2. **Power On/Off:** Press and hold the main knob on top of the timer for 3 seconds to power the device on or off.



Image 3.1: Step-by-step guide for initial setup and operation.

### 4. OPERATING INSTRUCTIONS

1. **Setting the Timer:** Once powered on, tap the main knob to switch between minutes and seconds display. Rotate the knob to adjust the desired countdown time. The timer supports up to 99 minutes.
2. **Starting/Pausing the Timer:** After setting the time, press the main knob once to start the countdown. The sunflower graphic will visually disappear counterclockwise. Press the knob again to pause the timer. Pressing it a third time will resume the countdown.
3. **Adjusting Alarm Volume:** When the alarm sounds, rotate the main knob to increase or decrease the volume. This allows for personalized comfort in various environments.
4. **Silent Operation:** The timer operates silently during the countdown, making it suitable for sound-sensitive environments.

## 5. FEATURES

---

- **Minimalist Owl Design with Visual Timer:** Features an adorable owl-shaped body and clear digital display. The intuitive sunflower graphic disappears counterclockwise, making time management engaging for both kids and adults.
- **Teacher-Approved One-Touch Simplicity:** Power on/off with a 3-second hold. All functions work through one button: tap to switch minutes/seconds, rotate to adjust time.
- **Silent Operation + Adjustable Alerts:** Zero ticking sounds during operation, ideal for sound-sensitive environments. When alarms beep, rotate the dial to raise/lower volume for personalized comfort.
- **25-Hour Battery Life (AA x 2):** Runs on 2 standard AA batteries (not included) for up to 25 hours of continuous use. Easy battery replacement eliminates frequent power worries.
- **Multi-Scene Versatility:** A friendly time management companion perfect for kitchens, classrooms, yoga, cooking, parties, or as a gift.



Image 5.1: The timer's silent operation ensures a peaceful environment.



Image 5.2: The timer assists in establishing healthy habits like brushing teeth.

## 6. MAINTENANCE

---

- **Cleaning:** Wipe the timer with a soft, dry cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Replacement:** When the display dims or the timer functions become erratic, replace the two AA

batteries. Ensure correct polarity during installation.

- **Storage:** Store the timer in a cool, dry place away from direct sunlight and extreme temperatures when not in use for extended periods.

## 7. TROUBLESHOOTING

---

- **Timer not turning on:** Check if batteries are inserted correctly and are not depleted. Replace with fresh batteries if necessary.
- **Display is dim:** Replace batteries.
- **Alarm not sounding:** Check the volume setting. Ensure it is not set to silent.
- **Inaccurate timing:** Ensure the knob is rotated fully to the desired time before starting the countdown.

## 8. SPECIFICATIONS

---

<b>Brand</b>	Doli Yearning
<b>Model Number</b>	DY-Timer-01
<b>Color</b>	Green
<b>Material</b>	Plastic
<b>Product Dimensions</b>	2.36"D x 3.15"W x 4.25"H
<b>Item Weight</b>	3.84 ounces
<b>Power Source</b>	2 x AA Batteries (not included)
<b>Max Time Setting</b>	99 Minutes

## 9. WARRANTY AND SUPPORT

---

For warranty information or product support, please refer to the packaging or contact Doli Yearning customer service directly. Keep your purchase receipt for any warranty claims.