

[Manuals.plus](#) /

› [Briloner](#) /

› BRILONER Sticklights Wireless Wall Lamp with Motion Sensor - Model 3888015 User Manual

Briloner 3888015

BRILONER Sticklights Wireless Wall Lamp

Model: 3888015

1. INTRODUCTION

Thank you for choosing the BRILONER Sticklights Wireless Wall Lamp. This innovative LED lamp provides convenient, wire-free illumination with automatic motion and dusk-to-dawn detection. Designed for easy installation and long-lasting performance, it is ideal for various indoor spaces such as hallways, staircases, and living areas.

Please read this manual carefully before installation and use to ensure proper operation and to maximize the lifespan of your product.

2. SAFETY INSTRUCTIONS

- This product is designed for **indoor use only**. Do not expose to moisture or extreme temperatures.
- Do not attempt to disassemble or modify the lamp beyond battery replacement. This may void the warranty and pose a safety risk.
- Keep the lamp away from heat sources and direct sunlight.
- Use only the provided USB-C cable or a certified equivalent for charging.
- Ensure the mounting surface is clean, dry, and stable before installation.
- Dispose of batteries according to local regulations.

3. PACKAGE CONTENTS

Please check that all items are present in your package:

- BRILONER Sticklights Wireless Wall Lamp (Angular, Black)
- Magnetic Mounting Plate with 3M Adhesive Pad
- USB-C Charging Cable
- Mounting Hardware (screws and anchors for optional drilling)
- User Manual

4. SETUP AND INSTALLATION

The BRILONER Sticklights lamp offers two primary installation methods: magnetic/adhesive or screw mounting.

4.1 Magnetic and Adhesive Installation (Recommended for most surfaces)

1. **Choose Location:** Select a clean, dry, and smooth surface for installation. Ensure the desired area is free from dust, grease, or moisture.
2. **Prepare Surface:** Clean the chosen surface thoroughly.
3. **Attach Magnetic Plate:** Peel off the protective film from the 3M adhesive pad on the back of the magnetic mounting plate. Firmly press the plate onto the desired wall location for at least 30 seconds.
4. **Mount Lamp:** Once the adhesive has set (allow a few hours for maximum adhesion), align the lamp with the magnetic plate. The lamp will securely attach magnetically.



Figure 1: Magnetic and 3M adhesive installation method.

4.2 Screw Mounting (Optional)

For a more permanent installation or on uneven surfaces, you can use the included screws and anchors.

1. **Mark Holes:** Use the magnetic mounting plate as a template to mark the drilling points on the wall.
2. **Drill Holes:** Drill appropriate holes for the anchors.
3. **Insert Anchors:** Insert the wall anchors into the drilled holes.
4. **Secure Plate:** Screw the magnetic mounting plate firmly to the wall using the provided screws.
5. **Mount Lamp:** Attach the lamp magnetically to the secured plate.

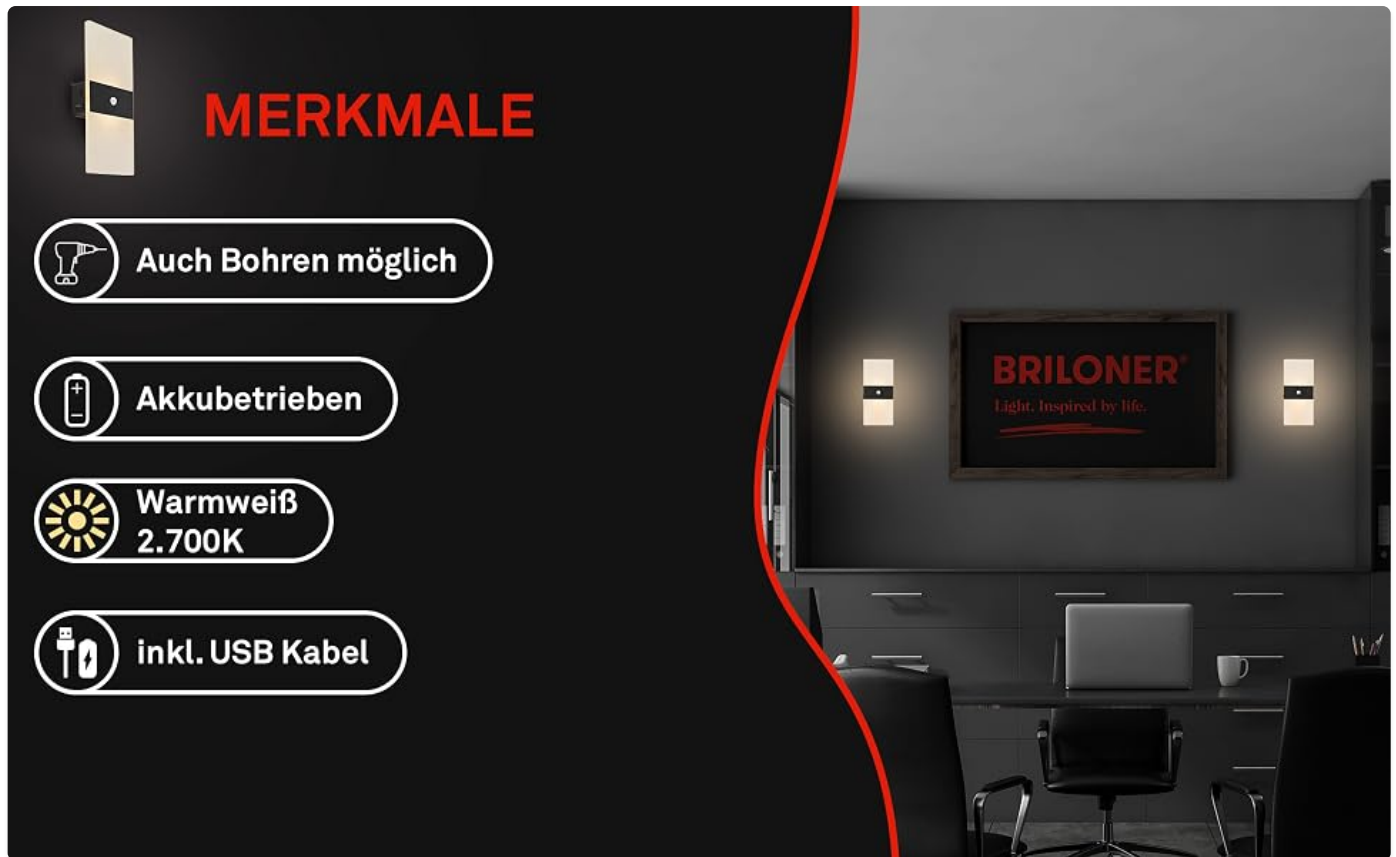


Figure 2: The lamp can also be installed using screws for a permanent fixture.

5. OPERATION

The BRILONER Sticklights lamp features a multi-function switch and intelligent sensors for automatic operation.

5.1 Operating Modes

Locate the switch on the side of the lamp. It has three positions:

- **ON (I):** The lamp will stay continuously on.
- **OFF (O):** The lamp will remain off.
- **AUTO (II):** The lamp will operate automatically using its motion and dusk-to-dawn sensors.



Figure 3: On/Off/Auto switch and USB-C charging port.

5.2 Motion Detection

In **AUTO** mode, the integrated motion detector will activate the light when movement is detected within its range. The sensor has a detection range of approximately **3 meters (10 feet)** and a detection angle of **120 degrees**.



Figure 4: Motion detector with a 3-meter sensor range.

5.3 Dusk-to-Dawn Sensor

Also in **AUTO** mode, the lamp features a dusk-to-dawn sensor. This sensor ensures the light only activates when the ambient light levels are low, conserving battery life during daylight hours.

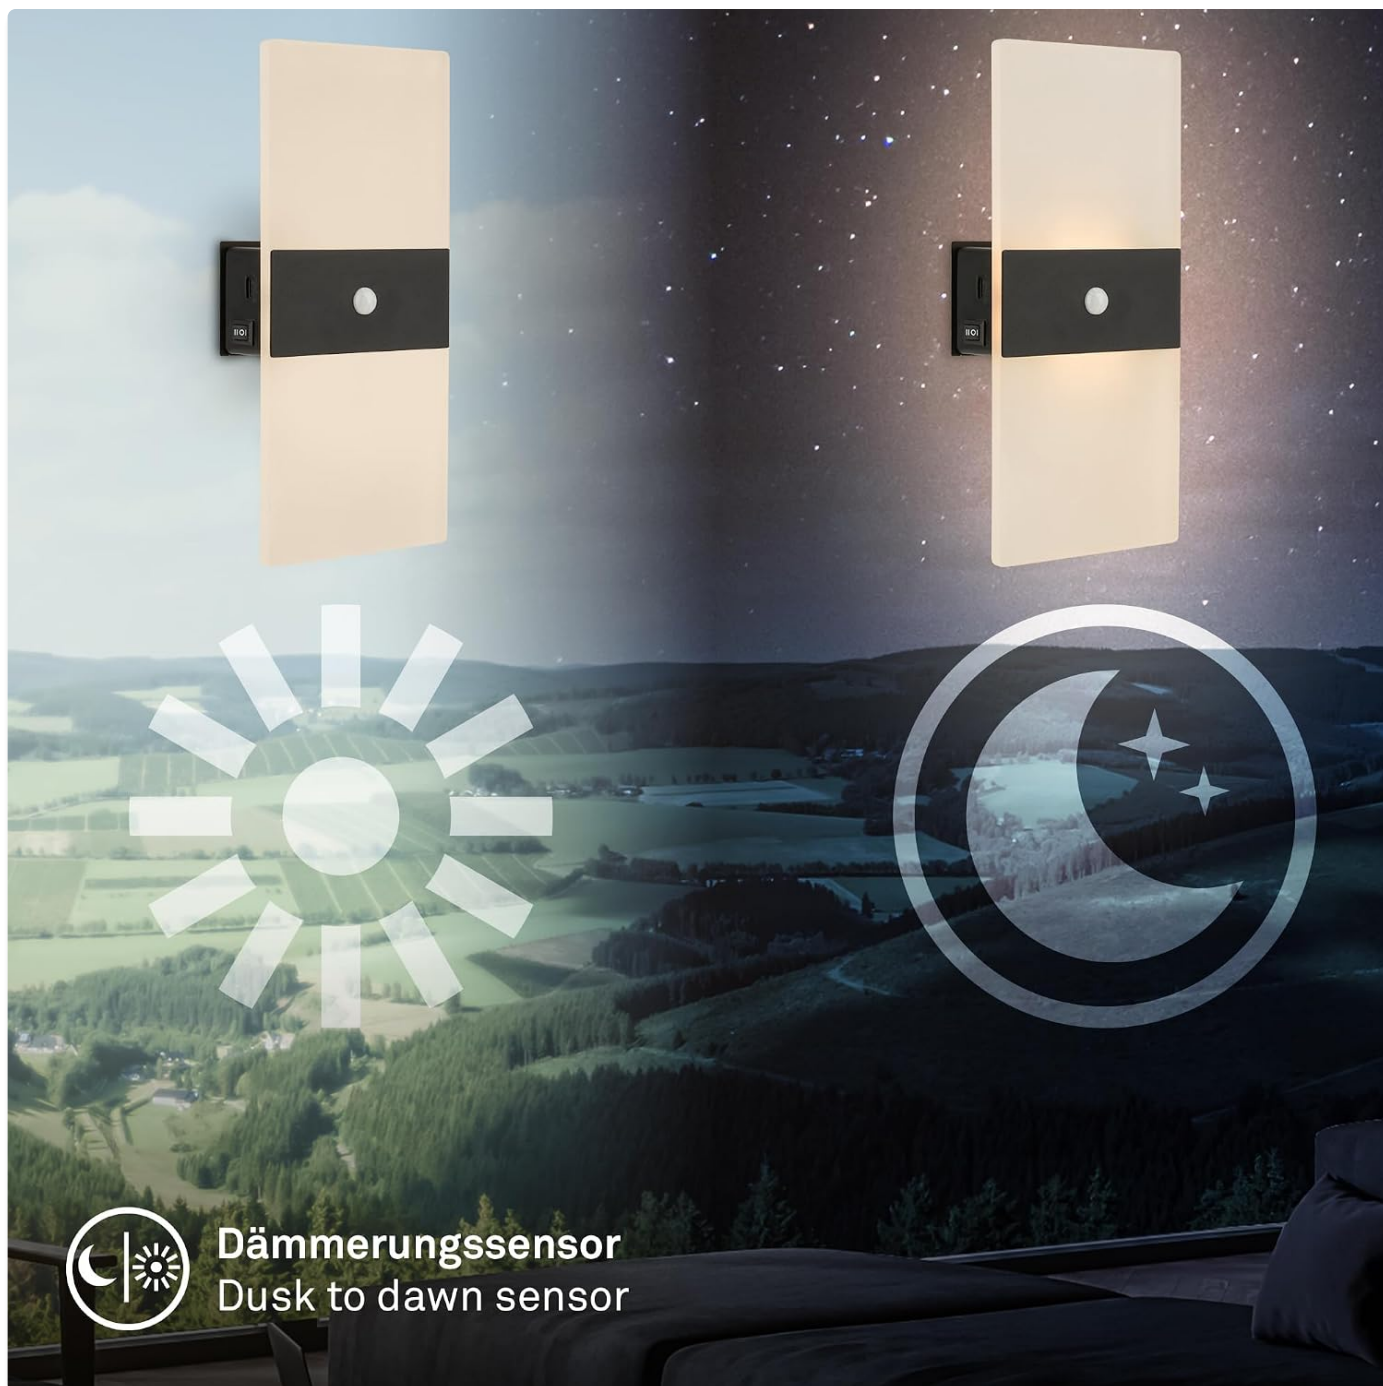


Figure 5: Dusk-to-dawn sensor operation.

6. BATTERY INFORMATION AND CHARGING

The BRILONER Sticklights lamp is powered by a rechargeable battery, offering convenience and portability.

6.1 Charging the Battery

The lamp is equipped with an **1800 mAh rechargeable battery**. When the battery is low, the light output may diminish. To charge:

1. Locate the USB-C charging port on the side of the lamp (next to the operating mode switch).
2. Connect the provided USB-C cable to the lamp's port.
3. Connect the other end of the USB-C cable to a suitable USB power source (e.g., a computer USB port, a USB wall adapter).
4. The charging indicator (if present) will show the charging status. Once fully charged, disconnect the cable.



Figure 6: USB-C charging port.

6.2 Battery Life and Replacement

A fully charged 1800 mAh battery provides approximately **400 detection cycles** before requiring a recharge. The battery is designed to be replaceable, extending the product's lifespan.

To replace the battery, carefully follow the instructions provided with the replacement battery or contact customer support for guidance.

7. MAINTENANCE

7.1 Cleaning

To clean the lamp, gently wipe it with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish or electronic components.

7.2 Battery Care

For optimal battery performance, avoid fully discharging the battery frequently. Recharge the lamp when the light output noticeably decreases. If storing the lamp for an extended period, charge it to about 50% capacity every few months.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Lamp does not turn on.	Battery is discharged. Lamp is in OFF mode. Insufficient darkness (in AUTO mode). No motion detected (in AUTO mode).	Charge the battery. Switch to ON (I) or AUTO (II) mode. Ensure ambient light is low enough for the dusk-to-dawn sensor. Move within the sensor's range (3m, 120°).
Light is dim or flickers.	Low battery.	Recharge the battery fully.
Motion sensor is not working.	Lamp is not in AUTO mode. Sensor is obstructed. Motion is outside detection range/angle.	Switch the lamp to AUTO (II) mode. Ensure the sensor lens is clean and unobstructed. Test within 3 meters and 120° angle.
Lamp falls off the wall.	Adhesive not properly applied or surface unsuitable. Magnetic plate not securely mounted.	Ensure surface is clean, dry, and smooth. Apply adhesive firmly. Consider screw mounting for added security.

9. SPECIFICATIONS

Feature	Detail
Model Number	3888015
Dimensions (L x W x H)	22 x 4 x 10 cm
Weight	342 grams
Power Source	Battery Powered
Battery Type	Rechargeable 1800 mAh Lithium-ion (integrated)
Charging Port	USB-C
Light Source	Integrated LED Module
Light Output	1W, 55 lumens
Color Temperature	2700K (Warm White)
Motion Sensor Range	Approx. 3 meters (10 feet)
Motion Sensor Angle	120 degrees

Feature	Detail
Additional Features	Dusk-to-dawn sensor, Magnetic/Adhesive mounting, Replaceable battery
Material	Metal
Color	Black
Indoor/Outdoor Use	Indoor
Room Type	Home Office, Bedroom, Kitchen, Living Room, Dining Room

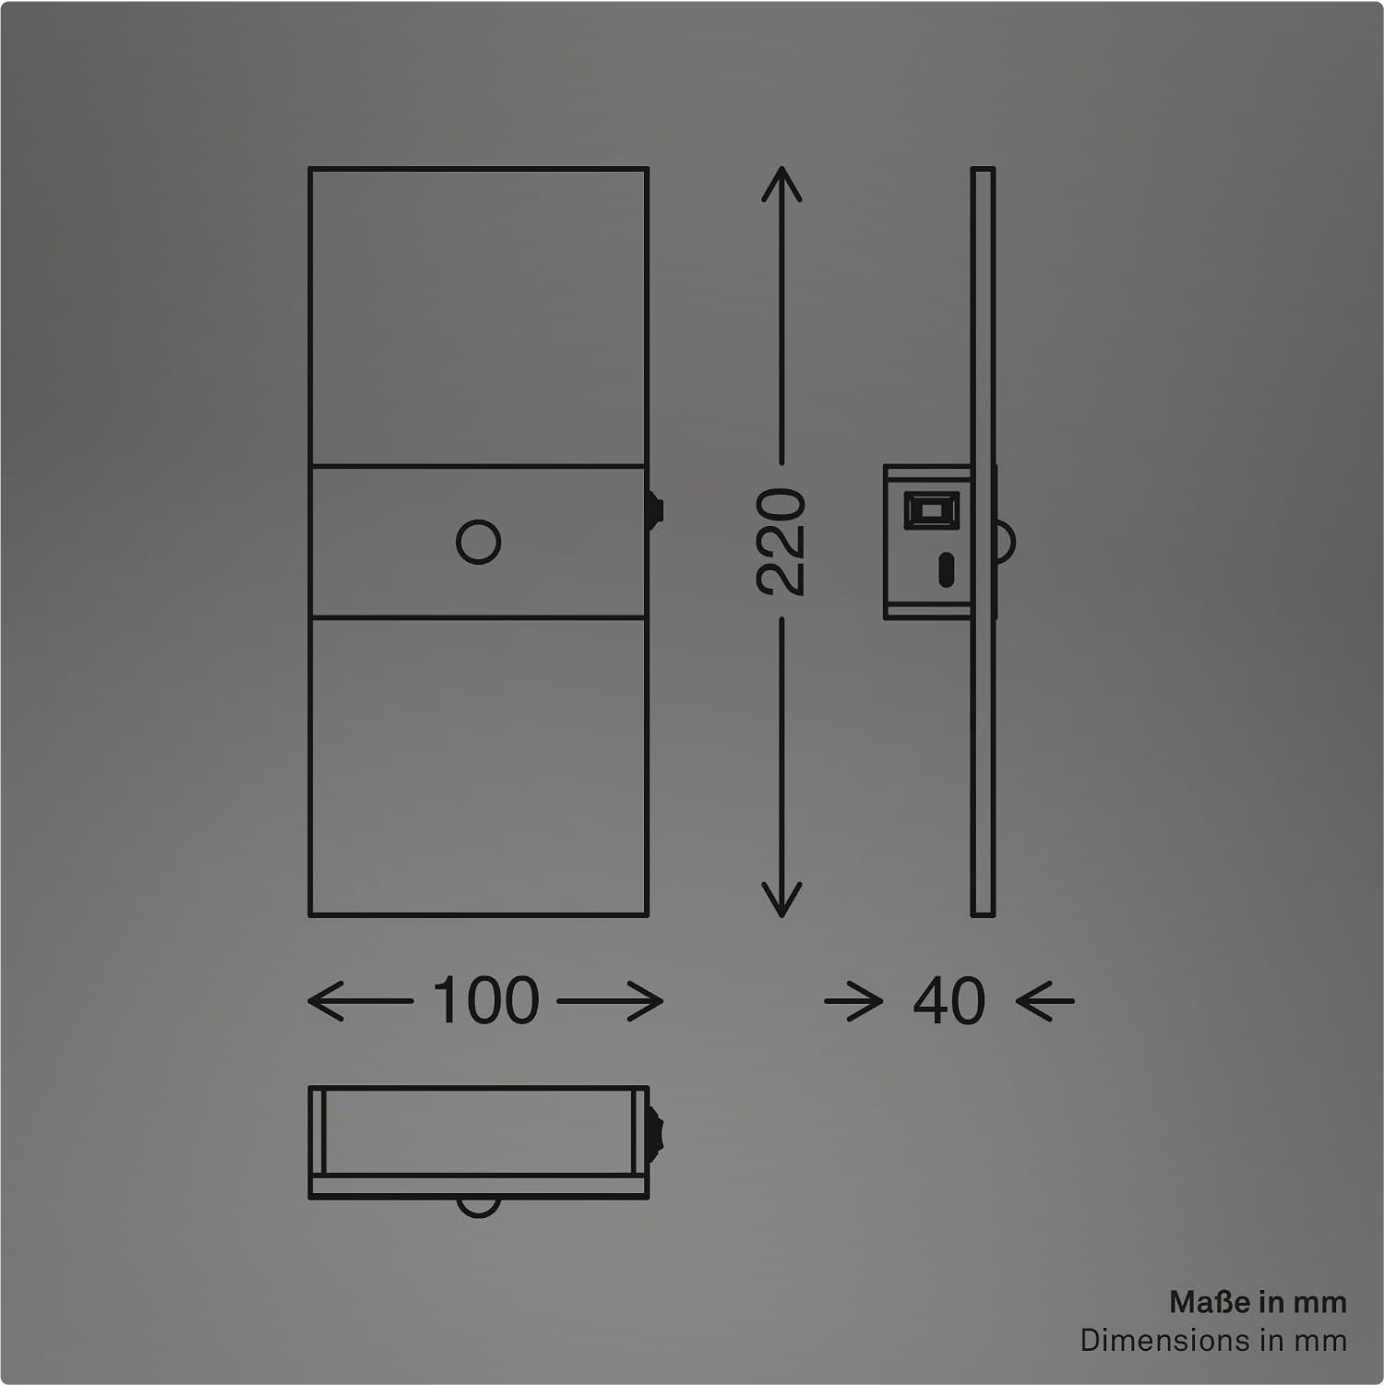 


Figure 7: Product dimensions in millimeters.

10. WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please refer to the warranty card included with your product or contact BRILONER customer service directly. Contact details can typically be found on the manufacturer's official website or on your purchase receipt.

© 2026 Briloner. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question