

[Manuals.plus](#) /

› [LOTEKOO](#) /

› Universal Remote Control for Roku TV Instruction Manual

LOTEKOO B0FJXD658P

LOTEKOO Universal Remote Control for Roku TV

Model: B0FJXD658P

1. PRODUCT OVERVIEW

The LOTEKOO Universal Remote Control is designed as a direct replacement for original Roku TV remotes, offering broad compatibility with various Roku TV brands. It provides essential TV controls and convenient shortcut buttons for popular streaming applications. This remote operates using infrared (IR) technology and requires no complex setup or pairing for most compatible Roku TV models.





Image: Front and side view of the LOTEKOO Universal Remote Control, showcasing its ergonomic design and button layout.

2. COMPATIBILITY

2.1 Compatible Devices

This universal remote is compatible with a wide range of Roku TV models from various manufacturers. It is designed to work seamlessly with the following brands of Roku Smart TVs:

- TCL Roku TV
- LG Roku TV
- Onn Roku TV
- JVC Roku TV
- RCA Roku TV
- Sharp Roku TV
- Haier Roku TV
- Sanyo Roku TV
- Element Roku TV
- Hitachi Roku TV

- Hisense Roku TV
- Philips Roku TV
- Insignia Roku TV
- Magnavox Roku TV
- Westinghouse Roku TV



Universal Remote for Roku TVs:

For TCL RokuTV
 For LG RokuTV
 For Onn RokuTV
 For JVC RokuTV
 For RCA RokuTV
 For Sharp RokuTV
 For Haier Roku TV
 For Sanyo RokuTV
 For Element RokuTV
 For Hitachi RokuTV
 For Hisense RokuTV
 For Philips RokuTV
 For Insignia RokuTV
 For Magnavox RokuTV
 For Westinghouse RokuTV

Image: The remote control displayed alongside a list of compatible Roku TV brands, indicating its broad applicability.

2.2 Incompatible Devices

This remote control is **NOT** compatible with the following Roku devices:

- Roku Stick
- Roku Streaming Stick
- Roku Ultra
- Roku Express

- Roku Express 4K+
- Roku Box 1/2/3/4
- Roku Premiere or Streaming Media Player

Important Note: This remote does **NOT** feature voice control functionality or a headphone jack.



Not Compatible with:

NOT for Roku Stick
 NOT for Roku Streaming Stick
 NOT for Roku Ultra
 NOT for Roku Express
 NOT for Roku Express 4K+
 NOT for Roku Box 1/2/3/4
 NOT for Roku Premiere
 NOT for Streaming MediaPlayer

Image: The remote control shown with various Roku streaming sticks and boxes marked with a red 'X', clearly indicating devices it is not compatible with.

3. SETUP AND INSTALLATION

3.1 Battery Installation

To begin using your LOTEKOO Universal Remote Control, you will need to install two (2) AAA batteries (not included). Follow these steps:

1. Locate the battery compartment cover on the back of the remote control.

2. Gently slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the indicators inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Image: A visual guide demonstrating the correct insertion of two AAA batteries into the remote control's battery compartment.

3.2 Initial Connection (No Setup Needed)

This remote is designed for immediate use with most compatible Roku TVs. Once batteries are installed, it should work

right out of the box without any programming or pairing required. Simply point the remote at your Roku TV and begin using it.

Easy To Use, No Setup Required



TV controls



Channel shortcuts



No setup required



Image: Illustrates the remote's ease of use, highlighting TV controls, channel shortcuts, and the 'no setup required' feature.

For some specific Roku TV models, particularly if you experience issues with initial responsiveness, a manual sync process might be beneficial. This typically involves pressing specific buttons simultaneously to establish a connection. For example, some users have found success by pressing the **Back** and **Home** buttons at the same time to initiate a sync.

Your browser does not support the video tag.

Video: A demonstration of the remote control, including its physical appearance and a brief overview of its functionality, which may include a sync process for certain Roku TV models.

4. OPERATING INSTRUCTIONS

4.1 Basic Functions

The remote provides all standard functions for navigating your Roku TV:

- **Power Button:** Turns the TV on or off.
- **Directional Pad (D-Pad) with OK Button:** Used for navigating menus and selecting items.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Returns to the Roku TV home screen.
- **Volume Up/Down:** Adjusts the TV volume.
- **Mute Button:** Mutes or unmutes the TV audio.

- **Play/Pause, Fast Forward, Rewind:** Controls media playback.

4.2 Shortcut Buttons

The remote features 8 dedicated shortcut buttons for quick access to popular streaming applications. Pressing any of these buttons will launch the corresponding application directly on your Roku TV:

- Netflix
- Prime Video
- Hulu
- Disney+
- YouTube
- Vudu
- Sling
- HBO NOW

5. CARE AND MAINTENANCE

To ensure the longevity and optimal performance of your remote control, follow these simple care guidelines:

- **Cleaning:** Wipe the remote with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or abrasive materials.
- **Battery Replacement:** Replace batteries promptly when the remote's responsiveness decreases. Always replace both batteries at the same time with new ones of the same type (AAA).
- **Storage:** Store the remote in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Drops:** While crafted from durable ABS plastic, repeated drops can damage internal components. Handle the remote with care.

6. TROUBLESHOOTING

If you encounter issues with your LOTEKOO Universal Remote Control, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Remote is not responding.	Dead or incorrectly inserted batteries. Obstruction between remote and TV. Remote out of range.	Check battery orientation and replace with fresh AAA batteries. Ensure clear line of sight to the TV's IR receiver. Move closer to the TV (within 30 feet).
Specific buttons are not working.	Dirt or debris under the button. Internal malfunction.	Clean around the button. If problem persists, the remote may be faulty.
Remote works intermittently.	Low battery power. Interference.	Replace batteries. Ensure no strong light sources (like direct sunlight) are interfering with the IR signal.
Remote does not control the TV after battery replacement.	Loss of connection (rare for IR remotes, but possible for some Roku TV models).	Try re-syncing the remote by simultaneously pressing the Back and Home buttons for a few seconds until the TV responds.

7. PRODUCT SPECIFICATIONS

Detailed specifications for the LOTEKOO Universal Remote Control:

Feature	Detail
Model Number	B0FJXD658P
Brand	LOTEKOO
Connectivity Technology	Infrared (IR)
Compatible Devices	Roku Televisions (various brands)
Power Source	2 x AAA Batteries (not included)
Material	High-Quality ABS Plastic and Silicone
Response Time	0.3 seconds
Transmitting Distance	Over 30 feet
Item Weight	1.76 ounces
Package Dimensions	5.51 x 1.61 x 0.83 inches





Image: The remote control displayed with its key dimensions (length, width, thickness) clearly marked for reference.

8. WARRANTY AND SUPPORT

Your LOTEKOO Universal Remote Control comes with a **24-month FREE warranty** from the date of purchase. This warranty covers manufacturing defects and ensures the quality and performance of your product.

For warranty claims, technical support, or any inquiries regarding your remote control, please contact LOTEKOO customer service through the retailer's platform where the product was purchased. Please have your purchase details and product model number (B0FJXD658P) ready when contacting support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question