

MIRO C69M Pro

MIRO C69M Pro 4G Android 15 Smartphone User Manual

Model: C69M Pro

1. INTRODUCTION

Welcome to your new MIRO C69M Pro 4G Android 15 smartphone. This manual provides essential information for setting up, operating, and maintaining your device. Please read this guide thoroughly to ensure optimal performance and longevity of your smartphone.

2. WHAT'S IN THE BOX

Upon opening your MIRO C69M Pro package, please verify that all the following items are included:

- MIRO C69M Pro Smartphone
- USB Cable
- Quick Start Guide (this document)

3. DEVICE OVERVIEW

Familiarize yourself with the physical components and layout of your MIRO C69M Pro smartphone.

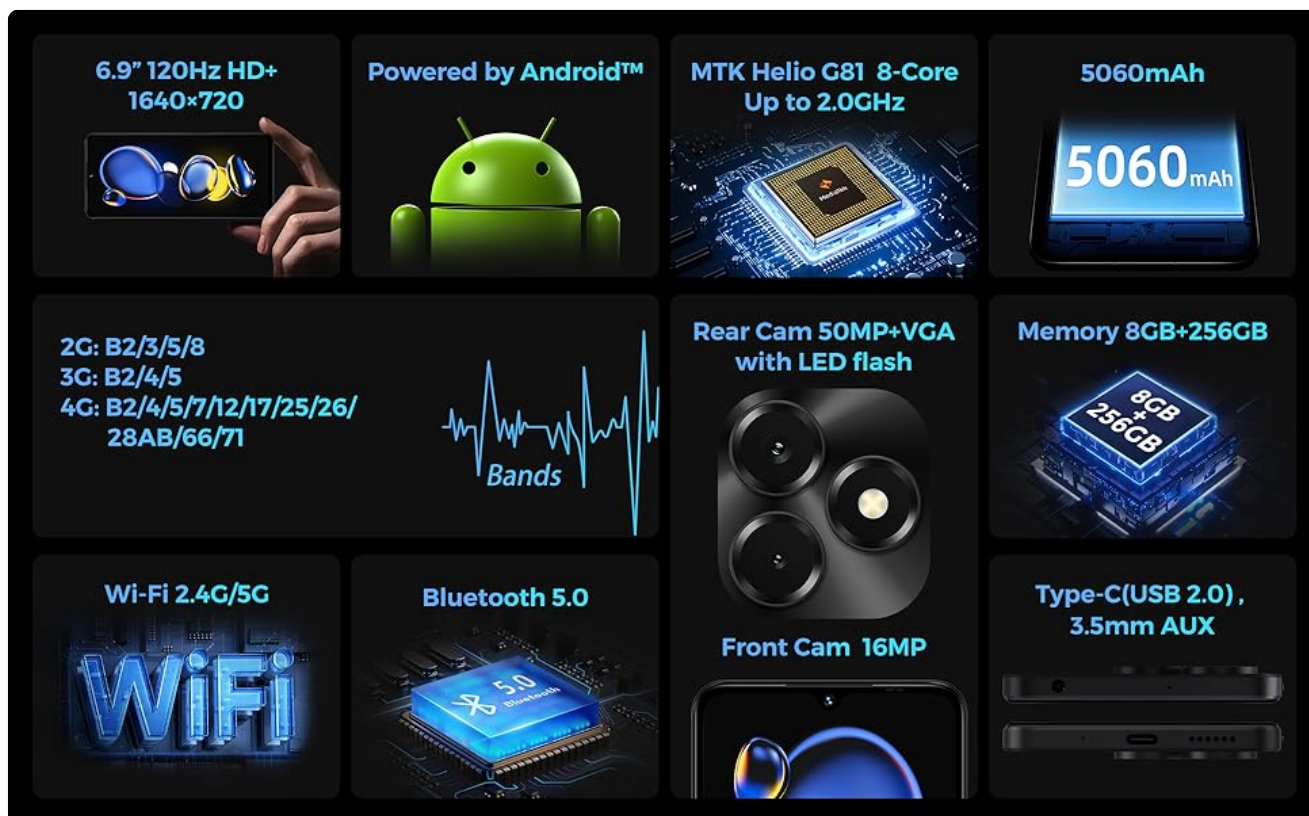


Image 3.1: Front and back view of the MIRO C69M Pro smartphone, highlighting the Android 15 operating system and 8GB RAM + 256GB storage configuration.

The MIRO C69M Pro features a 6.9-inch waterdrop display on the front, providing an expansive viewing area. The rear panel houses a multi-camera system with an LED flash. The device is designed with a slim profile and a lightweight feel for comfortable handling.



Image 3.2: The 6.9-inch 120Hz HD+ fluid screen of the MIRO C69M Pro, offering a resolution of 1640x720 pixels for smooth visuals.

4. SETUP

4.1 Inserting SIM Cards and SD Card

Your MIRO C69M Pro supports dual SIM cards and an expandable storage option. Locate the SIM tray on the side of the device. Use the provided SIM ejector tool to open the tray. Carefully place your Nano-SIM cards and/or microSD card into the designated slots, ensuring correct orientation. Reinsert the tray firmly into the phone.

4.2 Powering On/Off

- **To Power On:** Press and hold the Power button (usually on the right side) until the MIRO logo appears on the screen.
- **To Power Off:** Press and hold the Power button until the power options menu appears. Select 'Power off' and confirm.
- **To Restart:** From the power options menu, select 'Restart' and confirm.

4.3 Initial Setup Wizard

The first time you power on your device, you will be guided through an initial setup wizard. Follow the on-screen prompts to:

- Select your language.
- Connect to a Wi-Fi network.
- Sign in with your Google account or create a new one.
- Set up screen lock (PIN, pattern, password, fingerprint, or face unlock).
- Review and accept terms and conditions.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Touch:** Tap an icon to open an app or select an item.
- **Swipe:** Drag your finger across the screen to scroll through lists, switch between home screens, or view notifications.
- **Pinch:** Use two fingers to zoom in or out on photos and web pages.
- **Long Press:** Press and hold an item for more options or to move it.

5.2 Home Screen

The home screen is your central hub for accessing apps, widgets, and notifications. You can customize it by adding or removing app icons and widgets.

5.3 Notifications and Quick Settings

Swipe down from the top of the screen to access your notifications and quick settings panel. Here you can manage alerts, toggle Wi-Fi, Bluetooth, and other features.

6. CAMERA USAGE

Your MIRO C69M Pro is equipped with a powerful 50MP main camera and a 16MP front camera for capturing high-quality photos and videos.

5060mAh Powerful Battery × 20W PD Fast Charging

PD protocol 20W high-speed flash charging, 50% recovery in 30 minutes;
5060mAh rated capacity, can last a full day with heavy use, say goodbye to battery anxiety.



Image 6.1: Diagram illustrating the 50MP main camera system with LED flash and the 16MP front camera of the MIRO C69M Pro.

6.1 Taking Photos

1. Open the Camera app.
2. Select your desired mode (Photo, Portrait, Video, etc.).
3. Tap the shutter button to capture an image.
4. Use the on-screen controls to switch between the main 50MP rear camera and the 16MP front camera.

6.2 Recording Videos

1. In the Camera app, switch to Video mode.
2. Tap the record button to start recording.
3. Tap the record button again to stop recording.

7. CONNECTIVITY

The MIRO C69M Pro offers various connectivity options to keep you connected.

8.3mm Slim Body, 190g Light Feel

171×78mm golden ratio, available in three colors: Sandstone Black/Sandstone Titanium/Sandstone Blue, delicate matte anti-fingerprint; side fingerprint + AI face dual unlocking, 0.3 seconds fast response.



Image 7.1: The MIRO C69M Pro supports global 4G frequency bands, dual-band Wi-Fi (2.4G/5G), and Bluetooth 5.0 for stable and fast connectivity.

7.1 Wi-Fi

To connect to a Wi-Fi network:

1. Go to Settings > Network & internet > Wi-Fi.
2. Toggle Wi-Fi on.
3. Select your desired network from the list and enter the password if required.

7.2 Bluetooth

To pair with a Bluetooth device:

1. Go to Settings > Connected devices > Bluetooth.
2. Toggle Bluetooth on.
3. Ensure your Bluetooth device is in pairing mode.
4. Select the device from the 'Available devices' list and follow the pairing instructions.

7.3 Mobile Data (4G)

Ensure your SIM card is properly inserted and activated. To enable or disable mobile data, go to Settings > Network & internet > Mobile network and toggle 'Mobile data' on or off. The device supports various 4G LTE bands for global roaming.

8. BATTERY MANAGEMENT

Your MIRO C69M Pro is equipped with a 5160mAh battery, providing extended usage. It also supports 20W PD fast charging.



Image 8.1: The MIRO C69M Pro connected to a charger, illustrating its 5060mAh battery and 20W PD fast charging capability, which can achieve 50% charge in 30 minutes.

8.1 Charging the Battery

Connect the provided USB cable to the phone's Type-C port and the other end to a compatible 20W PD fast charger (not always included) or a standard USB power adapter. The battery indicator on the screen will show charging status. For optimal charging, use the original or certified charging accessories.

8.2 Battery Saving Tips

- Reduce screen brightness.
- Enable Battery Saver mode in Settings.
- Turn off Wi-Fi, Bluetooth, and GPS when not in use.
- Close unused apps running in the background.
- Limit background data usage for apps.

9. MAINTENANCE

9.1 Cleaning Your Device

Use a soft, lint-free cloth to gently wipe the screen and body of your phone. Avoid using harsh chemicals or abrasive materials, as they can damage the device's finish.

9.2 Software Updates

Regularly check for and install software updates to ensure your device has the latest features, security patches, and performance improvements. Go to Settings > System > System update to check for updates.

9.3 Storage Management

Your device comes with 256GB of internal storage. To manage storage, go to Settings > Storage. You can free up space by deleting unnecessary files, uninstalling unused apps, or moving media to a microSD card.

10. TROUBLESHOOTING

This section addresses common issues you might encounter with your MIRO C69M Pro.

10.1 Device Not Turning On

- Ensure the battery is charged. Connect the phone to a charger for at least 15 minutes before attempting to power on.
- Press and hold the Power button for 10-15 seconds to force a restart.

10.2 Network Connectivity Issues

- **Wi-Fi:** Ensure Wi-Fi is enabled and you have the correct password. Try restarting your router.
- **Mobile Data:** Check if mobile data is enabled in settings. Verify your SIM card is properly inserted and your plan is active.
- **No Signal:** Move to an area with better network coverage.

10.3 Apps Crashing or Freezing

- Close and reopen the app.
- Clear the app's cache and data (Settings > Apps > [App Name] > Storage > Clear cache/Clear data).
- Uninstall and reinstall the app.
- Ensure your phone's software is up to date.

10.4 Factory Reset (Last Resort)

If issues persist, a factory reset may resolve them. **Warning:** This will erase all data on your phone. Back up important data before proceeding. Go to Settings > System > Reset options > Erase all data (factory reset).

11. SPECIFICATIONS

Below are the key technical specifications for the MIRO C69M Pro smartphone:

6.9-inch 120Hz Fluid Screen, A New Level of Smoothness

1640×720 HD+ resolution, water drop screen for immersive viewing experience; 120Hz high refresh rate, zero lag in sliding/game operations, and completely eliminated screen tearing.








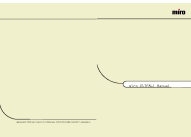
Image 11.1: Infographic summarizing key features of the MIRO C69M Pro, including screen size, processor, battery, cameras, and connectivity.

Feature	Detail
Model Name	MIRO C69M Pro
Operating System	Android 15
CPU Model	MediaTek Helio G81 Octa-core
CPU Speed	Up to 2 GHz
RAM	8 GB
Internal Storage	256 GB
Display Size	6.9 Inches
Resolution	720x1640 HD+
Refresh Rate	120 Hz
Rear Camera	50MP + VGA with LED flash
Front Camera	16MP
Battery Capacity	5160 mAh (Rated 5060 mAh)
Charging	20W PD Fast Charging
Connectivity	Wi-Fi (2.4G/5G), Bluetooth 5.0, 4G LTE (B2/3/5/8, B2/4/5, B2/4/5/7/12/17/25/26/28AB/66/71)
Form Factor	Bar
Dimensions	8.3mm Slim Body
Weight	190g
What's in the Box	USB Cable

12. WARRANTY AND SUPPORT

Your MIRO C69M Pro smartphone is covered by a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions, including warranty period and coverage details.

For technical support, troubleshooting assistance, or warranty claims, please contact MIRO customer service through the contact information provided on the official MIRO website or your purchase documentation. Ensure you have your product model number (C69M Pro) and proof of purchase ready when contacting support.

	<p><u>MIRO C69M Pro Smartphone User Guide</u></p> <p>This guide provides essential product safety information, setup instructions, and technical specifications for the MIRO C69M Pro Smartphone. Learn how to install SIM and microSD cards, navigate basic settings like display and language, and understand technical details including network bands and SAR information.</p>
	<p><u>MIRO A1 Smartphone User Guide and Specifications</u></p> <p>Comprehensive user guide and technical specifications for the MIRO A1 smartphone, covering safety information, setup, features, and regulatory compliance.</p>
	<p><u>MIRO A67 Smartphone User Manual and Technical Specifications</u></p> <p>Comprehensive guide for the MIRO A67 smartphone, covering safety information, setup, features, technical specifications, and FCC compliance. Learn how to install SIM cards, navigate settings, and understand device capabilities.</p>
	<p><u>MIRO C67 Smartphone User Manual and Specifications</u></p> <p>User manual and technical specifications for the MIRO C67 smartphone, covering safety information, device features, setup, and regulatory compliance.</p>
	<p><u>MIRO T1 TWS Bluetooth Headphones User Manual</u></p> <p>User manual for MIRO T1 True Wireless Stereo (TWS) Bluetooth headphones, covering packing list, operation, specifications, FAQs, precautions, and FCC statement.</p>
	<p><u>Miro P17F86i CRT Monitor User Manual</u></p> <p>Comprehensive user manual for the Miro P17F86i 17-inch CRT monitor, covering installation, operation, OSD controls, specifications, and troubleshooting.</p>