

[Manuals.plus](#) /

› [ASHATA](#) /

› ASHATA Compact Coffee Maker with Milk Frother Steam Wand, 20 Bar Semi Automatic Coffee Machine, 1.5L Water Tank Quick Preheat (US)

ASHATA ASHATApcg93u5rgo-11

ASHATA Compact Coffee Maker User Manual

Model: ASHATApcg93u5rgo-11

1. INTRODUCTION

Thank you for choosing the ASHATA Compact Coffee Maker. This semi-automatic espresso machine is designed to bring the rich, aromatic experience of café-quality coffee into your home or office. Featuring a 20-bar pressure system, a 1.5L water tank, and a milk frother steam wand, it allows you to prepare a variety of coffee beverages, including espresso, cappuccino, and latte, with ease.

Please read this manual thoroughly before operating the appliance to ensure safe and optimal performance. Keep this manual for future reference.

2. IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and/or injury to persons, including the following:

- Read all instructions before using the appliance.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or injury to persons.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

3. PACKAGE CONTENTS

Please check the package contents upon unboxing to ensure all items are present and undamaged:

- 1 x Compact Coffee Machine
- 1 x Handle (Portafilter)
- 1 x Powder Bowl (Filter Basket)
- 1 x Tamper (Coffee Scoop with Tamper)
- 1 x User Manual



Image: The ASHATA Compact Coffee Maker shown with its included accessories: portafilter, filter basket, and coffee scoop/tamper.

4. PRODUCT OVERVIEW & COMPONENTS

Familiarize yourself with the different parts of your ASHATA Compact Coffee Maker:



Image: Labeled diagram illustrating the main components of the ASHATA Compact Coffee Maker, including the water tank, steam knob, steam wand, control buttons, portafilter, drip tray, and cup shelf.

- **Water Tank:** Removable tank for water supply. Capacity: 1.5L.
- **Steam Knob:** Controls the steam function for frothing milk.
- **Steam Wand:** Used to froth milk for lattes and cappuccinos.
- **Control Buttons:** Includes buttons for One Cup Espresso, Two Cup Espresso, Power Switch, and Steam Switch.
- **Portafilter:** Holds the coffee grounds and filter basket.
- **One-cup Filter:** For single espresso shots.
- **Two-cup Filter:** For double espresso shots.
- **Cup Shelf:** Top surface for warming cups.
- **Drip Tray:** Collects excess liquid and spills. Removable for cleaning.
- **Spoon & Tamper:** Dual-purpose tool for scooping coffee and tamping grounds.

5. SPECIFICATIONS

Feature	Specification
Power	1050W
Water Tank Capacity	1.5L
Pressure	20 Bar
Product Dimensions	12.99 x 12.2 x 9.84 inches
Item Weight	8.1 pounds
Model Number	ASHATApcg93u5rgo-11
ASIN	B0FJXQJ466

Feature	Specification
Manufacturer	ASHATA

6. SETUP

6.1 Unpacking and Placement

1. Remove all packaging materials from the coffee maker and its accessories.
2. Place the coffee maker on a stable, flat, heat-resistant surface, away from water sources and heat. Ensure there is adequate space around the unit for ventilation.

6.2 Initial Cleaning

Before first use, clean all removable parts (water tank, portafilter, filter basket, drip tray) with warm water and a mild detergent. Rinse thoroughly and dry.

6.3 Filling the Water Tank

1. Remove the water tank from the back of the machine.
2. Fill the tank with fresh, cold water up to the MAX line. Do not use hot water or other liquids.
3. Place the water tank back into its position, ensuring it is seated correctly.

1.5L large capacity water tank
Reduce the hassle of repeatedly
adding water



Image: A close-up view of the coffee maker's transparent water tank, indicating its 1.5L capacity and ease of refilling.

6.4 First Use / Priming the Machine

To prime the pump and remove any air from the system, perform the following steps without coffee grounds:

1. Ensure the water tank is filled.
2. Plug the power cord into a grounded electrical outlet.
3. Press the Power Switch button to turn on the machine. The indicator lights will illuminate.
4. Place a large cup or container under the portafilter outlet.
5. Press the "Two Cup Espresso" button to run water through the system. Let it run until water flows out consistently.
6. Repeat this process for the steam wand: turn the Steam Knob to the steam position and let a small amount of steam/water purge. Turn the knob back to the off position.
7. The machine is now primed and ready for use.



Image: A top-down view of the coffee maker, highlighting the area where initial use instructions or tips might be found, emphasizing the importance of priming.

7. OPERATING INSTRUCTIONS

7.1 Preheating the Machine

For optimal espresso extraction, ensure the machine is fully preheated. This usually takes a few minutes after turning it on. The indicator light will typically change or stabilize when ready.

7.2 Making Espresso

1. **Prepare the Portafilter:** Insert the desired filter basket (one-cup or two-cup) into the portafilter.
2. **Add Coffee Grounds:** Fill the filter basket with finely ground espresso coffee. Use the included scoop for measurement.
3. **Tamp the Coffee:** Use the tamper end of the scoop to firmly press the coffee grounds evenly. Wipe any excess grounds from the rim of the portafilter.

4. **Attach Portafilter:** Align the portafilter with the group head on the machine and twist it firmly to the right until it is securely locked in place.
5. **Place Cup:** Place your espresso cup(s) on the drip tray directly under the portafilter spouts.
6. **Brew Espresso:** Press the "One Cup Espresso" or "Two Cup Espresso" button. The machine will begin brewing.
7. **Stop Brewing:** The machine will automatically stop brewing when the preset volume is reached. You can also manually stop it by pressing the button again.
8. **Remove Portafilter:** Once brewing is complete, carefully remove the portafilter by twisting it to the left. Be cautious as it may still be hot.



Image: The ASHATA coffee maker actively brewing espresso into a clear glass cup, showcasing the rich coffee stream.

7.3 Using the Milk Frother Steam Wand

The steam wand allows you to create rich, creamy milk foam for lattes and cappuccinos.

1. **Prepare Milk:** Fill a stainless steel frothing pitcher with cold milk (dairy or non-dairy) to just below the spout.
2. **Activate Steam:** Press the Steam Switch button. Wait for the steam indicator light to illuminate, indicating the

machine has reached steaming temperature.

3. **Purge Steam Wand:** Position an empty cup under the steam wand. Turn the Steam Knob briefly to release any condensed water, then turn it off.
4. **Froth Milk:** Immerse the tip of the steam wand just below the surface of the milk. Slowly turn the Steam Knob to release steam. Move the pitcher up and down slightly to incorporate air and create foam.
5. **Heat Milk:** Once desired foam is achieved, lower the wand deeper into the milk to heat it to the desired temperature (around 140-150°F / 60-65°C).
6. **Stop Steaming:** Turn the Steam Knob to the off position, then press the Steam Switch button to deactivate the steam function.
7. **Clean Wand:** Immediately wipe the steam wand with a damp cloth to remove any milk residue. Purge a small amount of steam again to clear the nozzle.



Image: A close-up view of the steam wand frothing milk in a pitcher, demonstrating the process of creating creamy foam for coffee beverages.

8. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will ensure the longevity and optimal performance of your coffee maker.

8.1 Daily Cleaning

- **Drip Tray:** Empty and rinse the drip tray daily or when the indicator floats up.
- **Portafilter and Filter Basket:** After each use, remove spent coffee grounds and rinse the portafilter and filter basket under warm water. Use a brush to remove any stubborn residue.
- **Steam Wand:** As mentioned in the operating instructions, wipe the steam wand immediately after each use with a damp cloth and purge steam to clear the nozzle.
- **Exterior:** Wipe the exterior of the machine with a soft, damp cloth. Do not use abrasive cleaners or scourers.

8.2 Descaling

Mineral deposits from water can build up in the machine over time, affecting performance. Descale your machine every 2-3 months, or more frequently if you have hard water.

1. Prepare a descaling solution according to the descaler manufacturer's instructions (or use a mixture of white vinegar and water, typically 1:1 ratio).
2. Fill the water tank with the descaling solution.
3. Place a large container under the portafilter and steam wand.
4. Run half of the solution through the portafilter by pressing the "Two Cup Espresso" button.
5. Turn the Steam Knob to release steam through the wand until half of the remaining solution is used.
6. Turn off the machine and let it sit for 15-20 minutes.
7. Run the remaining solution through both the portafilter and steam wand until the tank is empty.
8. Rinse the water tank thoroughly and fill it with fresh, clean water.
9. Run several full tanks of fresh water through the machine (both portafilter and steam wand) to rinse out any descaling solution residue.

9. TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No coffee dispenses	No water in tank; Machine not primed; Clogged filter/group head.	Fill water tank; Prime the machine; Clean filter basket and group head.
Coffee brews too slowly or not at all	Coffee grounds too fine or tamped too hard; Clogged filter/group head; Machine needs descaling.	Use coarser grind or lighter tamp; Clean filter/group head; Descale the machine.
Coffee brews too quickly / weak coffee	Coffee grounds too coarse or not enough coffee; Not tamped enough.	Use finer grind or more coffee; Tamp more firmly.

Problem	Possible Cause	Solution
No steam from wand	Steam function not activated; Wand clogged; Machine not hot enough.	Press Steam Switch and wait for light; Clean steam wand nozzle; Allow machine to preheat fully.
Water leaking from machine	Water tank not seated correctly; Drip tray full; Seal issue.	Ensure water tank is firmly in place; Empty drip tray; Contact support if issue persists.

10. WARRANTY AND SUPPORT

This ASHATA product is covered by a standard manufacturer's warranty against defects in materials and workmanship. Please refer to the warranty card included in your package for specific terms and conditions, including the warranty period and coverage details.

For technical support, troubleshooting assistance beyond this manual, or warranty claims, please contact ASHATA customer service through the retailer where you purchased the product or visit the official ASHATA store on Amazon: [ASHATA Store on Amazon](#).

Please have your product model number (ASHATApcg93u5rgo-11) and ASIN (B0FJXQJ466) ready when contacting support.

© 2023 ASHATA. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B0FJXQJ466>

More documents and user manuals: <https://manuals.plus/>